



WEEE report

COLOR MONITOR **Multi Sync EA241F**

MODELS: EA241F

1st Edition


NEC DISPLAY SOLUTIONS, LTD.

201812

DISASSEMBLY


- Before you disassemble the set, turn off power and pull out the power plug.
- Use the proper screwdriver. If oversize or undersize screwdriver is used, screws may be damaged.
- Assembly is reversed process of disassembly.
- Disassembly time: ≤ 15 minutes

1 Remove stand

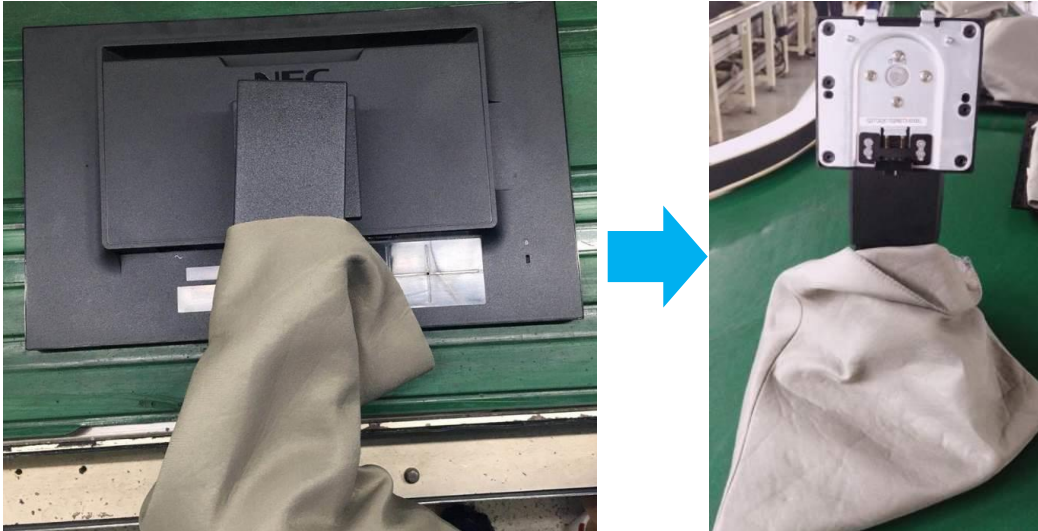


2 Remove the rear cover

- Unscrew the screw and break apart latch

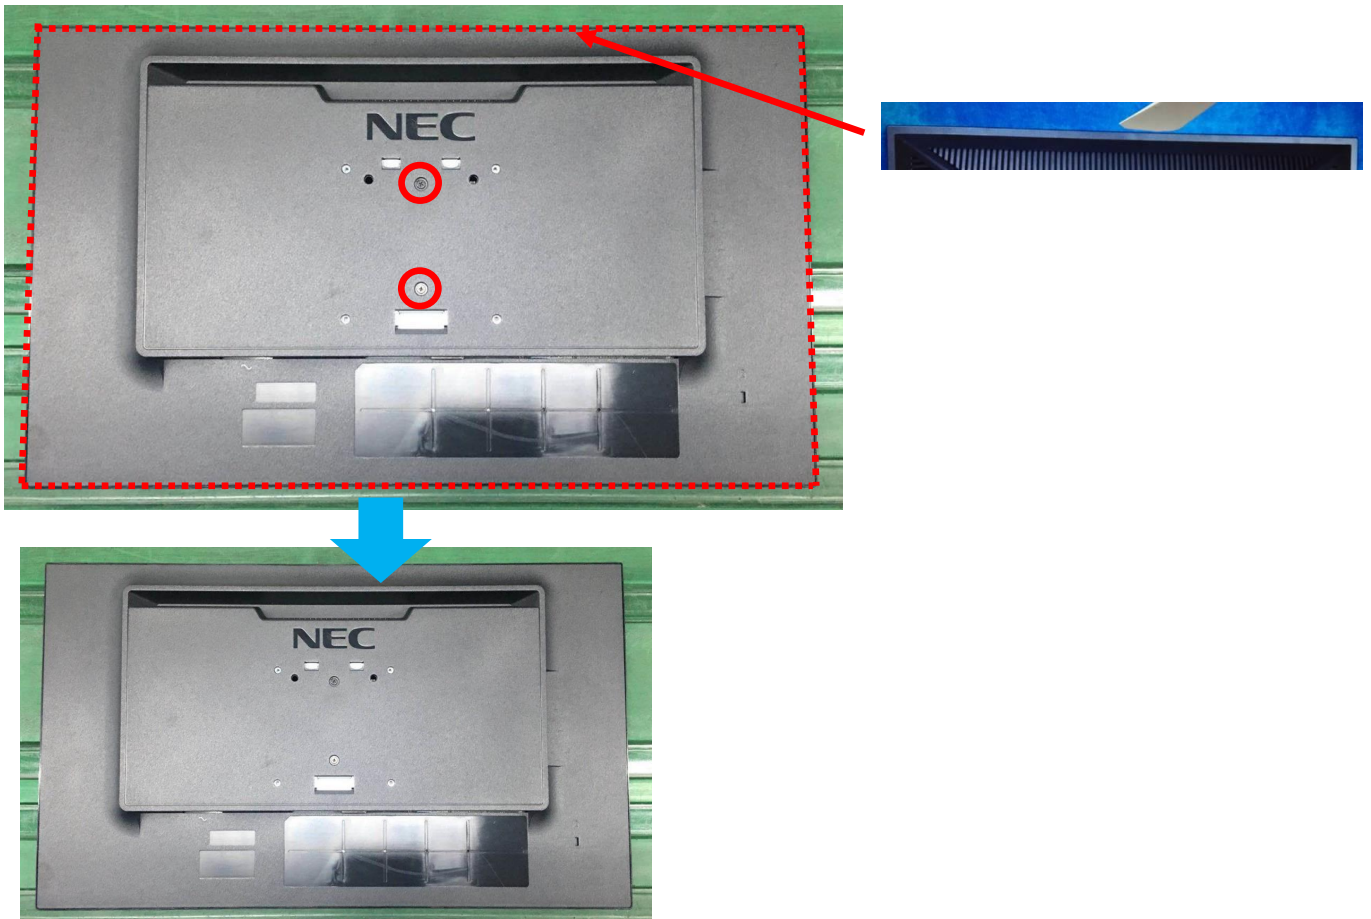


3 Remove the foils, wires and speakers


- Remove the foils

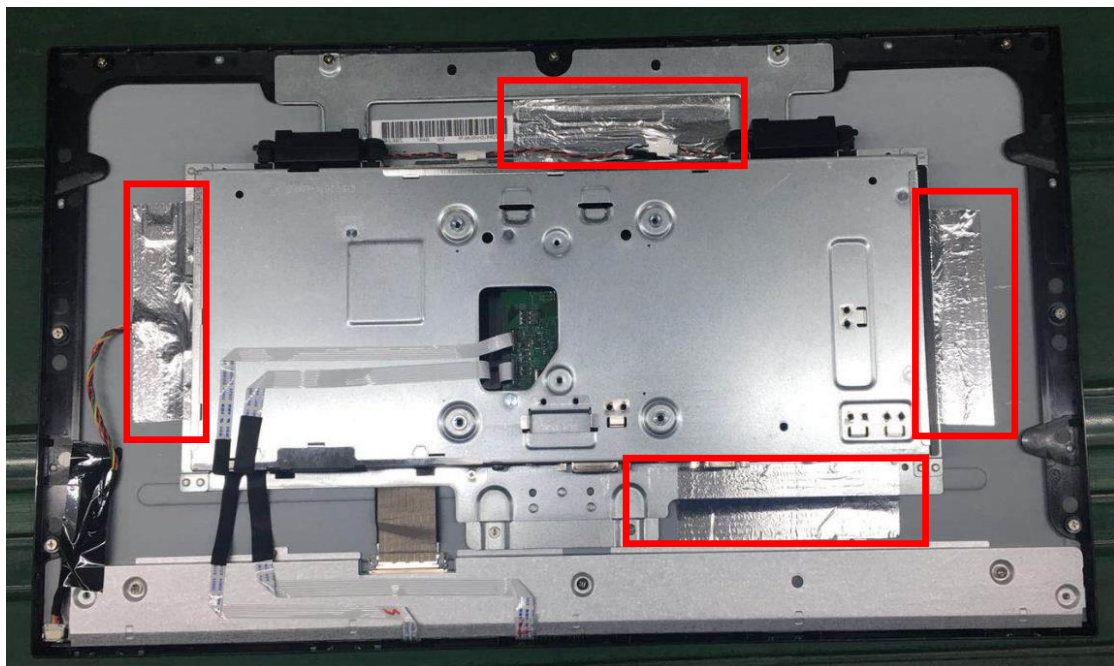

- Unlock the connector of wires

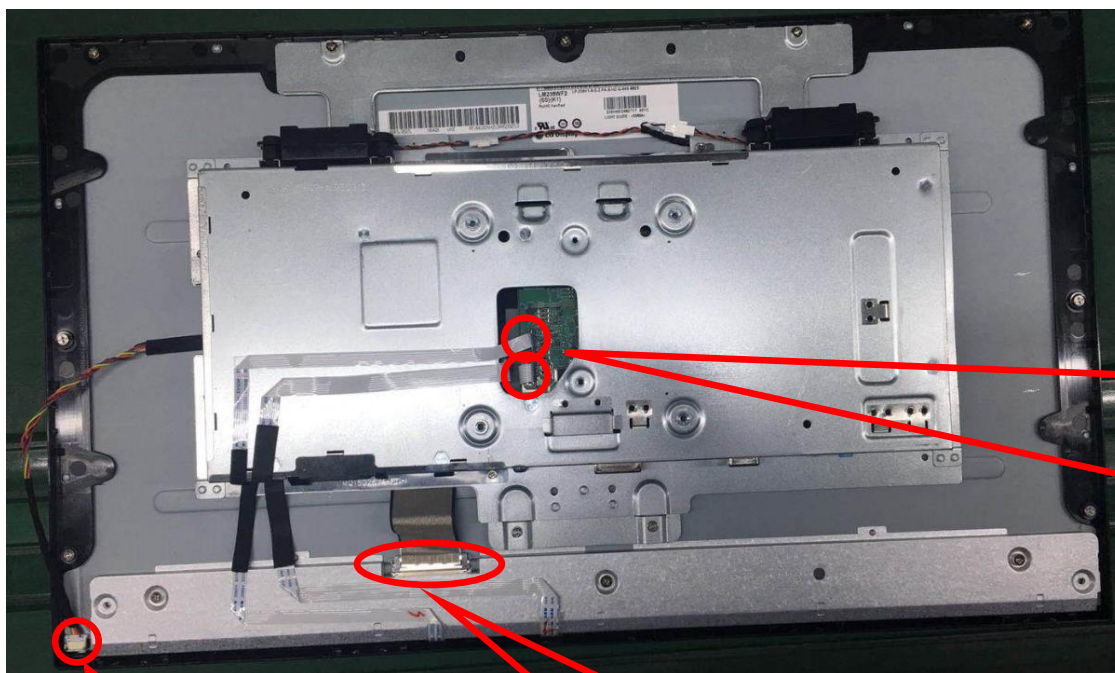


- Unlock the wires lock and unscrew the speakers and remove the speakers

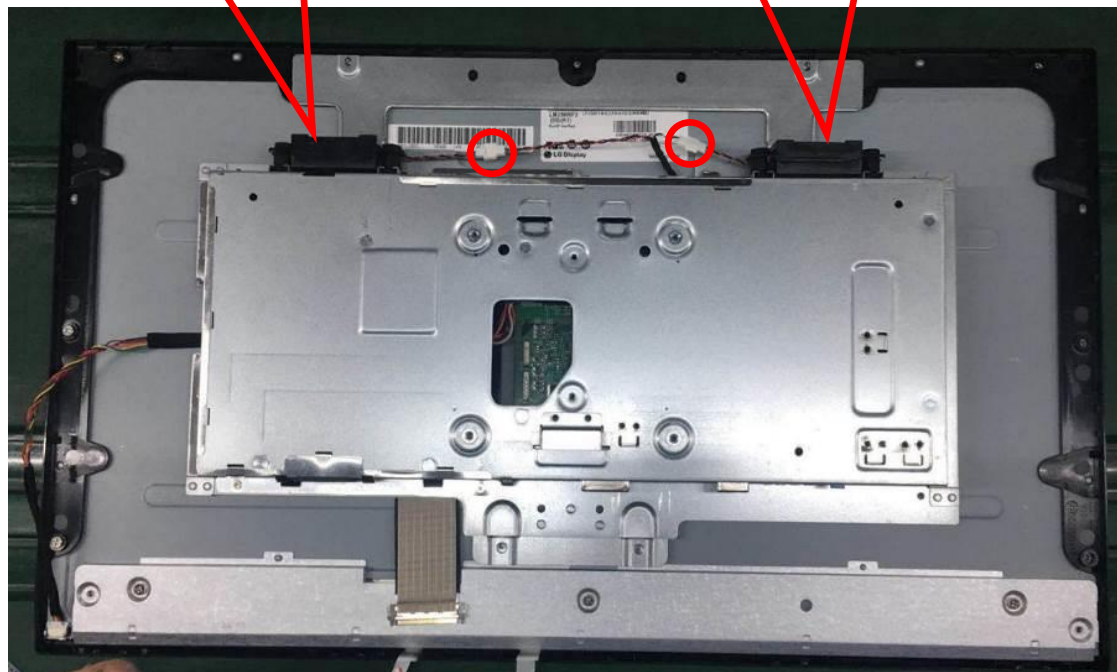


4 Remove the mid-frame, then remove the board

- Unscrew the screw marked below to remove the mid-frame

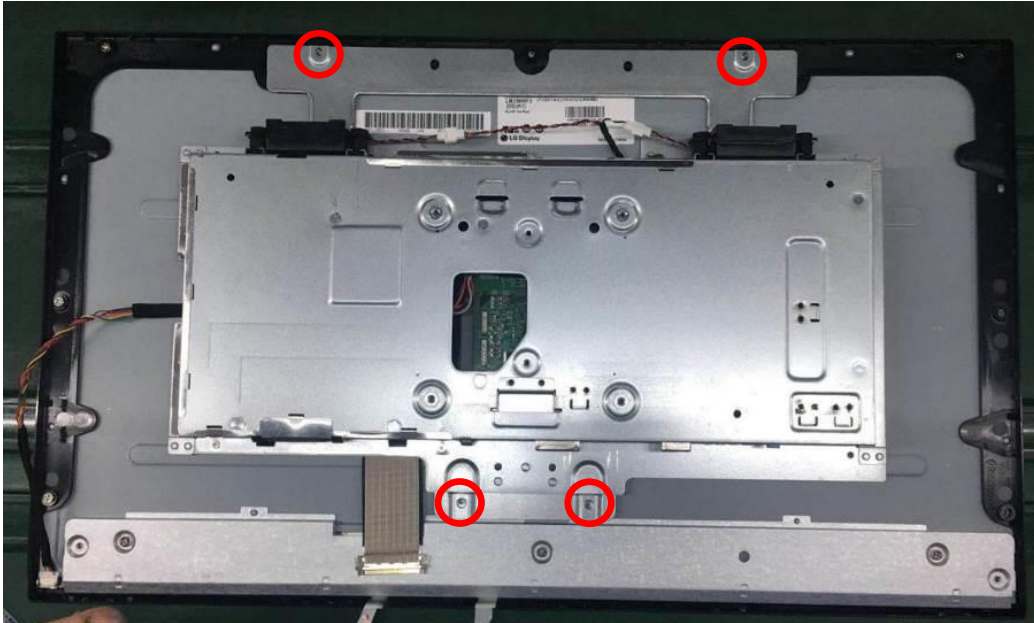

- Remove the Mylar, unscrew the screw marked below to remove the boards

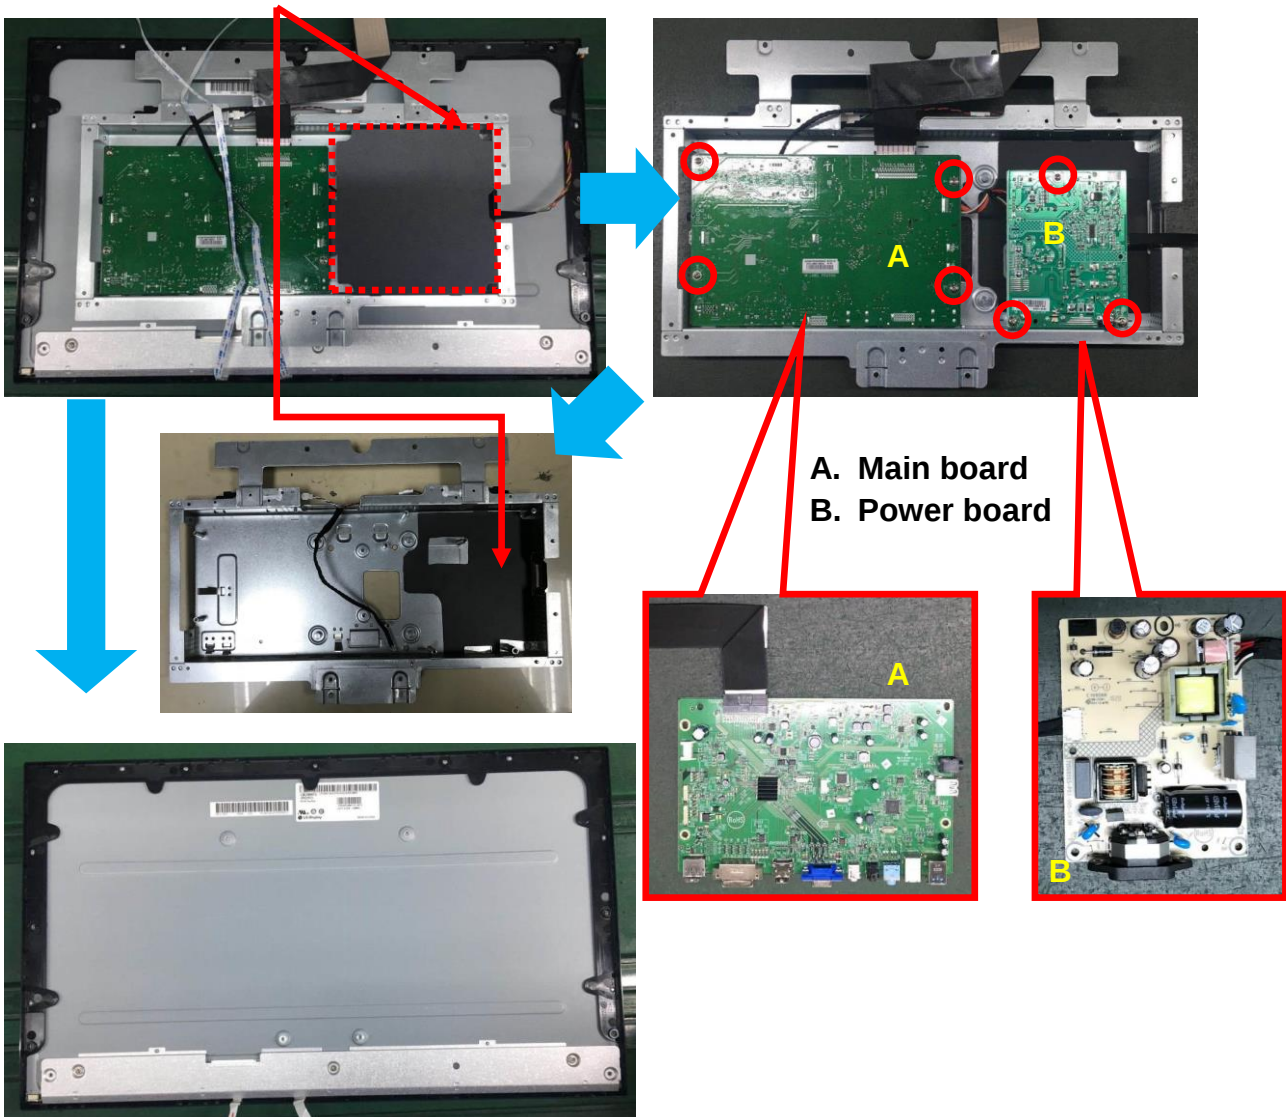


5 Remove bezel and panel

- Unscrew the screw marked below to remove the bezel



- Remove key board and light sensor board

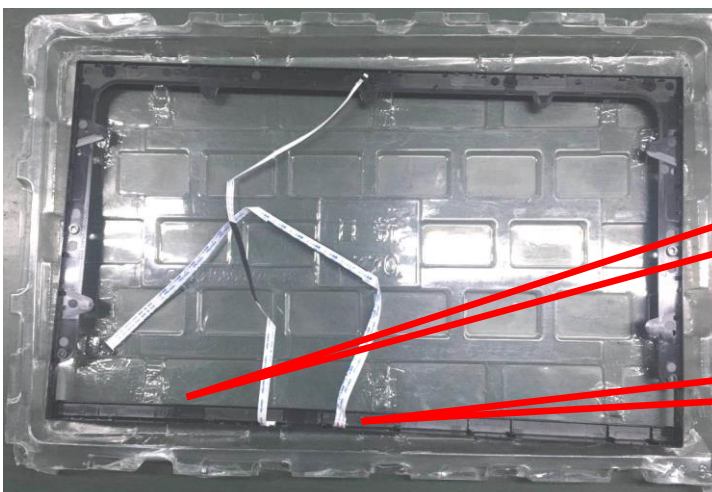

Special handling part:

Item	Part name	Quantity	WEEE Annex VII materials and components
A	Main board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²
B	Power board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²
C	Panel	1	Liquid crystal displays of a surface greater than 100cm ² and all those back-lighted with gas discharge lamps
D	Key board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²

Package

