

SHARP

PN-LB863

PN-LB753

PN-LB653

INTERACTIVE DISPLAY

OPERATION MANUAL

HDMI™

IMPORTANT:

To aid reporting in case of loss or theft, please record the product's model and serial numbers in the space provided. The numbers are located in the rear of the product.

Model No.:

Serial No.:

U.S.A. ONLY

FOR CUSTOMERS IN U.K.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

GREEN-AND-YELLOW:	Earth
BLUE:	Neutral
BROWN:	Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter **E** or by the safety earth $\perp$ or coloured green or green-and-yellow.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter **N** or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter **L** or coloured red.

Ensure that your equipment is connected correctly. If you are in any doubt consult a qualified electrician.

“WARNING: THIS APPARATUS MUST BE EARTHED.”

IMPORTANT INFORMATION

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN 	 The lightning flash with arrowhead symbol, within a triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.  The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	

WARNING:
FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user’s authority to operate this equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

U.S.A. ONLY

To maintain compliance with EMC regulations, use shielded cables to connect to the following terminals: HDMI input terminal, HDMI output terminal, RS-232C input terminal, USB Type-C port, TOUCH PANEL terminal, USB port and LAN terminal.

DEAR SHARP CUSTOMER

Thank you for your purchase of a SHARP LCD product. To ensure safety and many years of trouble-free operation of your product, please read the Safety Precautions carefully before using this product.

SAFETY PRECAUTIONS

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and/or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your LCD product, please read the following precautions carefully before using the product.

1. Read instructions — All operating instructions must be read and understood before the product is operated.
2. Keep this manual in a safe place — These safety and operating instructions must be kept in a safe place for future reference.
3. Observe warnings — All warnings on the product and in the instructions must be observed closely.
4. Follow instructions — All operating instructions must be followed.
5. Cleaning — Unplug the power cord from the power outlet before cleaning the product. Use a dry cloth to clean the product. Do not use liquid cleaners or aerosol cleaners. Do not use dirty cloths. Doing so may damage the product.
6. Attachments — Do not use attachments not recommended by the manufacturer. Use of inadequate attachments can result in accidents.
7. Water and moisture — Do not use the product near water. Do not install the product in a place where water may splash onto it. Be careful of equipment which drains water such as an air-conditioner.
8. Ventilation — The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a sofa, rug or other similar surface, since they can block ventilation openings. Do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.
9. Power cord protection — The power cords must be routed properly to prevent people from stepping on them or objects from resting on them.
10. The screen used in this product is made of glass. Therefore, it can break when the product is dropped or applied with impact. Be careful not to be injured by broken glass pieces in case the screen breaks.
11. Overloading — Do not overload power outlets or extension cords. Overloading can cause fire or electric shock.
12. Entering of objects and liquids — Never insert an object into the product through vents or openings. High voltage flows in the product, and inserting an object can cause electric shock and/or short internal parts. For the same reason, do not spill water or liquid on the product.
13. Servicing — Do not attempt to service the product yourself. Removing covers can expose you to high voltage and other dangerous conditions. Request a qualified service person to perform servicing.
14. Repair — If any of the following conditions occurs, unplug the power cord from the power outlet, and request a qualified service person to perform repairs.
 - a. When the power cord or plug is damaged.
 - b. When a liquid was spilled on the product or when objects have fallen into the product.
 - c. When the product has been exposed to rain or water.
 - d. When the product does not operate properly as described in the operating instructions.

Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician.
 - e. When the product has been dropped or damaged.
 - f. When the product displays an abnormal condition. Any noticeable abnormality in the product indicates that the product needs servicing.
15. Replacement parts — In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger.
16. Safety checks — Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.
17. Wall mounting — When mounting the product on a wall, be sure to install the product according to the method recommended by the manufacturer.
18. Heat sources — Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).

SAFETY PRECAUTIONS (Continued)

19. Batteries — Incorrect use of batteries may cause the batteries to burst or ignite. A leaky battery may corrode the equipment, dirty your hands or spoil your clothing. In order to avoid these problems, make sure to observe the precautions below:
- Use the specified batteries only.
 - Install the batteries with due attention to the plus (+) and minus (-) sides of the batteries according to the instructions in the compartment.
 - Do not mix old and new batteries.
 - Do not mix batteries of different types. Voltage specifications of batteries of the same shape may vary.
 - Replace an exhausted battery with a new one promptly.
 - If you will not use the remote control for a long time, remove the batteries.
 - If leaked battery fluid gets on your skin or clothing, rinse immediately and thoroughly. If it gets into your eye, bathe your eye well rather than rubbing and seek medical treatment immediately. Leaked battery fluid that gets into your eye or your clothing may cause a skin irritation or damage your eye.
 - Properly dispose of depleted batteries. Disposal of a battery into water, fire, or a hot oven, or mechanically crushing, cutting, or modifying a battery can result in an explosion.
 - Do not short-circuit the batteries.
20. Usage of the monitor must not be accompanied by fatal risks or dangers that, could lead directly to death, personal injury, severe physical damage or other loss, including nuclear reaction control in nuclear facility, medical life support system, and missile launch control in a weapon system.
21. Do not stay in contact with the parts of the product that become hot for long periods of time. Doing so may result in low-temperature burns.
22. Do not modify this product.

WARNING:

An apparatus with CLASS I construction shall be connected to a MAIN socket outlet with a protective earthing connection.

STABILITY HAZARD

If a monitor is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using fixing devices like wall mount brackets recommended by the manufacturer.
- Only using furniture that can safely support the monitor.
- Ensuring the monitor is not overhanging the edge of the supporting furniture.
- Not placing the monitor on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the monitor to a suitable support.
- Not standing the monitors on cloth or other materials placed between the monitor and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the monitor or its controls.
- This equipment is not suitable for use in locations where children are likely to be present unsupervised.

Especially for child safety

- Don't allow children to climb on or play with the monitor.
- Don't place the monitor on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" monitor. Care should be taken to place or install the monitor where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the monitor so that they cannot be pulled or grabbed by curious children.

TIPS AND SAFETY INSTRUCTIONS

- The TFT color LCD panel used in this monitor is made with the application of high precision technology. However, there may be minute points on the screen where pixels never light or are permanently lit. Also, if the screen is viewed from an acute angle there may be uneven colors or brightness. Please note that these are not malfunctions but common phenomena of LCDs and will not affect the performance of the monitor.
- Do not display a still picture for a long period, as this could cause a residual image.
- Never rub or tap the monitor with hard objects.
- Please understand that our company bears no responsibility for errors made during use by the customer or a third party, nor for any other malfunctions or damage to this product arising during use, except where indemnity liability is recognized under law.
- Applications and content services may be modified, suspended, or discontinued without prior notice by the service provider. Our company bears no responsibility for any malfunctions or damages resulting from such changes.
- This monitor and its accessories may be upgraded without advance notice.
- Do not use the monitor where there is a lot of dust, where humidity is high, or where the monitor may come into contact with oil or steam. Do not use in an environment where there are corrosive gases (sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia, ozone, etc.). As this could lead to fire.
- Ensure that the monitor does not come into contact with water or other fluids. Ensure that no objects such as paper clips or pins enter the monitor as this could lead to fire or electric shock.
- Do not place the monitor on top of unstable objects or in unsafe places. Do not allow the monitor to receive strong shocks or to strongly vibrate. Causing the monitor to fall or topple over may damage it.
- Do not use the monitor near heating equipment or in places where there is likelihood of high temperature, as this may lead to generation of excessive heat and outbreak of fire.
- If the monitor is installed in a location exposed to sunlight such as next to a window, measures to reduce ultraviolet and infrared radiation and temperature measures are required. For details, consult your dealer.
- Images cannot be rotated on this monitor.
When using in portrait orientation, you will need to prepare appropriately orientated content in advance.
- The power outlet shall be installed near the equipment and shall be easily accessible.
- Please be sure to constantly remove dust and garbage that has attached to the ventilation opening. If dust collects in the ventilation opening or the inside of the monitor, it may lead to excessive heat, outbreak of fire, or malfunction. Please request a cleaning of the inside of the monitor from an authorized servicing dealer or service center.
- Do not touch the screen when turning on the monitor, it will lead to a malfunction. When this occurs, turn the monitor power off and then on.
- Do not operate the screen with a hard or pointed object such as a fingernail or pencil.
- Depending on the application used, the touch pen may not function.
- If another USB device is connected to the computer to which the touch panel is connected, do not operate the USB device during touch panel input. Input may not take place correctly.
- If you or a third party uses the product incorrectly, or if the product is subjected to the effects of static electricity or electrical noise, or if the product malfunctions or is repaired, there is a risk that saved data will be corrupted or lost.
- Suitable for entertainment purposes at controlled luminous environments, to avoid disturbing reflections from the screen.
- Always back up important data to a USB flash drive.
- We bear no responsibility for protection of internal memory recorded content or related damages.
- Operating time and warranty.
This product is designed for a maximum daily use of 18 hours. Use in excess of 18 hours per day is not covered by the warranty.
- Restarting the Android system.
To maintain stable operation, the Android system must be restarted once a day.
Android system can be restarted at the specified time. (See [page 49](#).)

The Power Cord

- Use only the power cord supplied with the monitor.
- Do not damage the power cord nor place heavy objects on it, stretch it or over bend it. Also, do not add extension cords. Damage to the cord may result in fire or electric shock.
- Do not bind the power cord and the USB cable. It may trap heat and cause a fire.
- Do not use the power cord with a power tap.
Adding an extension cord may lead to fire as a result of overheating.
- Do not remove or insert the power plug with wet hands. Doing so could result in electric shock.
- Unplug the power cord if it is not used for a long time.
- Do not attempt to repair the power cord if it is broken or malfunctioning. Refer the servicing to the service representative.
- This monitor is designed to be used in the condition of the power cord connected to the earth. If the power cord is not connected to the earth, it may cause electric shock. Please make sure the power cord is connected to the wall outlet directly and earthed properly. Do not use a 2-pin plug converter adapter.
- Do not touch the power plug if you hear thunder. Doing so could result in electric shock.
- Do not exceed the product's specified power supply voltage where it is installed. Doing so could result in a fire or electric shock. Please refer to the power supply voltage information in the specification.
- Be sure to clamp the power cord (supplied) onto the cable clamp attachment using the supplied cable clamp.

Network

- When you use a network, your communication data is exposed to the risks of being stolen or illegally accessed.
To avoid these risks, you need to use this monitor in a secure network environment.
- If an abnormality is detected, such as a DoS attack, temporarily disconnect the network and contact the network administrator immediately.

TIPS AND SAFETY INSTRUCTIONS (Continued)

Manual Scope

- Microsoft and Windows are trademarks of the Microsoft group of companies.
- Apple, Mac and macOS are trademarks of Apple Inc., registered in the U.S. and other countries.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- Google, ChromeOS and Android are trademarks or registered trademarks of Google LLC.
- VESA is either registered trademark or trademark of Video Electronics Standards Association in the United States and/ or other countries.
- Bluetooth is a registered trademark of Bluetooth SIG, Inc.
- Arm and Cortex are registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere.
- All other brand and product names are trademarks or registered trademarks of their respective holders.
- Illustrations in this manual may not exactly represent the actual product or display.
- This manual explains the "Home screen" of the "SHARP IWB Launcher".
- This manual assumes use in landscape orientation, except where specifically noted.

LED Backlight

- The LED backlight in this product has a limited lifetime.
 - * If the screen gets dark or does not turn on, it may be necessary to replace the LED backlight.
 - * This LED backlight is exclusive to this product and must be replaced by an authorized servicing dealer or service center. Please contact an authorized servicing dealer or service center for assistance.

MOUNTING PRECAUTIONS

- For SHARP dealers or service engineers, please confirm “Mounting Precautions (For SHARP dealers and service engineers)”. (See [page 66](#).)
- This product is for use indoors.
- When using a commercially available stand or mounting bracket, use a stand or mounting bracket that comply with VESA specifications.
- Since the monitor is heavy, consult your dealer before installing, removing or moving the monitor.
- Mounting the monitor on the wall requires special expertise and the work must be performed by an authorized dealer. You should never attempt to perform any of this work yourself. Our company will bear no responsibility for accidents or injuries caused by improper mounting or mishandling.
- When moving this monitor, be sure to hold it by the handles and around the main unit. Do not grasp the screen or control buttons. This may cause product damage, failure, or injury.
- When installing two or more monitor units side-by-side, provide space of at least 3/16 inch (5 mm) around them to prevent stress on the adjacent unit or structure due to thermal expansion.
- Temperature condition may change when using the monitor together with the optional equipment recommended by SHARP. In such cases, please check the temperature condition specified by the optional equipment.
- Do not block any ventilation openings. If the temperature inside the monitor rises, this could lead to a malfunction.
- Do not place the monitor on a device which generates heat.
- Do not use the product in locations where the unit is exposed to direct sunlight or other strong light. Since this product operates with infrared rays, such light may cause a malfunction.
- When using multiple monitors closely, be sure the infrared transmitter/receiver does not affect the other ones.

Installation Angle

- PN-LB863/PN-LB753
 - Install and use this monitor vertically on a horizontal surface.
- PN-LB653
 - Install and use this monitor vertically on a horizontal surface. When tilting this monitor, keep the upward angle 20° or less.


Portrait installation

- PN-LB753/PN-LB653 can be installed in portrait orientation. Provide enough space around the monitor to prevent heat from accumulating inside.
- Adhere to the following when installing the monitor in its portrait orientation. Failing to adhere to the following may cause malfunctions.
 - Install the monitor such that the power LED is located on the bottom side. (See the figure below.)
 - Set the “Screen Rotation” on the Admin Settings menu to “Portrait”. (See [page 53](#).)


Operating Temperature

- This monitor should be used at an ambient temperature between 41°F (5°C) and 95°F (35°C). Provide enough space around the monitor to prevent heat from accumulating inside.

For the monitor in landscape orientation

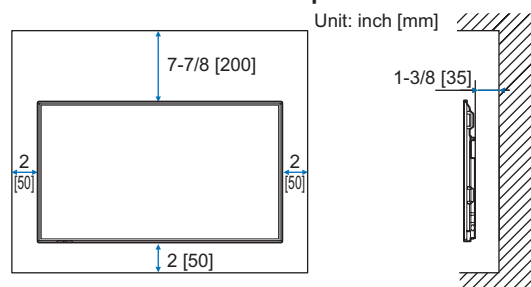


For the monitor in portrait orientation (PN-LB753/PN-LB653)

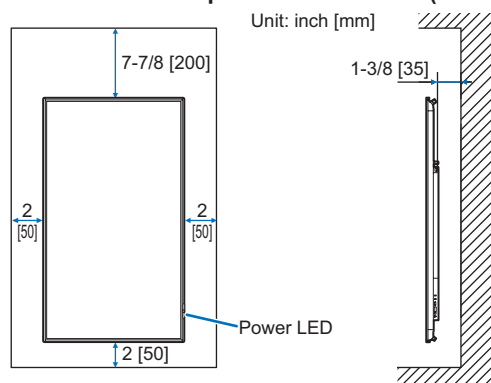

- Be careful of high temperatures in the surrounding area.
- If it is difficult to provide sufficient space for any reason such as the installation of the monitor inside a housing or of several units side-by-side, or if the ambient temperature may be outside of the range of 41°F (5°C) to 95°F (35°C), install a fan or take other measures to keep the ambient temperature within the required range.

- Use the cover SHARP logo when you install the monitor in portrait orientation.

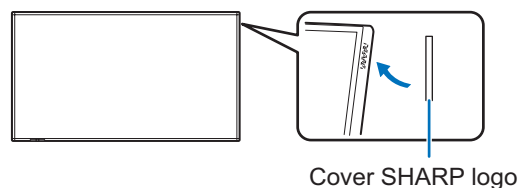

Maintenance

- Periodically check for loose screws, gaps, distortions, or other problems that may occur with the mounting equipment. If a problem is detected, please refer to qualified personnel for service.
- Regularly check the mounting location for signs of damage or weakness that may occur over time.


Contents

IMPORTANT INFORMATION	3	Basic Operation	23
DEAR SHARP CUSTOMER	4	About the home screen of HOME mode	23
SAFETY PRECAUTIONS	4	Using the remote control unit	27
TIPS AND SAFETY INSTRUCTIONS	6	Overlay board (Annotation)	30
MOUNTING PRECAUTIONS	8	Freeze	31
Supplied Components	10	Whiteboard	32
System Requirements	10	Drawing	34
Part Names	11	Erasing a drawn line.....	34
Connecting Peripheral Equipment	13	Selecting a drawn line	35
Connecting the Power Cord	15	Opening a file or application on the current sheet.....	35
Binding Cables	16	Opening a file	36
Preparing the Remote Control Unit	16	Saving	36
Installing the batteries	16	Settings	36
Remote control operation range.....	17	Wireless Display (EShare)	37
Removing the Handles	17	File Manager	38
Mounting a web camera	18	Web Browser	42
Attaching the wireless adapter (not for Europe)	18	Printing	43
Turning Power On/Off	19	Updating the Software (Updater)	44
Turning on the main power.....	19	Menu Items	45
Turning power on	19	Displaying the menu screen.....	45
Turning power off	21	Menu item details	47
Touch Pen	21	Troubleshooting	58
Touch action	22	Specifications	61
Touch action	22	Intellectual Property Rights and Other Matters	65
Cautionary points	22	Mounting Precautions (For SHARP dealers and service engineers)	66

Supplied Components

If any components are missing, please contact your dealer.

 - ☐ Interactive Display: 1
- ☐ Remote control unit: 1
- ☐ Cable clamp: 3



- ☐ Power cord
- ☐ Remote control unit battery: 2
- ☐ Setup Manual: 1
- ☐ Touch pen: 2
- ☐ Camera mount: 1

- ☐ Camera mount screw (M3 x 8): 4
 - ☐ Camera screw (inch thread): 1
 - ☐ USB cable: 1
 - ☐ Wireless adapter: 1 (not for Europe)
 - ☐ Wireless adapter anti-theft fitting: 1
 - ☐ Wireless adapter anti-theft fitting screw (M3 x 6): 2
 - ☐ Player mount: 1
 - ☐ Player mount screw (M4 x 6): 4
 - ☐ Cover SHARP logo: 1
- Place this sticker onto the SHARP logo to cover the logo.

* **Please note:** do not dispose of batteries in household waste for environmental protection. Follow the disposal instructions for your area.

System Requirements

Hardware	Must have a USB 2.0 compliant port.
Operating system	Windows 11
	macOS v14 or later
	ChromeOS

To use the touch panel with an HDMI / DisplayPort connection, connect the supplied USB cable to the computer.

The touch panel and touch pen operate with the standard driver of each operating system. On the macOS, operation is only possible in mouse mode.

The Information Display Downloader can also be downloaded from the following website.

<https://business.sharpusa.com/product-downloads> (US)

<https://www.sharp.eu/download-centre> (Europe/Asia/Pacific)

When the Information Display Downloader is installed, you can check and download the most recent versions of the software programs and latest firmware.

Pen Software setup program and latest firmware can be downloaded using Information Display Downloader.


To install the software, see the manual for each.

TIP

- This product performs software updates to add or improve functions and enhance security. To ensure safer use of this product, always keep the software up to date.
Our company bears no responsibility for any malfunctions or damage arising from use of the software without applying updates, except where indemnity liability is recognized under law.

Part Names

■Front view

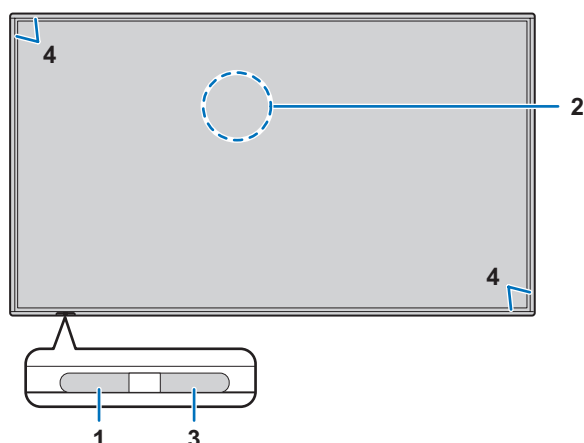


1. Power LED
2. Remote control sensor (See [page 17.](#))
3. Ambient light sensor

TIP

- The ambient light sensor is a sensor that detects the brightness of the surroundings.
When “Ambient Light Sensing” is enabled, make sure the sensor is not blocked by any object.

4. Infrared transmitter/receiver

■Rear view

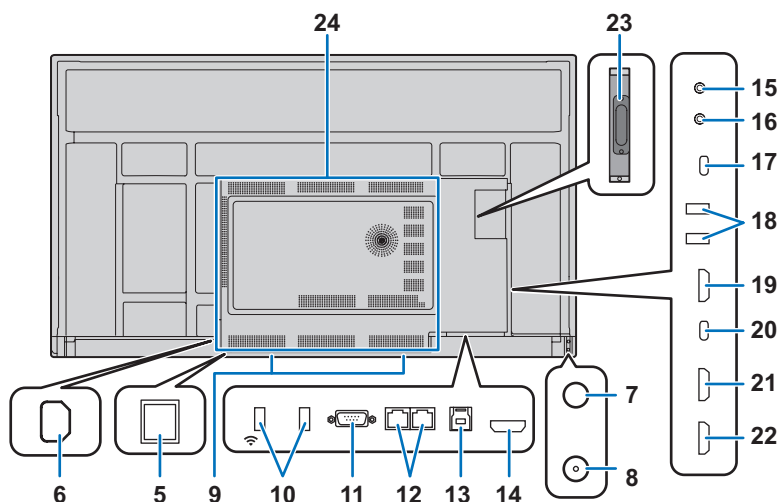

5. Main power switch (See [page 19.](#))
6. AC input terminal (See [page 15.](#))
7. INPUT button (Input mode selection)
8. POWER button (See [page 19.](#))
9. Speakers
10. USB port for HOME mode (SoC) (See [page 14.](#))
11. RS-232C input terminal (See [page 14.](#))
12. LAN terminal (See [page 14.](#))
13. TOUCH PANEL terminal (See [page 13.](#))
14. HDMI 3 input terminal (support ARC) (See [page 13.](#))
15. Input terminal for control kit (stereo mini jack) (See [page 14.](#))
16. Audio output terminal (See [page 14.](#))
17. USB Type-C port (USB hub) (power supply 5 V/1.5 A) (See [page 14.](#))
18. USB port (USB hub) (USB3.0 compliant, Type-A) (See [page 14.](#))
19. HDMI output terminal (See [page 14.](#))
20. USB Type-C port (for touch panel) (See [page 13.](#))
21. HDMI 1 input terminal (See [page 13.](#))
22. HDMI 2 input terminal (See [page 13.](#))
23. Expansion slot (See [page 67.](#))

This section is used to connect optional hardware for function expansion.
Offering this attachment location is not a guarantee that future compatible hardware attachments will be released. Option boards that comply with the Open Pluggable Specification (OPS) can be installed.

TIP

- Please contact your supplier for a list of compatible option boards.


24. Vents

NOTE

- Consult your SHARP dealer for attachment/detachment of optional parts.


Part Names

■ Remote control unit

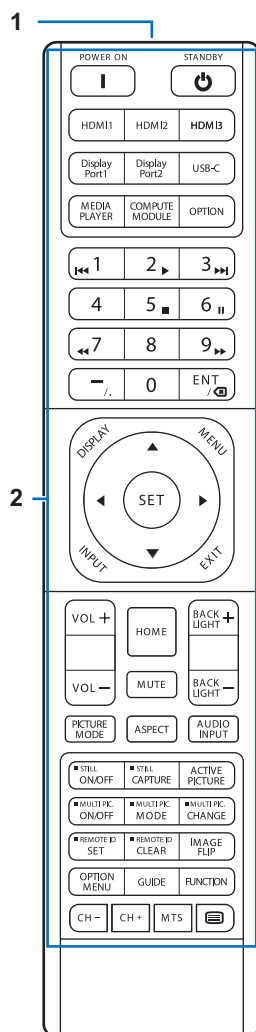

1. Signal transmitter
2. Operation buttons (See [page 27.](#))

Connecting Peripheral Equipment

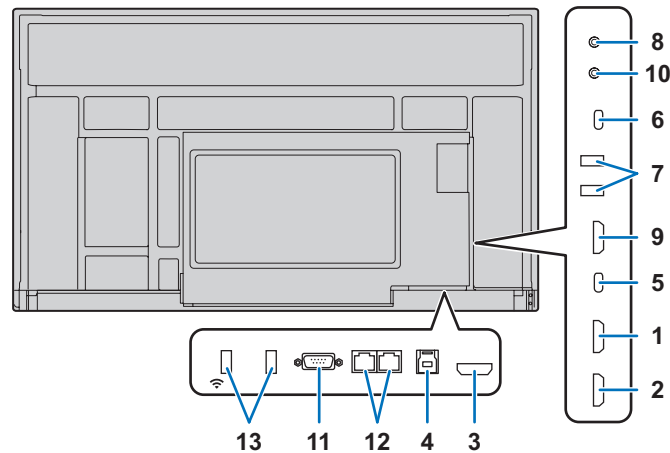

NOTE

- Be sure to turn off the main power switch and disconnect the plug from the power outlet before connecting/disconnecting cables. Also, read the manual of the equipment to be connected.
- Be careful not to confuse the input terminal with the output terminal when connecting cables. Accidentally reversing cables connected to the input and output terminals may cause malfunctions and other problems.
- Do not use any cable that has a damaged or deformed terminal. Using such cables may cause malfunctions.
- Be sure to clamp the USB Type C cable (commercially available) by using the supplied cable clamp (See [page 16](#).). When clamping the USB Type C cable, take care not to stress the USB Type C cable. Do not bend the USB Type C cable excessively.
- Use a USB flash drive with a shape that can be inserted in the USB port. Some USB flash drives with special shapes cannot be inserted. Do not forcibly insert a USB flash drive. This may damage the connector or cause failure.

TIP

- Operation is not guaranteed for all connected devices.
- If the audio output from the playback device is connected directly to speakers or other devices, the video on the monitor may appear delayed from the audio portion.
- A USB flash drive that is encrypted or has a security function cannot be used.
- Check the USB flash drive for viruses as necessary.

The TOUCH PANEL terminal is USB3.0 Type B.

Although the connector shape is different, the supplied USB cable (USB 2.0 Type B) can be connected to the TOUCH PANEL terminal.

1. HDMI 1 input terminal

2. HDMI 2 input terminal

- Use a commercially available HDMI cable (conforming to the HDMI standard) that supports 4K.

3. HDMI 3 input terminal (support ARC)

- Use a commercially available HDMI cable (conforming to the HDMI standard) that supports 4K. When connecting to ARC-compatible devices, please use a cable that supports ARC.

4. TOUCH PANEL terminal

- When using the touch panel with a computer connected to the HDMI1 input terminal, HDMI2 input terminal, or HDMI3 input terminal, connect it to the computer using a USB cable (USB 2.0 Type B or USB 3.0 Type B).
- Use of any USB cable other than the included one is not covered by the warranty.

5. USB Type-C port (for touch panel)

- Connect to the computer with a commercially available USB cable (Type C, conforming to the USB standard). In this case, there is no need to connect the USB cable to the TOUCH PANEL terminal.
- When input mode is changed to USB-C, this monitor will be recognized by the connected computer.
- You can connect a device that supports DisplayPort alternate mode.
- In order to supply power to connected devices, it is necessary to support the Power delivery standard.
Power supply: 5V/9V/12V/15V/20Vdc 3A, 20Vdc 5A
(When using the OPS: 5V/9V/12V/15V/20Vdc 3A, 20Vdc 3.25A)
- Use a cable that supports a current rating (3A/5A).
- If "USB Power" is set to "OFF" it cannot supply power to connected devices. (See [page 51](#).)

Connecting Peripheral Equipment

6. USB Type-C port (USB hub) (power supply 5 V/1.5 A)

- When the input mode is HDMI1, HDMI2, or HDMI3, the USB port can be used for a computer connected to the TOUCH PANEL terminal.
- When the input mode is USB-C, the USB port can be used for a computer connected to the USB Type-C port (for touch panel).
- When the input mode is HOME, the USB port can be used for HOME mode.
- When the input mode is "OPTION", the USB port can be used as a USB port for a computer connected to the option slot.
- When supplying power via the USB Type-C port, use a USB cable supporting 3 A.
- "Clone Setting" enables you to write and read monitor settings to a USB flash drive. (See [page 52](#).)

7. USB port (USB hub) (USB3.0 compliant, Type-A)

- When the input mode is HDMI1, HDMI2, or HDMI3, the USB port can be used for a computer connected to the TOUCH PANEL terminal.
- When the input mode is USB-C, the USB port can be used for a computer connected to the USB Type-C port (for touch panel).
- When the input mode is HOME, the USB port can be used for HOME mode.
- When the input mode is "OPTION", the USB port can be used as a USB port for a computer connected to the option slot.
- "Clone Setting" enables you to write and read monitor settings to a USB flash drive. (See [page 52](#).)

NOTE

- Do not switch the input mode when a USB flash drive is connected. This could corrupt the data on the USB flash drive. Switch the input mode after removing the USB flash drive. Or use "USB Port Select" to fix the connection depending on the connected device. (See [page 51](#).)
- If "USB Power" is set to "OFF", it cannot supply power to connected devices. (See [page 51](#).)

8. Input terminal for control kit (stereo mini jack)

- When the sensor unit of the separately sold control kit is connected to the connector, it can be controlled using the remote control light receiver on the sensor unit.
- When attaching the control kit to this monitor, use the double-sided tape included with the control kit to secure it to the top, bottom, left, and right sides.
- Do not use this connector unless specified.
- When the optional sensor unit is connected, the monitor's remote control sensor is disabled.
- For the remote control, please use the remote control included with this monitor.
- Connecting the control kit enables the following:
 - Automatically adjust the brightness of the display according to changes in the brightness of the room. (See [page 47](#).)
 - Detect user absence and automatically switch to a power off state or change settings like the brightness or volume. (See [page 52](#).)

9. HDMI output terminal

- The screen displayed on this monitor and the audio output from this monitor can be output to an external device.
- Use a commercially available HDMI cable (conforming to the HDMI standard) that supports 4K.
- When the input video is encrypted with copyright protection, the video cannot be output.
- When outputting the home screen, the external device must support HDCP.
- When a video signal is input to the USB Type-C terminal (touch panel) in DP Alt Mode, the extended desktop can be displayed on the connected device (PN-LB863/PN-LB753/PN-LB653) (one screen only).

10. Audio output terminal

- Audio that is input into the monitor is output.
- Connect using a commercially available audio cable (mini stereo jack).
- The volume of the output sound can be fixed by setting "Sound Setting" on the Admin Settings menu. (See [page 49](#).)
- "Balance", "Treble", and "Bass" cannot be adjusted in the Audio menu.

11. RS-232C input terminal

- You can control the monitor from a computer by connecting a commercially available RS-232 cross cable between these terminals and the computer.
- S-Format and N-Format commands can be used for this monitor.
For details, please refer to the manual on the following website.
<https://business.sharpusa.com/product-downloads> (US)
<https://www.sharp.eu/download-centre> (Europe/Asia/Pacific)

12. LAN terminal

- You can connect to a network by using a commercially available LAN cable.
- This monitor can be controlled via a network from a computer on the network. (See [page 50](#).)
- S-Format and N-Format commands can be used for this monitor.
For details, please refer to the manual on the following website.
<https://business.sharpusa.com/product-downloads> (US)
<https://www.sharp.eu/download-centre> (Europe/Asia/Pacific)
- This monitor has a LAN hub function, enabling communication between two devices connected to the LAN ports.

13. USB port for HOME mode (SoC) (USB2.0 compliant, Type-A)

- The USB port can be used for HOME mode. (The USB connection does not change even if the input mode is changed.)
- Connect to the left-side port (📶) when using the wireless adapter (supplied). (See [page 18](#).)
- "Clone Setting" enables you to write and read monitor settings to a USB flash drive. (See [page 52](#).)

■ USB port in the HOME mode

- Connect USB devices (memory device, keyboard, mouse) that you want to use in HOME mode.

Supported USB flash drives

File System	FAT32, exFAT
Capacity	Up to 64 GB (The maximum file size is 4 GB)

- A USB flash drive that is encrypted or has a security function cannot be used.
- Use a USB flash drive with a shape that can be inserted in the USB port. Some USB flash drives with special shapes cannot be inserted. Do not forcibly insert a USB flash drive. This may damage the connector or cause failure.

NOTE

- You can prohibit the use of USB flash drive. (See [page 51](#).)

■ How to remove a USB flash drive

- Start "File Manager". (See [page 38](#).)
- Select the USB flash drive to remove, and then touch .

TIP


- To remove a USB flash drive connected to a computer, refer to the manual of the computer.

Connecting the Power Cord

NOTE

- Use only the power cord supplied with the monitor.
- When connecting the power cord to the product's AC input terminal, make sure the connector is fully and firmly inserted.

- Turn off the main power switch.
- Plug the power cord (supplied) into the AC input terminal.
- Plug the power cord (supplied) into the power outlet.

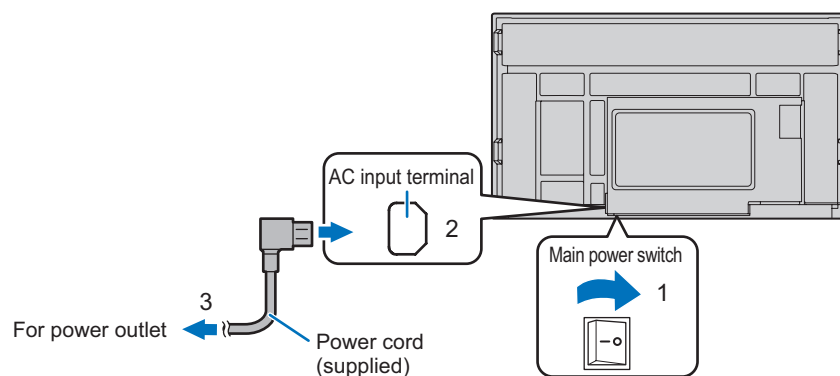


TIP

- Be sure to clamp the power cord (supplied) by using the supplied cable clamp. When clamping the power cord, take care not to stress the terminal of the power cord. Do not bend the power cord excessively.

Binding Cables

The supplied cable clamps can be used to clamp the power cord and cables connected to the back of the monitor.


Attach the supplied cable clamps to a flat surface, removing any dust or dirt before attaching.
Do not attach over a vent.

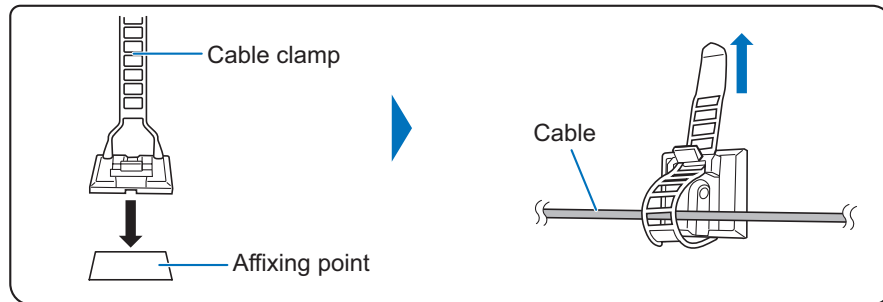


Preparing the Remote Control Unit

Installing the batteries

1. Press the cover gently and slide it in the direction of the arrow.

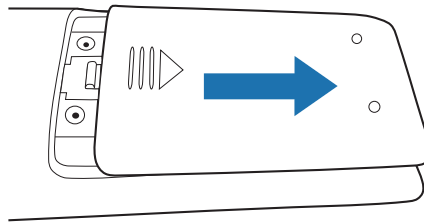

2. See the instructions in the compartment and put in the batteries (R03 or LR03 ("AAA" size) x 2) with their plus (+) and minus (-) sides oriented correctly.

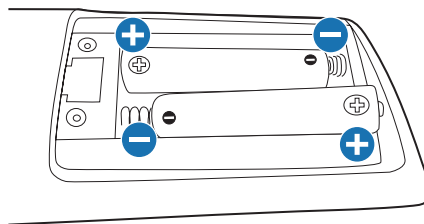


3. Close the cover.

TIP

- When the batteries become exhausted, replace them with new (commercially available) batteries.
- The supplied batteries may become exhausted quickly depending on how they are stored.
- If you will not be using the remote control for a long time, remove the batteries.
- Use manganese or alkaline batteries only.

Remote control operation range

The operation range of the remote control unit is approx. 16.4 feet (5 m) at an angle of approx 10° from the center to the top/bottom/right/left of the remote control sensor.

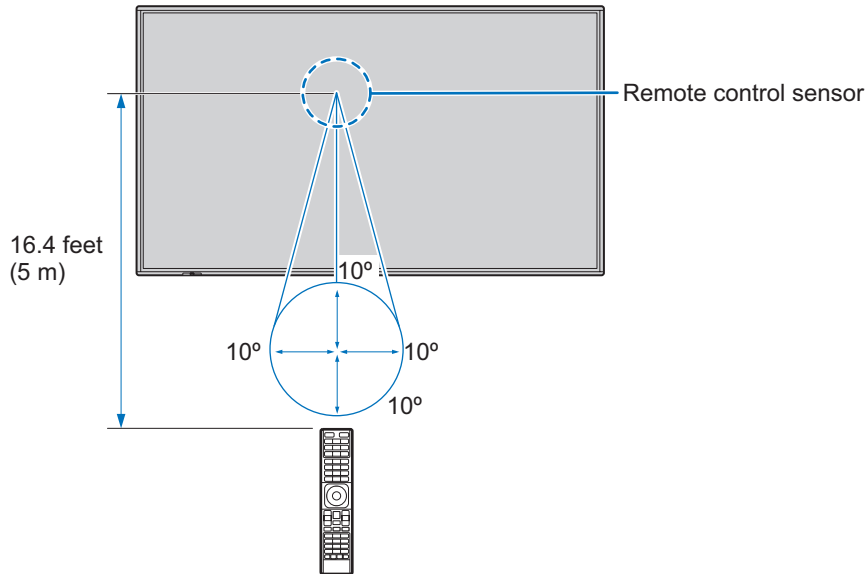


TIP

- Do not expose the remote control unit to shock by dropping or stepping on it. This could lead to a malfunction.
- Do not expose the remote control unit to liquids, and do not place it in an area with high humidity.
- The remote control unit may not work properly if the remote control sensor is under direct sunlight or strong lighting.
- Objects between the remote control unit and the remote control sensor may prevent proper operation.
- Replace the batteries when they run low as this may shorten the remote control's operation range.
- If a fluorescent light is illuminated near the remote control unit, it may interfere with proper operation.
- Do not use it with the remote control of other equipment such as air conditioner, stereo components, etc.

Removing the Handles

The handles can be removed. (PN-LB863: 4, PN-LB753/PN-LB653: 2)

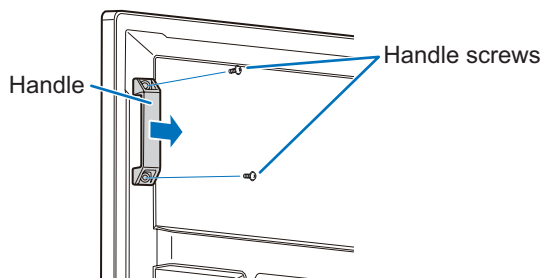


! Caution

- The removable handles and handle screws are for use with this monitor. Do not use them for any other devices.
- Store the removed handles and handle fixing screws.
- To attach handles, be sure to use the handles and handle screws which were removed from this monitor.
- Be sure the handles are attached securely.

Mounting a web camera

It is possible to mount the PN-ZCMS1 Video-Conferencing Soundbar (optional) or a commercially available web camera (1.1 kg (2.4 lbs.) or less).

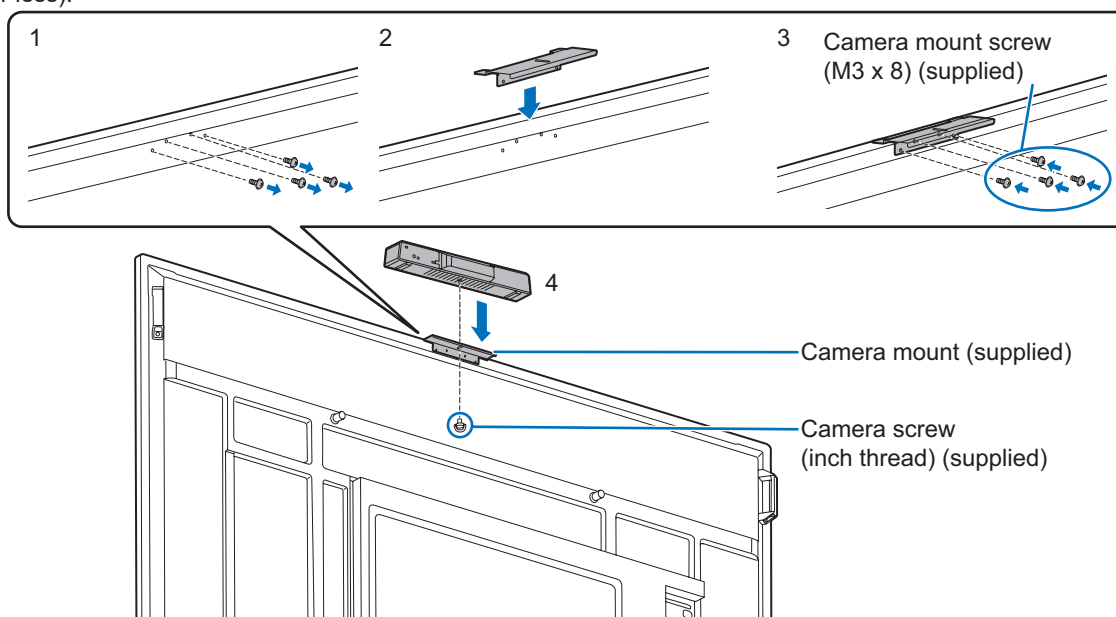

1. Remove the screws from this monitor. (screw x 4) (Store the removed screws.)
2. Place the camera mount (supplied) on top of this monitor.
3. Attach the camera mount (supplied) with the camera mount screw (M3 x 8) (supplied) (x4).
4. Attach the web camera on the camera mount with the camera screw (inch thread) (supplied) (x1).

NOTE


- Fix the camera mount and the web camera firmly. Dropping the camera mount or the web camera may cause product damage, failure, or injury.
- Remove the web camera when moving this monitor.

TIP

- After removing the camera mount, always reinstall the screws removed in step 1.

Attaching the wireless adapter (not for Europe)

1. Connect the supplied wireless adapter to the left-side USB port (📶) for HOME mode.
2. Attach the included wireless adapter anti-theft fitting using the wireless adapter anti-theft fitting screw (M3 x 6) (supplied) (x2).

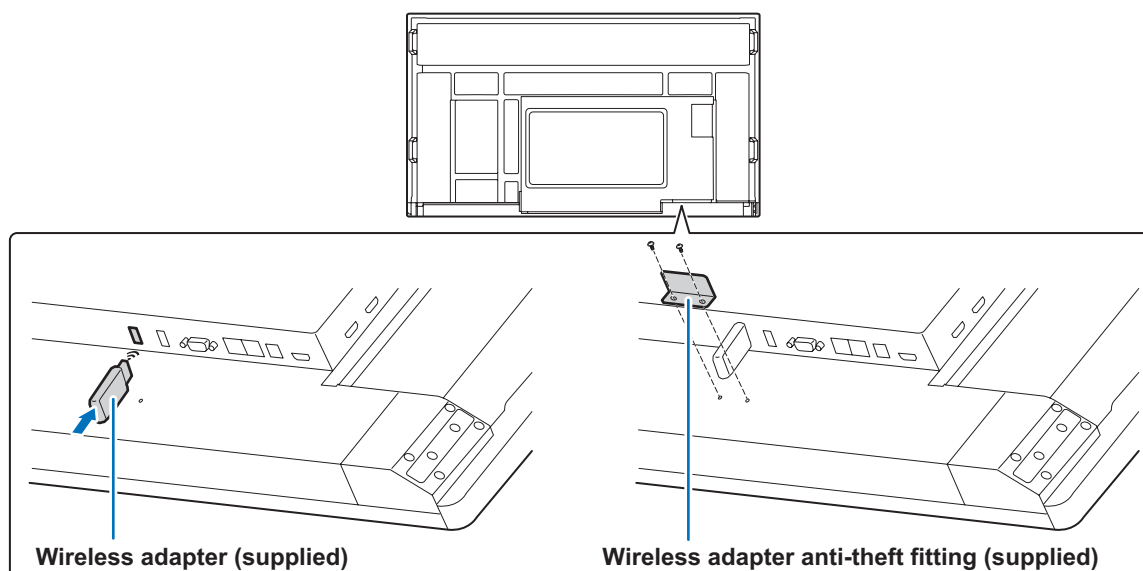


Turning Power On/Off

NOTE

- Turn on the monitor first before turning on the computer or playback device.
- When switching the main power switch or the POWER button off and back on, always wait for at least 5 seconds. A short interval may result in a malfunction.

Turning on the main power

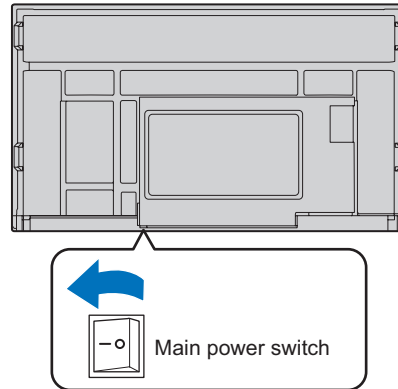



Off mode, when main power is off.

NOTE


- The main power must be turned on/off with the main power switch. Do not connect/disconnect the power cord or turn the breaker on/off while the main power switch is on.
- For a complete electrical disconnection, pull out the main plug.

Turning power on

1. Press the **POWER ON** button on the remote control unit. Or, press the **POWER** button on this monitor.

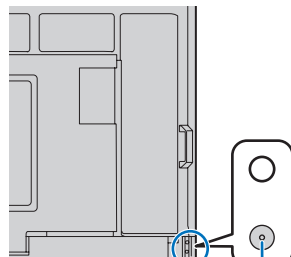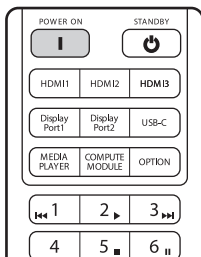

POWER button

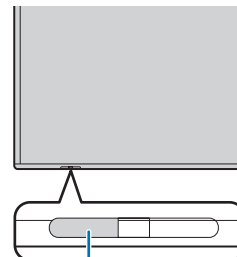

Power LED

Status	Status of the monitor
Blue lit	Power on (normal operational state)
Green flashing	Input signal waiting state (When "Power Save" in "Power Save Settings" is on and "Quick Start" is on, or when "USB Power" is set to "Auto" and a device is connected to the USB Type-C port (for touch panel), or when "USB Power" is set to "On", or when "Auto Input Change" is set to any setting other than "None", or when "Refresh Mode" is set to any setting other than "Off".) ^{*3}
Orange lit	Input signal waiting state (When "Mode" in "Power Save Settings" is "Normal" and "Quick Start" is off) ^{*3}
Orange flashing	Input signal waiting state (When "Mode" in "Power Save Settings" is "Low Power" and "Quick Start" is off) ^{*1 *2}
Red lit	Standby state (When the power to this device is turned "OFF" with the remote control, etc., regardless of the status of connection of the network device and the video signal device) ^{*1}

^{*1} Networked standby mode when this monitor connected to a network (LAN) and "Power Save" of "Power Save Settings" is set to on, "Mode" is set to "Low Power", "Quick Start" is set to off, and "Human sensing" is set to "Disable".

Enter standby mode when LAN signal is not detected.

^{*2} If the input signal cable is disconnected and reconnected, it is restored. (See [page 51](#).)

^{*3} When the video signal is input, it will be restored.

TIP

- When the main power switch is off, the monitor cannot be turned on.
- When the unit is in input signal waiting state or standby state, press the POWER button on the unit or the POWER ON button on the remote control to turn on the power.
- If you do not want the logo to be displayed when you turn on the power, turn off the "Logo Screen" switch icon in "System" in the Admin Settings menu. (See [page 53](#).)
- When starting the option board, change "INPUT MODE" to "OPTION".
- When you use the OPS for the first time, the OPS setup is executed. Do not turn off the main power switch while the setup is running.
- When scheduled settings are configured, the Power Indicator flashes green and orange while in standby state. (See [page 55](#).)

Turning Power On/Off

■ Operations after first power-on

When turning on the power for the first time, the Android settings screen appears.

- If the monitor is installed vertically, a landscape screen is displayed. The display can be changed to portrait orientation in the initial settings. (PN-LB753/PN-LB653)

1. Set up Android.


Configure the settings according to the instructions on the screen.

To configure the wired LAN, go to "Ethernet" under "Settings" (⚙️) after you have finished the initial settings. (See [page 50](#).)

Skip the password lock (PIN code).

- This is a screen locking function.
- To set the screen locking function, go to "Screen lock" under "Settings" (⚙️) after you have finished the initial settings. (See [page 51](#).)

After completing the Android settings, the Android Home screen (Standard Home) appears.

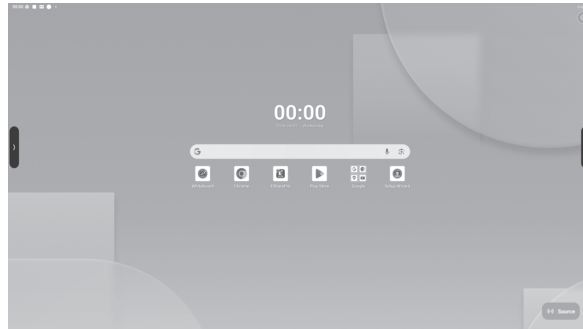

2. Perform the initial setup of this monitor.

Configure this monitor's initial settings.


Touch the "Setup Wizard" icon on the Home screen.

Configure the settings according to the instructions on the screen.

If installing the monitor in portrait orientation, change the display to portrait orientation during the initial settings.

- Set "Installation setting" to "Portrait". (PN-LB753/PN-LB653)

After completing the settings, the Home screen appears.

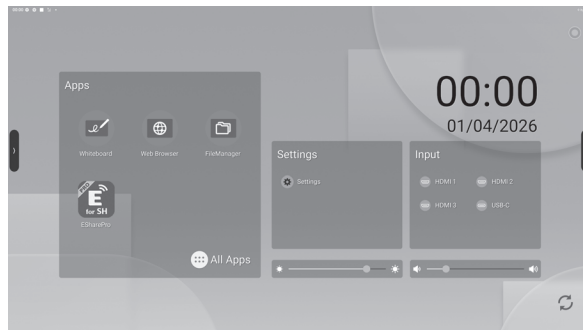

This is an example of selecting the "SHARP IWB Launcher" home screen on the "Home Screen."

The "SHARP IWB Launcher" is a launcher exclusive to this monitor and optimized for its touch display.



This manual explains the "Home screen" of the "SHARP IWB Launcher".

TIP


- Select "Hide Android" on the "Home screen" to use this monitor as a display for an external input. (See [page 51](#).)
- Set an administrator password for security purposes. (See [page 51](#), [page 56](#).)
- The "Home screen" can be changed from the Admin Settings menu. (See [page 52](#).)
- The Settings app on the Android Home screen (Standard Home) may not function properly.
If the Settings app stops functioning, perform a factory reset.
(1) Touch "Settings" (⚙️) on the "Standard Home" screen.
(2) Touch "System" > "Reset options" > "Erase all data (factory reset)".
The data to be erased appears. Confirm you wish to erase the data.
(3) Touch "Erase all data".
The factory reset begins. It takes about 3 minutes to complete.
- Date and time will be reset if the main power remains off for about 2 weeks.*
(*Approximate time. The actual time varies depending on the state of the monitor.)

Turning power off

1. Press the **STANDBY** button on the remote control unit. Or, press the **POWER** button on this monitor.

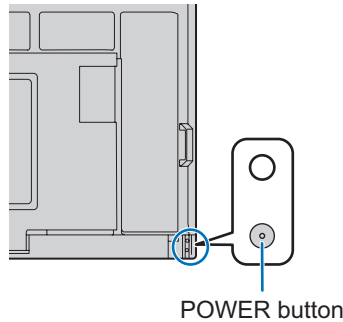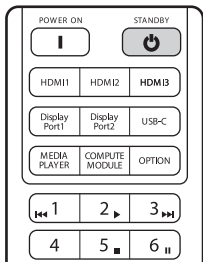


Touch Pen

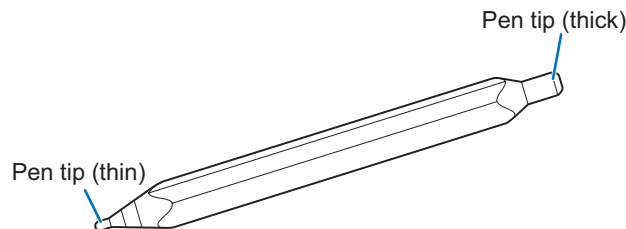

TIP

- Incorrect operation may result if your finger is too close to the tip of the pen.
- When multiple touch pens are used, touch positions and touch pen information (color, thickness, etc.) may become interchanged, and lines may break.
 - When touched simultaneously.
 - When touch pens are moved near each other.
- If the pen tip becomes worn or damaged, replace the touch pen. To purchase a new touch pen, consult your dealer.

The supplied touch pen is attached to the marked positions on this monitor.
The installation position of the touch pen is as shown in the figure below.

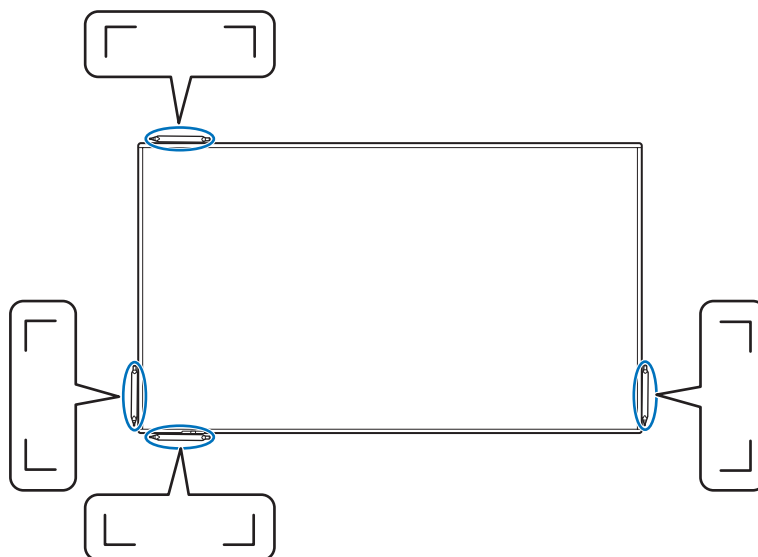

TIP

- Do not attach anything other than the supplied touch pen.
- The touch pen contains a magnet. Do not place watches or magnetic cards near the device.
- Please place or remove the pen from the holder area without sliding it along the bezel.

Touch action

Touch action

Touch actions that can be used with this monitor differ according to operating system and application. The functions of touch actions are also different. For details, check operating system Help and the application's support documentation.

TIP

- On the Mac, the actions are the equivalent mouse actions.
- For the procedures for using the touch pen in the Pen Software, see the Pen Software Operation Manual.
- The screen may not respond correctly in the following cases:
 - Touch gesture is too quick.
 - The distance between the two points is too short.
 - The two points intersect.
- In Windows 11, the touch keyboard functions are available.
For details, see Windows Help.
Touch Keyboard: An input panel with a software keyboard and handwriting recognition is displayed on the screen.
- In Windows 11, the ink function of Microsoft Office can be used. Handwritten comments can be written, and handwriting can be recognized.
For details, see Microsoft Office Help.

Cautionary points

- Do not use the touch pen for any purpose other than touch panel operation.
- Do not press hard on the pen tip.
- Operation will not take place correctly if there is an obstacle between the infrared transmitter/receiver and the touch pen or your finger. Operation will not take place correctly if your fingers or your sleeve is near the screen.
- If the touch pen is held too flat against the screen, the touch position may not be correctly detected.
- If the touch pen does not work at the edge of the screen, move it slowly.
- If there is an infrared emitting device nearby, the device may not work properly.
- If there is dirt or foreign matter on the tip of the touch pen, remove it. Foreign matter may damage the screen.
- The touch position may shift on the login screen. In this case, use the keyboard or mouse.
- If the USB cable becomes disconnected, the touch panel may not operate correctly after the USB cable is reconnected. In this case, restart the computer.
- When lifting the pen tip or your finger, ensure to place ample distance from the screen. Inadequate spacing could lead to unintended touch detection, even when the screen is not physically contacted.

Basic Operation

About the home screen of HOME mode


This screen appears when the HOME button is pressed or the input mode is changed to HOME.

On this monitor, you can use two types of Home screen: Sharp's "SHARP IWB Launcher" and Android's default "Standard Home".

The "SHARP IWB Launcher" is a launcher exclusive to this monitor.

This manual explains the "Home screen" of the "SHARP IWB Launcher".

The Home screen can be changed from the Admin Settings menu. (See [page 52.](#))

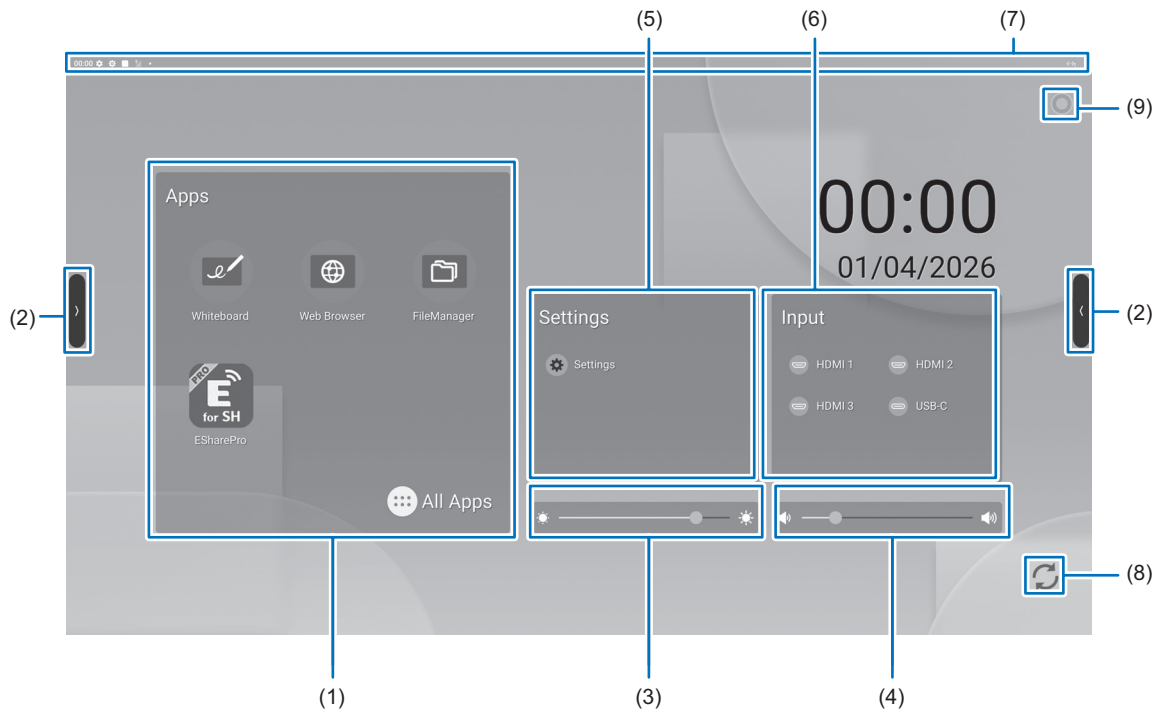

(1) Start "Whiteboard". (See [page 32.](#))

Start "Web Browser". (See [page 42.](#))

Start "File Manager". (See [page 38.](#))

Start "ESharePro". (See [page 37.](#))

Display the list of applications.

Start "Whiteboard". (See [page 32.](#))

Start "Web Browser". (See [page 42.](#))

Start "File Manager". (See [page 38.](#))

Start "ESharePro". (See [page 37.](#))

Take images or videos when the web camera is connected.

Start "Updater". (See [page 44.](#))

Start "Viso". (See [page 26.](#))

The application list also displays other installed applications.
You can download additional applications from Google Play.

TIP

- Press and hold an application icon to change it.
- The network status can be displayed at the top right of the Home screen. (See [page 52.](#))
- Android applications and external inputs (such as HDMI) are currently not supported to continuously display at the same time. When any external input is selected, the content playing in the Android application will automatically stop.
- You cannot save copyright-protected videos.

Basic Operation

- (2) When you touch the screen, “>” and “<” appear.
Touch to view the sidebar.



Go back to previous screen.



Return to home screen.



Display a preview of the application being executed.



Start “Overlay board”. (See [page 30.](#))



Display “Control Panel”. (See [page 25.](#))



Display “Input” menu. (See [page 24.](#))

- (3) Adjust the brightness.

- (4) Adjust the volume.

- (5)  Display the setting menu. (See [page 45.](#))

- (6) Display “Input” menu.

Input mode	Video
HDMI1	HDMI1 input terminal
HDMI2	HDMI2 input terminal
HDMI3	HDMI3 input terminal
USB-C	USB Type-C port
OPTION*1	Expansion slot

When the input mode is changed, the connection with the touch panel will also be changed.

*1 Displayed when using the expansion slot.

- (7) Swipe down on the status bar to display quick controls and a list of notifications.

- (8) Performing a room reset will terminate all running applications and clear any data saved on the display.



- (9)  Displays the compass. (See [page 26.](#))

TIP

- When a confirmation screen to allow access appears when the application is started for the first time, select “Allow”.

■ List display of startup applications (recent app)

Touch  on the side bar to display the preview of the recently launched applications.

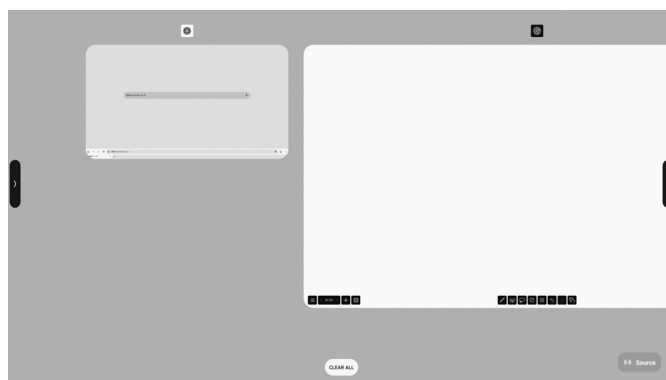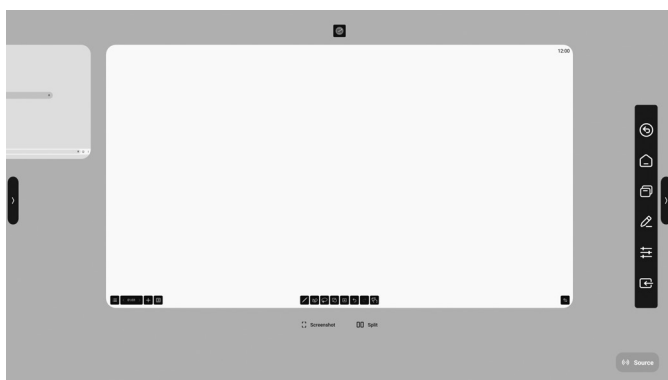


- When you touch the preview, the display switches to that application.
- Swipe up on the preview to exit the application.
- Swipe right on the preview, then touch “Clear all” on the screen to close all applications.

TIP

- Touch an application icon to display the functions available for that preview.
- “Split screen” and “Split” are both functions that display two screens simultaneously.
- Use “Freeform” to move the display position of the application or change its size.
- Use “Screenshot” to save the currently displayed screen as an image. (Excluding copyright-protected videos.)

■Control Panel

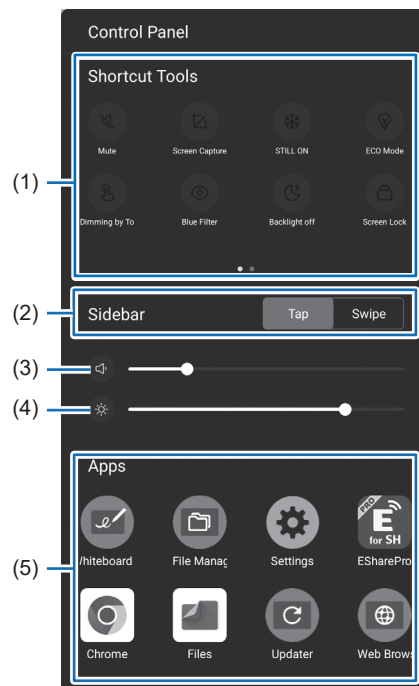

(1) Shortcut Tools

Various operations can be performed.



: Temporarily mutes audio.

Touching again will return it back to the original volume.



: Save the image of the display of the dragged area, or import it in to the Whiteboard.

TIP

- Copyright-protected videos are displayed in gray.



: Displays a still image of what is displayed on this monitor. (See [page 31](#).)



: Turning this on will fixate the screen brightness to 25. This turns off when you adjust the screen brightness.



: Turning on will dim the screen brightness when touched. Reduces screen brightness during operation. The screen will return to the original brightness about 5 seconds after being touched.



: Turns the low blue light display on/off.



: Turn off the screen display (backlight off) and output only the sound.



: Lock the screen.

If you want to lock the screen, "Screen lock" is set to on and set the unlock method. (See [page 51](#).)



: Turn off this monitor.



: Restart the unit.



: Turns off the power of the expansion slot device.

Basic Operation

(2) Sidebar

Set how the sidebar is displayed.

Tap: Touch the display area of the screen.

Swipe: Touch the black frame areas on the left and right of the screen.

(3) Adjust the volume.

(4) Adjust the brightness.

(5) Apps

Display the applications installed on this monitor.


Tap and hold an application icon to display the application in a screen that can be freely moved and resized.

■Compass

“Compass” on the Admin Settings menu is set to on to use the Compass. (See [page 53.](#))

1. Touch .

- A shortcut will appear.

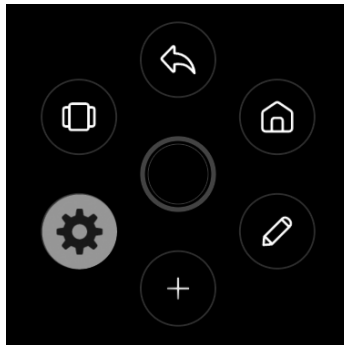

- Touch  to close the shortcut.
-  will appear when you long press the screen using 5 fingers when “Actions” is set to “Fade away”.

2. Touch the shortcut you want to use.



: Go back to previous screen.



: Return to home screen of APPLICATION mode.



: Display a preview of the application being executed.



: Start “Overlay board”.



: Change the shortcut.



: Display the setting menu.

Factory setting. This setting can be changed by pressing and holding the shortcut icon.

TIP

- Drag  to move the Compass.
- Start an application from Compass to move the display position of the application or change its size.

■Viso

This is a device management application (for administrators) from Radix Technologies Ltd.

To use this application, please register an account with Radix Technologies Ltd.


When you register, you will receive 365 days of credit for free from Sharp. After the 365 days period, credits can be bought directly from Radix in your Viso dashboard.

For information about the application and how to use it, visit the Radix website.

<https://radix-int.com/>

* Our company bears no responsibility for any damage resulting from the use of this application.

Using the remote control unit

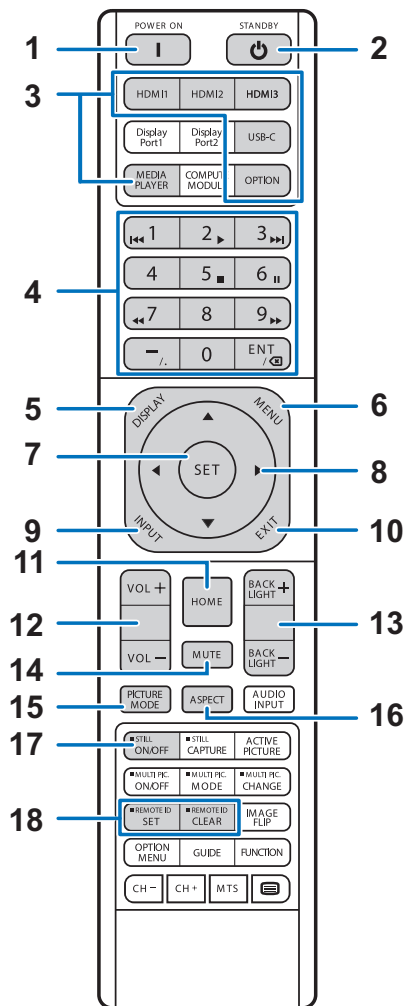

The buttons with no explanation are not used with your monitor model.

1. POWER ON

Turn on the power.

2. STANDBY

Puts this monitor into standby state.

3. DIRECT INPUT Buttons

Immediately changes the input to the one named on the button.

The button names reflect the factory preset name for the input. When you press the MEDIA PLAYER button, File Manager opens. Selecting a video, image, or music file will start playback. (See [page 38](#).)

4. Numeric input buttons

Press the buttons to set and change passwords and set the remote control number. (See [page 56](#).)

Some buttons are used for the CEC function.

The - (hyphen) button is the same means as ". (dot)". The ENT button works as backspace.

5. DISPLAY

Displays monitor information.

INFORMATION1	04/01/2026 Wed 00:00:00
Input Mode	:USB-C
Aspect	:Wide
Picture Mode	:NATIVE
Backlight	:80
Volume	:30
Input signal information	:3840x2160@60Hz
Model	:XX-XXXXX
Version	:X.X.X
S/N	:XXXXXXXXXXXXXXXXXXXXXXX
Status	:XXX-XXXXX-XX-XXXX

INFORMATION2	04/01/2026 Wed 00:00:00
Network Path	:Wireless LAN
DHCP Client	:On
IP Address	:XXX.XXX.XXX.XXX
Subnet Mask	:XXX.XXX.XXX.XXX
Default Gateway	:XXX.XXX.XXX.XXX
MAC Address(Ethernet)	:XXX.XXX.XXX.XXX
MAC Address(Wireless LAN)	:---
Wireless LAN SSID	:XXXXXXXXXX
Access Point SSID	:XXXXXXXXXXXXXXXXXXXXXXX
Access Point Frequency	:XGHz

The display changes from "INFORMATION1" → "INFORMATION2" → disappears the display, and so on every time you press this button.

When displaying "INFORMATION", the display changes from "INFORMATION1" → "INFORMATION2" → "INFORMATION1", and so on every time you press the ► button.

Pressing the EXIT button disappears the display.

- The display disappears automatically after about 15 seconds.

6. MENU

Displays and turns off the menu screen. (See [page 45](#).)

7. SET

Confirms the setting.

8. Cursor

These buttons are used to perform operations such as selecting items, changing adjustment values, and moving the cursor.

9. INPUT (Input mode selection)

Opens and closes the INPUT menu.

The input names reflect the factory preset name for the input unless they are manually renamed in the OSD menu.

10. EXIT

Returns to the previous screen.

11. HOME

System main screen button.

12. VOLUME +/- (Volume adjustment)

Press + or - to adjust the volume.

13. BACKLIGHT +/- (Brightness adjustment)

Press + or - to adjust the brightness.

Basic Operation

14. MUTE

Turns off the volume temporarily.

Press the MUTE button again to turn the sound back to the previous level.

15. PICTURE MODE

Select a picture mode.

PICTURE MODE	PURPOSE
NATIVE	Standard setting.
RETAIL	Bright, vivid colors ideal for advertising and branding.
CONFERENCING	Lower color temperature and optimized for natural human complexions.
HIGHBRIGHT	Maximum backlight brightness with higher color temperature for brighter ambient environments.
TRANSPORTATION	Maximum backlight brightness with high contrast to read text under all conditions.
DICOM sim.	Color setting for medical imaging. (Do not use for diagnostic purposes.)
CUSTOM	Custom setting.

16. ASPECT

Select the image aspect ratio. (See [page 29](#).)

17. STILL ON/OFF

Freezes the video shown on the monitor.

In some cases a residual image may occur. Do not freeze the video for a long time.







18. REMOTE ID

If there is another monitor nearby, you can change the remote control number to prevent the other monitor from being operated by the remote control unit. (See [page 56](#).)

■Setting the Aspect Ratio

Select the image aspect ratio in “Aspect” of “Advanced” on the Picture menu.

      The aspect ratio changes from “Normal” → “Full” → “Wide” → “1:1” → “Zoom” → “Normal”, and so on every time the ASPECT button on the remote control unit.

Aspect ratio of image	Unchanged view*1	Recommended selection for picture aspect		Description
4:3		Normal		Reproduces the aspect ratio that is sent from the source.
Squeeze		Full		Fills the entire screen.
Letterbox		Wide		Expands a 16:9 letter box signal to fill the entire screen.

*1 Gray areas indicate unused portions of the screen.

“1:1”: Shows the image in a 1 by 1 pixel format.

“Zoom”: The zoom function increases the image size, which expands the image beyond the active screen area. The parts of the image outside the active screen area are not shown.

TIP

- When used with a screen aspect ratio different from that of the original signal, distortion will occur on the screen.
Example: When the input signal is 4:3 and this function is set to “Full”, the screen will be horizontally wide.

NOTE

- Using this function to compress or expand the screen for commercial or public viewing in establishments like cafes or hotels may infringe on the rights of the creators, as protected by Copyright Law, so please be careful.

Overlay board (Annotation)

You can draw characters or lines on the images being displayed on this monitor.

 
Touch  on the sidebar.

In this application, the data of one screen is referred to as a “sheet”.

A maximum of 20 sheets can be opened.



 : Switches the display position to the left and right.

Tool	Function
	Draws a line. You can change the settings (color, opacity, thickness).
	Erase a line that you drew.  : The lines in the touched areas will be erased.  : The lines in the dragged area will be erased. Lines will be completely erased if even some of their portions are contained inside the said area.  » クリア : All lines on the sheet will be erased. Slide the switch to the right.
	Display an image of the screen that is currently displayed on this monitor on a device such as a smartphone via the internet. Scan the QR code displayed. A password can be requested when displaying image. Touch “Encryption” and enter the displayed password.
	Minimize the overlay board. The minimized overlay board can be redisplayed by touching sidebar.
	Add a sheet.
	Shows the current sheet number and the total number of sheets. You can change the sheet displayed with  or  .
	Save the sheet as an image file or PDF file. Data will be stored in “/Annotation”.
	Exit the application.

You can erase an area of the screen that you touch with your palm.

Touch the screen with your palm, and when the cursor appears, move your palm.

TIP

- Copyright-protected videos are displayed in gray.

Freeze

Freezes the video shown on the monitor.

Either press the STILL ON/OFF button, or touch  on the sidebar and touch .

In the case of a still image,  is displayed at the top left of the screen.



Settings window

Settings window:

Touch to operate.



The overlay board will be displayed. (See [page 30](#).)



Cancel the still state.

NOTE

- In some cases a residual image may occur. Do not freeze the video for a long time.


TIP

- If you want to mute the audio from a still image, set "Mute with STILL ON" on the General menu to on.
- To cancel, press any button other than the POWER button, MUTE button or VOLUME button on the remote control unit. Freeze is also canceled when the input signal changes (switching to no signal, changing the resolution, etc.).
- Copyright-protected videos are displayed in gray.

Whiteboard

- You can write letters or draw lines on the screen as a whiteboard.
- You can print or save content written on the screen.
- You can display an image or PDF file, and write/draw letters and lines on the image.
- In this application, the data of one screen is referred to as a “sheet”.
- A maximum of 20 sheets can be opened.


1. On the home screen, touch “Whiteboard”.

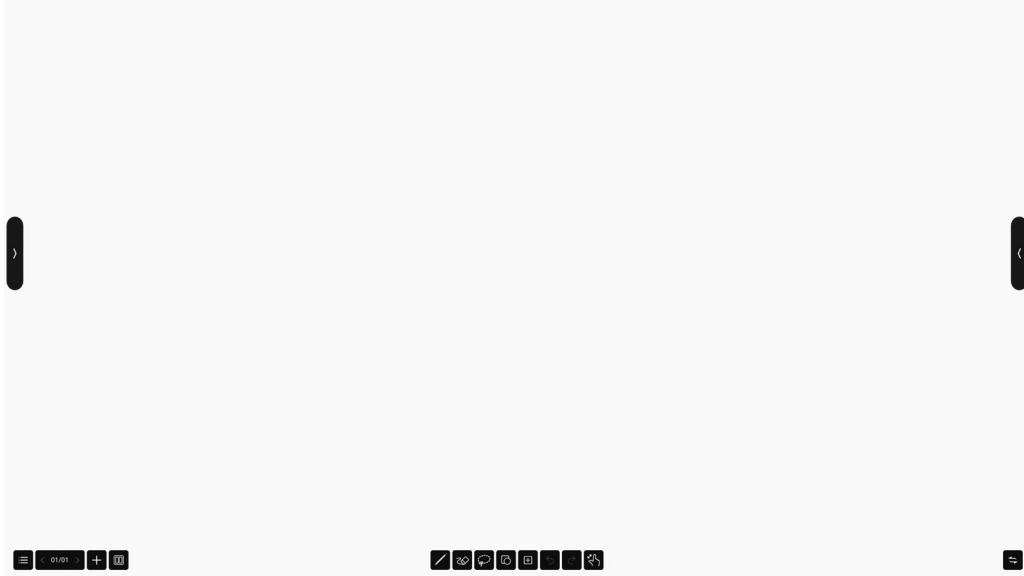

NOTE

- When the power is turned off, any data in Whiteboard is lost.
- A message is displayed before the power turns OFF. Save any data you need.

 ■Function list


Tool	Function
	Draw lines. (See page 34.)
	Erase a line that you drew. (See page 34.)
	Select a drawn line. (See page 35.) You can move, zoom in on, or zoom out on the selected line.
	Draw a figure. After selecting a figure, drag an area to include the figure.
	Insert the file on the sheet. You can also call up an application. (See page 35.)
	Undo the previous drawing or edit. You can repeat undo a maximum of 20 times.
	Redo an undone action.
	Selects the behaviors of the multi-finger operation. It changes every time you touch it. When set to off, each can be used for drawing (maximum 20). When set to on, it can be zoomed in/out by pinching. The display position can be moved by dragging it with 3 fingers.
	The menu will appear. Touch again to close the menu.
	Close the current whiteboard and create a new whiteboard. A message appears if the current whiteboard has not been saved. Save the whiteboard you need.
	Open the whiteboard.
	Save the whiteboard.
	Save the whiteboard as a different whiteboard.
	Display an image of the screen that is currently displayed on this monitor on a device such as a smartphone via the internet. Scan the QR code displayed. A password can be requested when displaying image. "Encryption" is set to on and enter the displayed password.
	Print a sheet. (See page 43.)
	Change the settings of this application. (See page 36.)
	Exit this application.
	Shows the current sheet number and the total number of sheets. You can change the sheet displayed with  or  .
	Touching this will zoom out all sheets. The sheet can be moved or deleted.
	 Split the screen in 2, 3 or 4. (Not available when the display is set to portrait orientation.)  The line color can be changed.  The line thickness can be changed.  Erase a line that you drew.  Exit split screen. The data is lost when exiting split screen. You can save the split screen image by Screen Capture function.
	Switches the display position of the menu and sheet number to the left and right.

Drawing

The side of the touch pen (supplied) that is touching the screen, enabling the two sides to be used as different pens.

1. Touch .

The line setting (color, thickness, opacity, nib) can be changed.

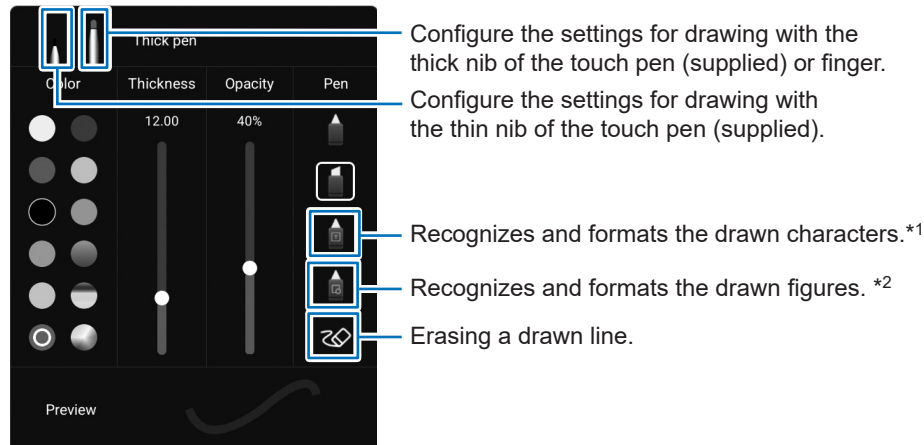

2. Draw.

TIP

- Depending on the drawn shape, it may not be correctly formatted.
- *1 Write the characters in one line. Even if you write characters in multiple lines, they will be formatted in one line.
The recognized characters differ depending on the "Language" setting of "Language & keyboard" in the System menu.
- *2 Recognizes circles, arrow lines, triangles, and rectangles.
Arrows, triangles, and rectangles will not be recognized if drawn diagonally. Draw it horizontally or vertically, and rotate it after it is recognized.

Erasing a drawn line

1. Touch .



: The lines in the touched areas will be erased.



: The lines in the dragged area will be erased.

Lines will be completely erased if even some of their portions are contained inside the said area.



: All lines on the sheet will be erased.

Slide the switch to the right.

You can erase an area of the screen that you touch with your palm.

Touch the screen with your palm, and when the cursor appears, move your palm.

Selecting a drawn line


Select a drawn line.

You can change the color of selected lines, as well as copy, delete, move, enlarge/reduce, and rotate them.


1. Touch .
2. Select a line. (See below.)

Selection method:


Touch a line.

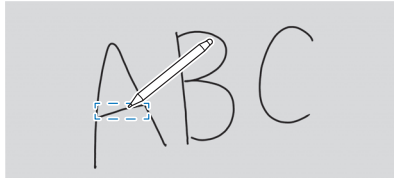

Trace over the line you wish to select.

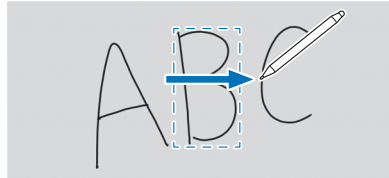

Enclose the line you wish to select.

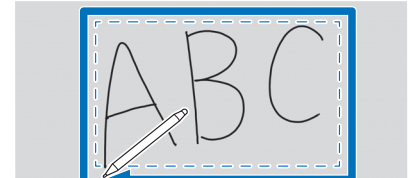

Opening a file or application on the current sheet

Depending on memory usage and other factors, it may not be possible to open a file even if it is in a supported format.

1. Touch .
2. Insert.



: Insert an image file.



: Set the number of rows and columns and insert the table.

The table width and height are automatically adjusted when drawn within the table.

When drawing from within the table, the drawn content is recognized as part of the table.

Rows and columns can be added by selecting the table using the selection tool.



: The ruler appears. A line can be drawn according to the ruler.



: Insert a Brainstorming Tool.



: The Web Browser appears.

Long pressing an image displayed in the Web Browser will incorporate the image into the sheet.



: Transfers the screen of a mobile device such as a smartphone and incorporates it into the sheet.

Opening a file

Data of this application that is saved is opened as a new whiteboard.
The current whiteboard closes. The whiteboard data that is not saved is lost.

1. Touch , .

If the current whiteboard has not been saved, a confirmation screen is displayed. If you need it, touch “Yes” and save.

2. Select the file.

Saving

You can save the whiteboard to this monitor’s built-in memory (internal memory) or to a USB flash drive.
You can save in formats other than the source file format such as in a PDF or an image format.

TIP

- When you save a sheet in PDF format or image, the sheet cannot be re-edited using this application.

Save as new

1. Touch , .

2. Specify the file name, save format, and save location (when connected to a USB flash drive).
3. Touch “Save”.

TIP

- Data will be stored in “/whiteboard”.

Overwrite

Data that have not been saved even once in the source file format will be saved as new.

1. Touch , .
2. Touch “Yes”.

Settings

1. Touch , .

2. Configure the setting.

Time display switch:

Configures whether or not to display the time on the upper right area of the screen.

Background Settings:

Set the whiteboard background.

To remove the background, set the color to White and select No Grid.

Wireless Display (EShare)

- You can display the image of another device on the same network on this monitor. Connect the monitor (with a wireless adapter connected) and the device to the access point of the network or wireless router.
You can write/draw letters and lines on the image displayed on this monitor using Overlay board.
- Software must be downloaded to the other device. For details, see below.
- Connections to all devices is not guaranteed.

Supported devices:

Windows	Windows 11 or later
ChromeOS*1	Eshare: ChromeOS version 140 or later*2 Must support Google Play. Google Cast: ChromeOS version 140 or later
macOS	macOS v15 or later
Android*1	Android 16 or later
iOS/iPadOS*1	iOS 18 or later iPadOS 18 or later

*1: Touch operation cannot be used.

*2: Audio cannot be sent.

■Wireless LAN connection settings

“Wireless LAN” on the Network menu is set to on and connect to an access point. (See [page 50](#).)

■Start ESharePro

To use this application, it is necessary to authenticate. Uses the Internet for authentication. Therefore, when starting this application for the first time, connect this monitor to the Internet.

1. Touch  in the home screen.

■Display the image that appears on the other device

The following explanation uses Windows (device) as an example.

1. **Access the address shown in EShare on the monitor with your browser, and download the software to the other device whose image is to be displayed.**
A warning screen may be displayed, but continue downloading.
2. **Install and start the software you downloaded.**
3. **Check the name of the display shown in EShare on the monitor and click “Connect”.**
4. **Select “Share screen”.**
 - You can select “Screen Mirror” (Windows) or “TV Mirror” (Android) to display the image that appears on the monitor on the other device. (Excluding copyright-protected videos.)
 - The other device connects to the monitor, and the image from the other device appears on the monitor.
5. **Start Overlay board.**
You can draw on the displayed image and save the displayed image.


TIP

- When “Access point” on the Network menu is ON, Miracast cannot be used.
If “Access point” is turned ON, “Miracast:” in “Settings” of this application will be turned OFF.
When “Miracast:” is turned ON, “Access point” will be turned OFF.
- The manual for this application can be downloaded from our website. (Provided only in English.)
<https://business.sharppusa.com/product-downloads> (US)
<https://www.sharp.eu/download-centre> (Europe/Asia/Pacific)

File Manager

Manages the files and folders in the internal storage and the USB flash drive connected to the monitor.
You can also display or play back the files.

1. On the home screen, touch “File Manager”.

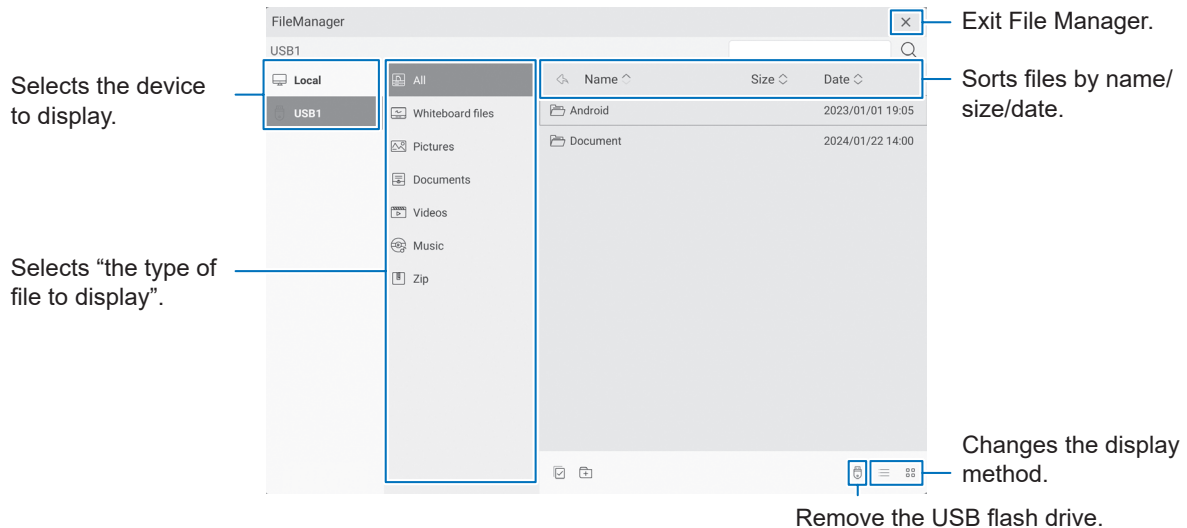

■File operation

Creating a new folder

1. Touch .

A dialog box for the input of the folder name appears.

2. Input the folder name.

3. Once input is complete, touch “OK”.

Copying/Moving

1. Display the file/folder to be copied/moved.

2. Touch to select the file/folder to be copied/moved.

• You can even select multiple files/folders.

You can select all files/folders with  at the bottom.

3. Touch or .

“Type of file to display” other than “All” will no longer be displayed.

4. Display the file list of the copy/move destination.

• Select the destination folder for copying to or moving to.

5. Touch .

The file/folder is copied/moved.

Deleting

1. Display the file/folder to be deleted.

2. Touch to select the file/folder to be deleted.

• You can even select multiple files/folders.

You can select all files/folders with  at the bottom.

3. Touch .

A confirmation screen appears.

4. Touch “OK”.

Renaming

1. Display the file/folder to be renamed.
2. Touch  to select the file/folder to be renamed.
3. Touch  .
4. Enter the new name, and then touch “OK”.

■File display/playback**Image files**

- (1) Starts the slide show.



Ends the slide show.

- (2) Plays the previous/next files.

- (3) Rotates the image by 90°.


- (4) Configures the slide show

Configures whether to repeat playbacks.

Configures the playback interval.

File Manager

Music/video files

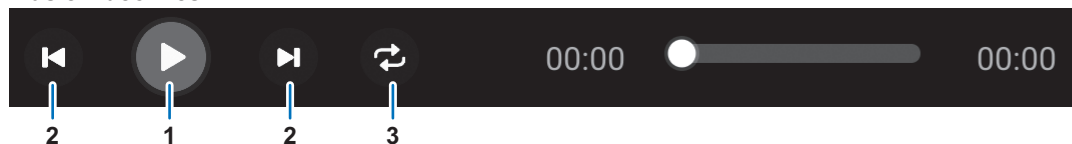

- (1) Plays the file.  Pause the playback.
(2) Plays the previous/next files.
(3) Sets the playback order or repeat mode.

It changes every time you touch it.



Sequentially plays the files on the same folder, and when the last file is played, it starts all over from the first file.



Repeatedly plays the file that is currently being played.



Sequentially plays the files on the same folder in ascending order.



Sequentially plays the files on the same folder in descending order.



Randomly and repeatedly plays the files on the same folder.

TIP

- When image, music, and video files are in the same folder, playing any one of them will cause only files of the same type (still images, music, or video) to play in alphabetical order.

■Supported formats

The types of files that can be played are as follows.
(Not all files are guaranteed to be played back.)

Image files

Extension	Max. resolution
*.bmp	4096×4096
.jpg (.jpeg)	4096×4096
*.png	4096×4096

Music files

Extension	Audio coding	Sample rate	Bit rate
*.aac	AAC-LC	8k - 48kHz	16k - 576kbps
*.mp3	MPEG1/2 layer3		8k - 320kbps
*.ogg	Vorbis	8k - 48kHz	8k - 500kbps
*.wav	LPCM	8k - 192kHz	16, 24, 32bit

Video files


Extension	Video coding	Audio coding	Max. resolution	Maximum bit rate
.3gp (.3GP2)	MPEG-4 (Simple Profile Level 3)	AAC-LC, AAC+, Enhanced AAC+, Enhanced Low Delay AAC, AMR-NB, AMR-WB	1920×1080@60fps	80Mbps
	H.263 (Baseline profile level 30 and level 45)		1920×1080@60fps	20Mbps
	H.264 (Main, High, High10@Level 6.0)		4096×2160@30fps	40Mbps
*.mkv	MPEG-2 (MP @HL)	AAC-LC, FLAC, MP3, Vorbis, Opus	1920×1080@60fps	80Mbps
	MPEG-4 (Simple Profile Level 3)		1920×1080@60fps	20Mbps
	H.263 (Baseline profile level 30 and level 45)		4096×2160@30fps	40Mbps
	H.264 (Main, High, High10@level 6.0)		4096×2160@60fps	50Mbps
	H.265 (Main/Main10 Profile, High Tier @Level 6.1)		1920×1080@60fps	20Mbps
	vp8		3840×2160@60fps	20Mbps
	vp9 (Profile 0 (420 8bit), Profile 2 (420 10bit))			
*.mp4	MPEG-2 (MP @HL)	AAC-LC, AAC+, Enhanced AAC+, Enhanced Low Delay AAC, USAC, FLAC, MP3, Vorbis, Opus	1920×1080@60fps	80Mbps
	MPEG-4 (Simple Profile Level 3)			20Mbps
	H.263 (Baseline profile level 30 and level 45)		4096×2160@30fps	40Mbps
	H.264 (Main, High, High10@Level 6.0)		4096×2160@60fps	50Mbps
	H.265 (Main/Main10 Profile, High Tier @Level 6.1)			
	AV1			
*.webm	vp8	Vorbis, Opus	1920×1080@60fps	20Mbps
	vp9 (Profile 0 (420 8bit), Profile 2 (420 10bit))		3840×2160@60fps	
*.ts	MPEG-2 (MP @HL)	AAC-LC	1920×1080@60fps	80Mbps
	H.264 (Main, High, High10@level 6.0)		4096×2160@30fps	40Mbps

- For installation in portrait orientation, prepare content that is in portrait orientation. (PN-LB753/PN-LB653)

Web Browser

View the website.

1. On the home screen of APPLICATION mode, touch “Web Browser”.

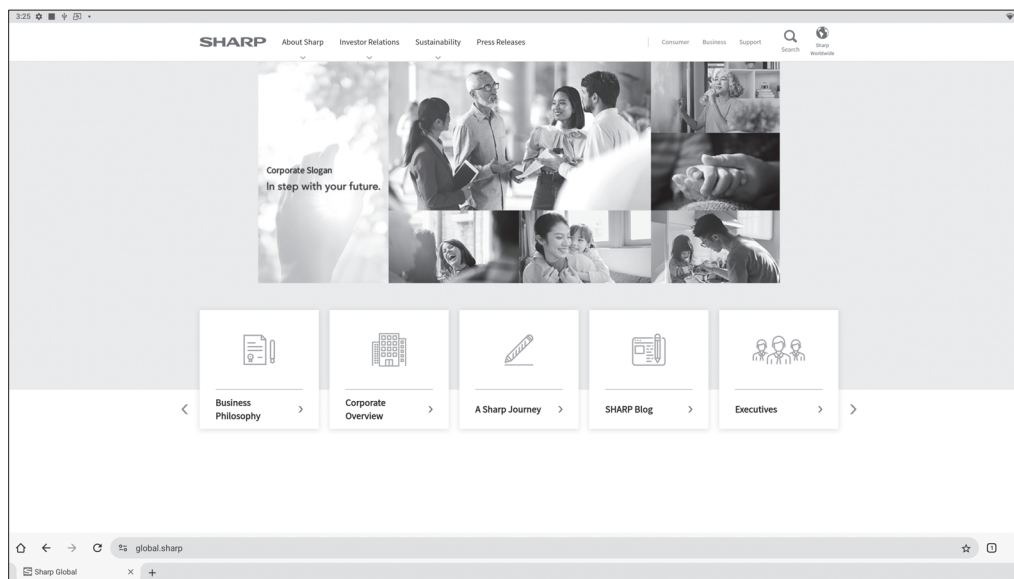

Exiting

Close the Web Browser from the recent app. (See [page 24.](#))

TIP


- The manual for this application can be downloaded from our website. (Provided only in English.)
<https://business.sharpusa.com/product-downloads> (US)
<https://www.sharp.eu/download-centre> (Europe/Asia/Pacific)
- If a large-sized website is displayed, the Web Browser may close.
- If the application does not work properly, make sure that the date and time are set correctly.
- A password is required when changing the Web Browser setting. (Factory setting) (See [page 51.](#))

NOTE

- Take proper care when browsing websites.
In a malicious website, the input contents may be stolen and fraudulent applications may be downloaded.
- If a fraudulent application is installed, it may result in a virus infection or stealing of communication details.
- Be sure to log out from a website that you have used by logging in.
If you remain logged in, your personal information such as the ID may be known by a third person.

Printing

You can print with SHARP MFP that supports the Sharp Print Service Plugin on the same network on this monitor.

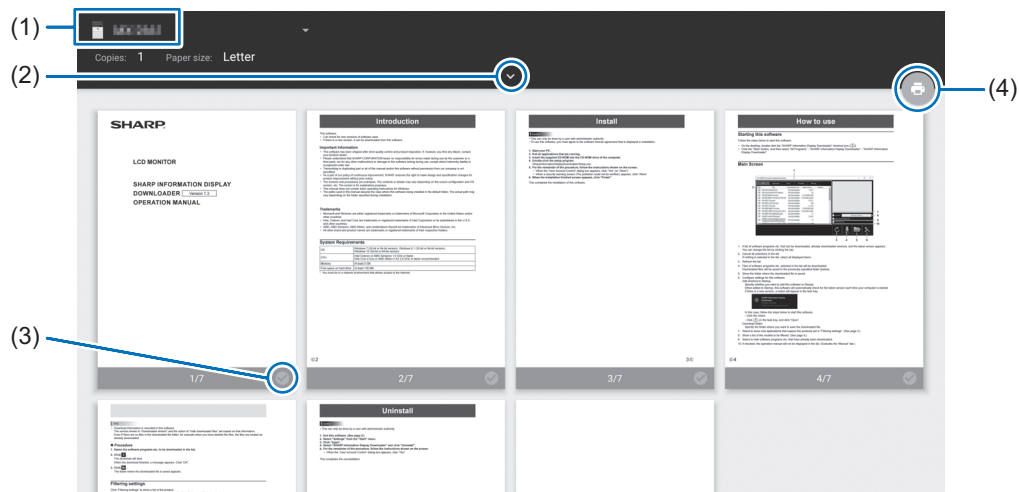

- (1) Select an MFP with .
- (2) Set the printing settings.
- (3) Check the page you want to print.
- (4) Print.

Updating the Software (Updater)


Update software that are factory-installed in home screen. (A network environment that allows access to the internet is required.)

On the home screen, touch "All Apps", and then touch "Updater".

When you use Updater, a password is required. (Factory setting) (See [page 51.](#))

The "Export Law Assurances" appears. Select "OK".

To use the software distributed by the Updater, you must agree to the "Export Law Assurances".

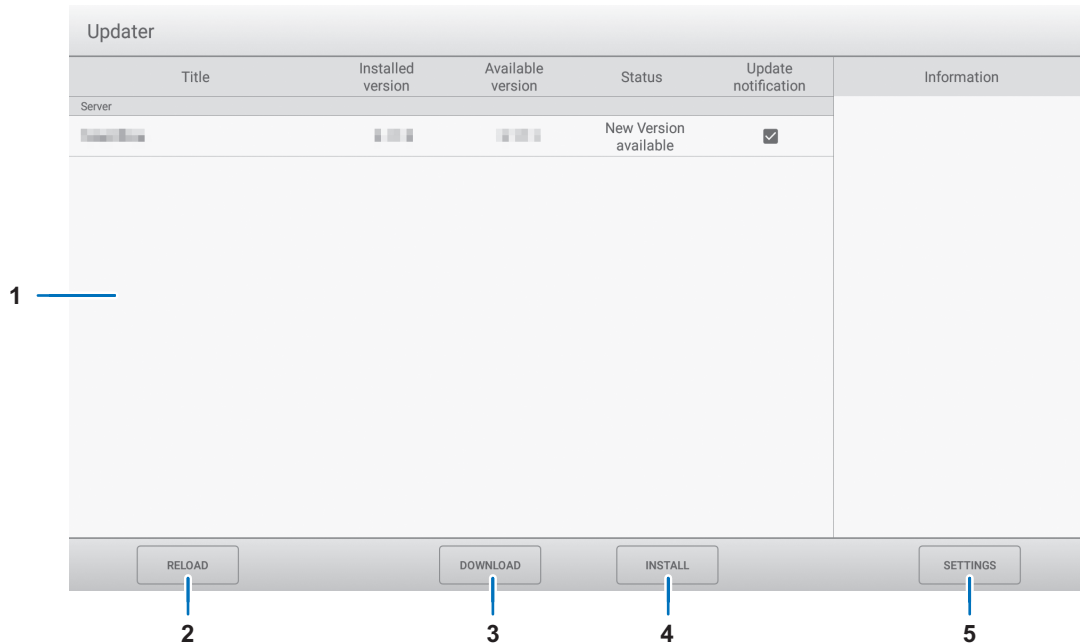

1. Information area

Shows information on already downloaded software and software that can be downloaded.

Update notification: Displayed when "Notify new versions" is set to on. Update of software that unchecked will not be notified.

2. RELOAD

Refresh the information in the information area.

3. DOWNLOAD

Download the selected software.

4. INSTALL

Install the selected software.

5. SETTINGS

Configure settings for Update.

- Hide updated items Set whether or not to hide updated software in the information area.
- Notify new versions Set whether or not to display a message if updated software exists.
- Scheduled installation Set whether or not to update the software automatically.
- Scheduled installation day When "Scheduled installation" is set to on, set the day of week to update the software automatically.
- Scheduled installation time When "Scheduled installation" is set to on, set the time to update the software automatically.
- About Updater Display the information of this application.
- Reset Initialize the "SETTINGS".

TIP

- Scheduled installation is not performed if the system is not running on the scheduled installation date and time.
- If scheduled installation is not performed correctly, check the following points:
 - Make sure that the date and time are set correctly.
 - Make sure that a connection can be established to the Internet. Check from "Web Browser" and other settings.
 - Make sure that the available space in the internal storage is 5 GB or more. Check from "Storage Space" under "System" in the Admin Settings menu.

Menu Items

Displaying the menu screen

Video and audio adjustment and settings of various functions are enabled. This section describes how to use the menu items. See [page 47](#) for details of each menu items.


TIP

- The menu will differ depending on the input mode.
- Items that cannot be selected (such as functions that do not work with the current input signal) are displayed in gray.

■ Example of operation from the remote control


(Adjust the "Contrast" in the Picture menu.)

1. Press the **MENU** button to display the menu screen.

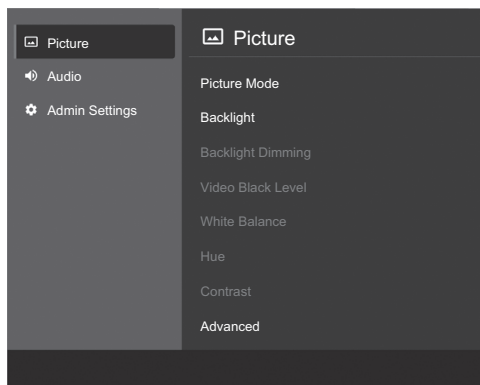


2. Press the **▲** or **▼** button to select **Picture**, and press the **SET** button.

3. Press the **▲** or **▼** button to select **Contrast**.

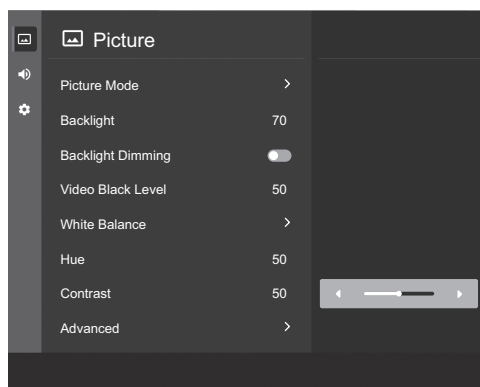

4. Press the **◀** or **▶** button to adjust the setting.

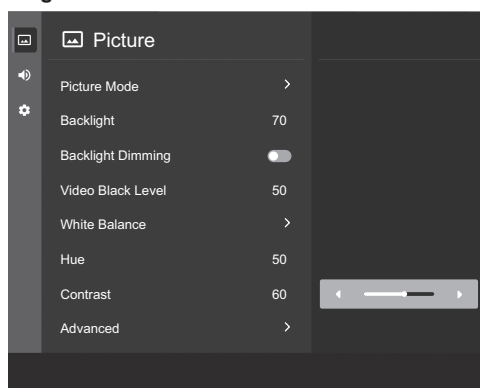

For items that have >, press the **SET** button, make settings and then press the **EXIT** button.

5. Press the **MENU** button to close the menu screen.

Menu Items


NOTE

- Do not turn the main power switch off while the menu items are being displayed. Doing so may initialize the settings.
- When using administrator settings menu for the first time, a screen for the set of the password appears. Set a password.
- A password is required in the following cases. A screen for the input of the password appears.
 - When setting the Admin Settings menu
 - When changing the Web Browser setting
 - When using Updater
 - When using the Setup Wizard

■ Example of operation from home screen

Touch to operate.

1. On the home screen, touch “Settings” .

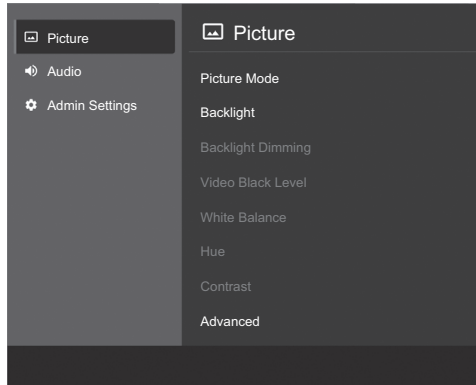

2. Set each item.
3. When the setting is complete, touch anywhere outside the menu on the screen.
The menu will close.

Menu item details

The menu will differ depending on the input mode.

The settings below are recommended settings and conforms to the "Normal Configuration" as defined in the EcoDesign Regulation ((EU)2019/2021).

- Power Save Settings - Mode : Low Power
- Power Save Settings - Quick Start : OFF
- Human Sensing - Mode : Disable

Picture

Picture Mode

Provides pre-configured picture settings suitable for various environments where this device may be used, or customize settings to viewer preference. (See [page 28](#).)

Backlight

Adjusts the backlight brightness.

Backlight Dimming

When set to "ON", gain compensation and backlight dimming are performed.

Video Black Level

Adjusts the entire brightness of the video signals.

White Balance

Selects the white balance.

Hue

Adjusts the hue. Selecting + changes the color towards green, and selecting - changes it towards magenta.

Contrast

Adjusts the difference between the bright and dark portions of the image.

Advanced

Sharpness

Adjusts the sharpness of the image.

Aspect

Select the image aspect ratio.

Ambient Light Sensing

When set to on, the brightness of the monitor is automatically adjusted in response to changes in room brightness.


InBright: Illuminance Set the upper limit for room brightness.

Backlight Set the display brightness for when the room brightness is at the upper limit.

InDark: Illuminance Set the lower limit for room brightness.

Backlight Set the display brightness for when the room brightness is at the lower limit.

Status..... Displays the current illuminance and backlight levels.

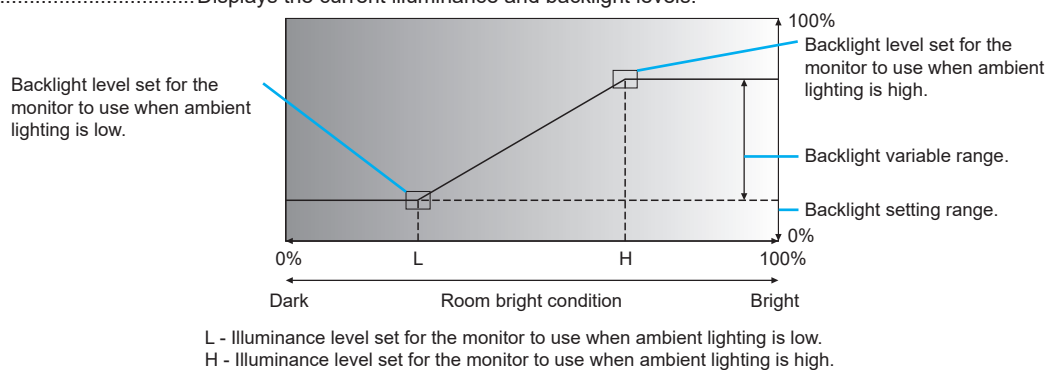

TIP

- When the control kit is installed, the ambient light sensor of this monitor is disabled.

Reset

Resets the values of the Picture menu items to the factory default settings.

For the settings saved for each "Picture Mode", the settings saved for the currently selected "Picture Mode" are initialised.

Select "ON" and then press the SET button.

Menu Items

■ Audio

Audio Mode

Provides pre-configured audio settings suitable for various environments where this device may be used, or customize settings to viewer preference.
Preset values for “Volume”, “Balance”, “Treble”, and “Bass” can be set for each audio mode.

Volume

Adjusts the volume.

Balance

Adjusts the balance of the audio sound between right and left.

Treble

Adjusts the volume of treble-level sound.

Bass

Adjusts the volume of bass-level sound.

Reset

Resets the values of the Audio menu items to the factory default settings.
For the settings saved for each “Audio Mode”, the settings saved for the currently selected “Audio Mode” are initialised.
Select “ON” and then press the SET button.

■ Admin Settings

When using these for the first time, a screen for the set of the administrator password appears. Set a password.

To change the settings on Admin Settings menu, it is necessary to enter the administrator password.

Input & Output

Input Change

- Startup App Sets which application to automatically start.
- Auto Input Change Set whether or not to automatically change the input when the input signal is lost or a new signal is input. (With some input signals, the input may not change.) Selected terminal is displayed on the information OSD by pressing the DISPLAY button on the remote control unit.

TIP

- This option is unavailable when "Human Sensing" is enabled in the "Setup" menu.
- This option is unavailable when "Startup App" is enabled.

- None The input terminals can be changed manually.
- First Detect If the input signal of the currently displayed terminal is lost, this monitor searches for another terminal with an input signal and switches to it automatically.
If there is a new signal from a terminal different from the terminal that is currently displayed, the monitor will not switch the display.
- Last Detect If the input signal of the currently displayed terminal is lost, this monitor searches for another terminal with an input signal and switches to it automatically.
If there is a new signal from a terminal different from the terminal that is currently displayed, the monitor will switch the display.
- Custom Detect If the input signal of the currently displayed terminal is lost, this monitor searches for another terminal with an input signal in order of the "Priority" settings and switches to it automatically.
If a new signal is received on a terminal having a higher "Priority" than the currently displayed terminal, this monitor switches to the input signal automatically.

- Custom: Priority 1
- Custom: Priority 2
- Custom: Priority 3

TIP

- When "Custom Detect" is selected, this monitor does not automatically switch to an input signal for which "Priority" has not been set.
- External input cannot be displayed when HOME is selected for Priority 1.

Input Mode Name

When set to on, for each terminal, you can change the input mode name that is displayed during input mode selection or display.

Signal Setting

- HDMI Mode Set the HDMI mode.
- Video Range Set the range when RGB video signals are input.

Sound Setting

- Audio Output Set whether to link the speaker volume and the audio output terminal volume.
- Variable1 You can adjust the volume from the speakers of this monitor and the audio output terminal simultaneously by using "Volume".
- Variable2 You can adjust the volume from the audio output terminal by using "Volume". Sound will not be output from the speakers of this monitor.
- Fixed Fixes the volume from the audio output terminal. Adjust the volume by using an external device. (See [page 14](#).)
The speaker volume of this monitor will not be fixed.
- Max Volume Sets the maximum volume that cannot be exceeded.
- Mute with STILL ON Set whether to mute the sound when the screen is still.

CEC

- HDMI CEC link When set to on, use the HDMI CEC function.
If the device connected to the HDMI input terminal supports CEC, the input mode of the monitor changes to HDMI when playback starts on the device.
- Auto power on This can be set when "HDMI CEC link" is set to on.
If the device connected to the HDMI input terminal supports CEC, set whether to turn on this monitor when the device is turned on.
- Audio Receiver This can be set when "HDMI CEC link" is set to on.
If the device connected to the HDMI3 input terminal supports ARC, audio is output from the terminal.

Reset

Resets all input & output menu settings back to factory settings.

Schedule

Power On

Settings for configuring the power on schedule for the monitor. (See [page 55](#).)

Power Off

Settings for configuring the power off schedule for the monitor. (See [page 55](#).)

Reboot

Restarts the Android system at the specified time or day of the week. (See [page 55](#).)

Overview

Shows a list of schedules configured for the monitor. (See [page 55](#).)

Reset

Resets all schedule menu settings back to factory setting.

Menu Items

Network

Ethernet

Sets whether or not to use a LAN terminal. To use a LAN terminal, set the IP address, etc.

Obtain IP Address Automatically... When enabled, this monitor obtains its IP address and other network settings automatically from the DHCP server on the network.
If automatic assignment is not available, disable this option and manually configure settings such as the IP address.

PROXY Set this setting if the PROXY needs to be authorised when connecting to the Internet.

IEEE802.1X Authentication..... When turned on, IEEE802.1X will be enabled.

IEEE802.1X can be used to authenticate a user to allow use of the machine.

Use IEEE802.1X authentication to allow only authenticated devices to use the network and protect against network abuse by third parties.

EAP Authentication Method ... Set a "User Name" and "Password" for PEAP and TLS, respectively.

Configure whether to use "Use Server Authentication".

Register with the "Settings" button.

You can install the IEEE 802.1X server's "CA Certificate" from "Install Certificate".

The CA certificate uses the BASE64 encoded PEM format (pem extension) file.

PEAP..... PEAP (Protected Extensible Authentication Protocol) - encapsulates EAP within a TLS tunnel, providing secure authentication. It is commonly used when a server-side certificate is deployed to authenticate the server to the client, but clientside certificates are not required.

EAP-TLS TLS (Transport Layer Security) - uses mutual authentication via client and server certificates.

It requires both the server and the client to have certificates, which can make setup more complex but provide higher security.

TIP

- After setting the date and time on this monitor, install and configure the certificate for IEEE802.1X. (See [page 52](#))
IEEE802.X authentication determines whether a certificate is valid or not by comparing its expiration date with the date and time of this monitor.

Wireless LAN

Sets whether or not to use a wireless LAN when attaching a wireless adapter. To use a wireless LAN, set the access points.

Cannot be used simultaneously with Ethernet.

Bluetooth

Set whether or not to use a Bluetooth device when attaching a wireless adapter.

Access point

Sets whether or not to use this monitor as an access point when attaching a wireless adapter.

When using these for the first time, a screen for the set of the password appears. Set a password.

You can change "Access point name", "Encryption mode" and "Password".

You cannot use the "Wireless LAN" when using a "Access point".

Monitor Control

Monitor Control via Network Sets whether or not to control this monitor via network. (See [page 14.](#))

S-Format and N-Format commands can be used for this monitor.

For details of each command, see the manual on the following website.

<https://business.sharpusa.com/product-downloads> (US)

<https://www.sharp.eu/download-centre> (Europe/Asia/Pacific)

User Name* Sets an account name when connecting to this monitor.

Password* When "Use Secure Protocol for Authentication" set to off, sets a password when connecting to this monitor.

Port* Sets the port number to be used.

Auto Logout Time(minutes)..... Sets the time to logout automatically by minutes when there is no communication.

* When using N-Format commands, there is no need to set this if "Use Secure Protocol for Authentication" is OFF.

Use Secure Protocol for Authentication:

Set to on to use secure protocol for Authentication when connecting to this monitor.

"Use Secure Protocol for Authentication" is only available if you set "Mode" to "Normal" or turn on "Quick Start". In this case, the power consumption in Standby State will be higher.

When set to on, sets the public key file.

Upload..... Upload the public key file to this monitor.

Download Export the public key file uploaded to this monitor.

Delete Delete the public key file uploaded to this monitor.

This monitor supports the following public keys.

RSA(2048bit or more), ECDSA-256, ECDSA-384, ECDSA-521, ED25519

Reset Initialize the "Monitor control via network" settings.

IP Address Filter

To prohibit connection to this device, set the IP address.

Reset

All network settings will be reset to the factory settings.

Protect**Power Save Settings**

- Power Save Set whether or not to turn power saving on. When set to on and the monitor goes into power saving after the input signal is lost, it will be in the state selected in "Mode". Set the power saving condition in "Mode".
- Time Settings Set the time to transition to the input signal waiting state. If the input signal is lost and the set time has elapsed, the device will enter the input signal waiting state.
- Mode When "Low Power" is set, there is no automatic recovery even when a signal is input to the connected device. Return from low power mode via the monitor or the remote control power button, or disconnect and reconnect the device's input signal cable.
When "Normal" is selected, the monitor turns on by detecting an input signal from a connected device.
- USB Power Sets the power supply to the USB Type-C port (for touch panel), USB Type-C port (USB hub), and USB port (USB hub). Set to on to supply power.
- Power Save Message Shows a message as the monitor is entering low power mode.
- Quick Start When set to on, this monitor recovery time will be fast when a video signal is detected, although the power consumption will increase.
- Off if No Operation Determines whether or not to turn the monitor off when there is no operation from the remote control, RS-232C commands, or LAN commands.
- Home Screen When setting the time options on "Home Screen", the monitor will turn off at the specified time.
- Apps/External Input Set the action when a screen other than the home screen (application screen or external input) is displayed.

Security Settings

- Password Input the current administrator password to change the settings in this menu. (See [page 56](#).)
- Lock Admin Setting Set whether an administrator password is required in the following cases.
- When setting the Admin Settings menu
 - When changing the Web Browser setting
 - When using Updater
 - When using the Setup Wizard
- Screen Lock Set whether to lock the screen in the following cases.
- When the main power is turned off, and the power is turned back on
 - When switched to standby state
 - When switched to input signal waiting state
 - When the control panel screen has been locked (See [page 25](#).)
- If you want to lock the screen, set the unlock method.

Lock Settings

- Limits the operation of the monitor and remote control. (See [page 57](#).)
- * If you press and hold the DISPLAY button on the remote control for more than 5 seconds, the Monitor Lock and Remote Control Lock are deactivated.

Advanced

- Application Hide Enables or disables the availability of some of the monitor's pre-installed applications. Any application that is turned ON will become unavailable.
- Enable USB Drive Sets whether or not to allow the use of a USB flash drive.
- USB Port Select Specify the setting for the USB hub connection when the input mode is changed. (See [page 14](#).)
- Auto The connection automatically changes when the input mode is switched.
 - HOME Fix the connection to HOME mode.
 - HDMI1/2/3 Fix the connection to the device connected to the TOUCH PANEL terminal.
 - USB-C Fix the connection to the device connected to the USB Type-C port (for touch panel).
 - OPTION Fix the connection to the option board (with optional board installed).
- Refresh Mode Sets whether or not to perform Panel Refresh when this monitor is in the input signal waiting state or standby state.
- Residual images are reduced by performing Panel Refresh. (In this case, power consumption will increase.)
- Off Panel Refresh will not be performed.
 - Mode 1 Panel Refresh will be performed when this monitor is in the input signal waiting state or standby state.
 - Mode 2 Panel Refresh will be performed when this monitor is in the input signal waiting state.
- Hide Android When this setting is enabled, the Home screen is not displayed, and this monitor functions as a display for external input.

Reset

- Resets all protect menu settings back to factory setting.

Menu Items

Setup

Home Screen Settings

- Default Home Screen The home screen can be changed.
Select either Sharp's "SHARP IWB Launcher" or Android's default "Standard Home".
When the Home screen is changed, this monitor must be restarted.
- SHARP IWB Launcher Settings... Network status and the room reset button display settings for "SHARP IWB Launcher" can be configured.

Human sensing (with control kit is installed)

- Human Sensing Automatically adjusts the backlight and volume levels based on whether or not a human presence is detected in front of the monitor.
- Auto Off Detects when there is no human presence, and when a set time has elapsed, the power is automatically turned OFF. When a person is near the monitor again, the monitor will automatically return to normal mode.
- Disable Human sensing function is off.
- Custom Detects when there is no human presence, and when a set time has elapsed, the screen brightness, volume, and input will automatically return to the settings made in "Backlight", "Volume", and "Input Select". When the presence of a person is detected, the screen brightness, volume, and input will automatically return to their original "current settings".
- BackLight When set to on, the backlight brightness level is changed when the monitor does not detect a human presence during the period set for "Waiting Time".
- Volume When set to on, the function changes the volume when the monitor does not detect a human presence during the period set for "Waiting Time".
- Input Select When set to on, the input signal is changed when the monitor does not detect a human presence during the period set for "Waiting Time".
- Waiting Time This is the period of time the monitor should wait for a human presence before activating the Human Sensing mode selected in this menu.

Clone Setting

- Clone Setting Copy the current settings of this monitor to a USB flash drive, and reflect the settings on another monitor.
- USB Write Exports the monitor settings to a connected USB flash drive.
The settings that can be copied are as follows: Items with a checkmark will be included.
Picture, Audio, Input & Output, Schedule, Network, Protect, Setup, System
- USB Read Reads the settings copied to a USB flash drive and overwrites the settings on the connected display.
Items with a checkmark will be included.
- Copy Start Initiates import or export of the OSD menu settings.

Printer

- Opens the printer settings.

Advanced

- This menu contains settings for adjusting some of the monitor's hardware options and communication and identification format.
- Power Indicator Specifies whether to light the power LED.
- Touch Operation Mode Select the touch mode.
This setting cannot be configured when this monitor and computer are not connected via USB.
- Auto It operates by automatically distinguishing respectively finger touch and pen touch.
- Touch Screen Mode It operates without distinguishing finger touch and pen touch.
- Mouse Mode It operates in mouse mode. The mouse pointer is displayed.
- Monitor ID Set the ID number used in the ID mode of the remote control on the monitor. (See [page 56](#).)
The monitor ID is used also as the ID in an N-Format command.

Reset

- Resets all setup menu settings back to factory setting.

Application

- All apps Manages the installed applications.
- Application Control Sets a password lock for each application.

System

This menu provides a range of settings for configuring various aspects of the monitor functions for user preferences, keeping the monitor up to date, adding security credentials, performing a factory reset, etc.

Date & Time

- Use 24-Hour Format Sets whether or not to display the time in the 24-hour format.
- Automatic Date & Time Sets whether or not to set the data & time automatically via network.
- Set date Sets the date. Displayed when "Automatic Date & Time" is turned OFF.
- Set time Sets the time. Displayed when "Automatic Date & Time" is turned OFF.
- Date format Sets the display format for the date.
- Time Zone Sets the time zone.

Language & Keyboard

- Language Sets the display language for the screen.
- Virtual Keyboard Selects the keyboard to display on the screen.
To use the text conversion and suggestion functions in Gboard, this monitor must be connected to the Internet at least once.
- Physical Keyboard Select the layout of a connected physical keyboard.

System (Continued)**OSD**

- Screen Rotation Select the installation direction of the monitor. (PN-LB753/PN-LB653)
- Landscape Landscape orientation
- Portrait Portrait orientation
- Sidebar Sets whether or not to display the sidebar.
- Compass Sets the compass settings.
- Compass Set whether or not to use Compass.
- Auto hide Configures the time until the shortcut closes. When "Always-On" is selected, shortcut is displayed until the close operation is performed.
- Actions Set whether or not to display the compass  when the shortcut is closed.
- Gesture interaction... When this setting is enabled, pressing and holding five fingers on the screen launches the compass.

TIP

- The compass will not reappear if "Actions" is set to "Fade away" with "Gesture interaction" turned off. If using the compass with "Fade away" set, turn on "Gesture interaction".

- Logo Screen Sets whether or not to display the logo screen.
- Startup Animation Sets whether or not to display the animation when turning the power on.
- Wallpaper Sets the background of the home screen.
- Supported file formats (Extensions): BMP, JPEG (.jpg), PNG
- Max. resolution: 3840×2160
- Max. file size: 16MB or less
- Shutdown Message Sets whether or not to display a confirmation message when the power off is executed.

Account

- Add or manage Google accounts.

Storage Space

- Check the usage status of this monitor's internal storage.

System Update

- System Update Confirms the firmware version and updates the firmware.
- Current Version Displays the current firmware version.
- Update Updates the monitor firmware from a connected USB drive containing a firmware file. Press "Check" to initiate the update.

Security

- Security This menu provides the options for installing, viewing, and removing the digital certificates used for ensuring secure and encrypted online communication.
- Trusted Credentials This menu displays the trusted credentials installed for the system and user.
- User Credentials Displays the user credentials.
- Install From Storage Installs a file from the connected storage.
- Clear credentials Deletes all credentials.

Reset

- All system settings will be restored to the factory defaults.

All Reset

- All items are returned to factory shipment state.
- In HOME mode, only the settings of the factory-installed software will be initialized.

About

- Displays the information of this monitor.

Monitor Information

- Shows the model name, serial number and firmware version of the monitor.

Legal Information


- Displays the legal information.

TIP

- When Ambient Light Sensing is turned ON, Backlight Dimming cannot be set.
- When Backlight Dimming is turned ON, Ambient Light Sensing cannot be set.
- Do not cover the optional sensor unit when "Ambient Light Sensing" is enabled.
- Even if you perform an "All Reset" on this monitor, the OPS installed on the expansion slot will not be reset.
- The "Date & Time" needs to be set before adding schedules.
- Each schedule must be set at an interval of 6 minutes or more.
- Up to 15 different schedules can be created.
- Power consumption by a device connected to this port depends on the USB device.
- 3rd party applications of this type are not guaranteed to work and are outside the scope of support and warranty.
- Always verify the authenticity and safety of an application before installation. Some applications may affect the operation of other applications and of this monitor. Virus infections or, data corruption, falsification, or theft is possible.
- The selection of items is reset if this monitor's main power is turned off.
- The Mute Setting is released in the following cases:
 - When the main power switch is turned off/on
 - When turned off/on with the POWER button
 - Returning the unit from power save.
 - When the "Audio Mode" is changed
 - When the volume is changed using the remote control or the unit keys
- This function may not work depending on the application or MediaPlayer contents.
- When performing an "System Update", connect a USB flash drive to the unit's USB terminal for HOME mode.
- After updating the system to the latest version, it cannot be restored to a previous version.
- When the monitor is controlled via a network, there are the following restrictions on use.
 - After turning the power on or off, you need to wait at least 2 minutes before performing the next control.
 - The monitor control via network connection will be disconnected when the mode switches to "networked standby mode", so reconnecting is required.
 - Before performing power control of the monitor using "Use Secure Protocol for Authentication", you need to set "Mode" to "Normal".
- "Clone Settings" works between products with the same model name and firmware version.

■ Schedule

You can set the time to switch the monitor on and off.
First, display “Schedule” from the Admin Settings menu. (See [page 49](#).)

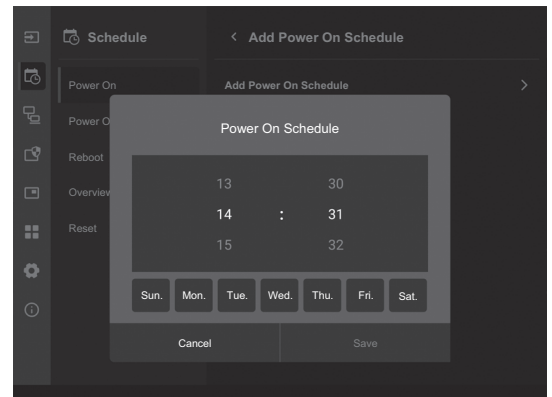

Turning on the power at a specified time

1. Touch “Add Power On Schedule” under “Power On”.
2. Select the time you want to specify.
3. Touch the day of the week you want to specify.
4. Touch “Save”.

Turning off the power at a specified time

1. Touch “Add Power Off Schedule” under “Power Off”.
2. Select the time you want to specify.
3. Touch the day of the week you want to specify.
4. Touch “Save”.

Reboot at a specified time

1. Touch “Add Reboot Schedule” under “Reboot”.
2. Select the time you want to specify.
3. Touch “Save”.
Android system can be restarted at the specified time.

Displaying a list of set schedules

1. Touch “Overview” under “Schedule”.
2. Touch the schedule you want to change.
If you want to change the time, etc., or delete a schedule, you can do so from the details screen.

TIP

- When scheduled settings are configured, the Power Indicator flashes green and orange while in standby state.

NOTE

- Do not switch off the main power after setting the schedule.
- The Date and time/Set time needs to be set before setting the Schedule. (See [page 52](#).)
- Each schedule must be set at an interval of 6 minutes or more.
- Up to 15 different schedules can be created.
- To ensure stable operation, the Android system needs to be restarted once a day.

■ About remote control numbers

If there is another monitor nearby, you can change the remote control number to prevent the other monitor from being operated by the remote control unit.

Set the same number in the monitor and in the remote control unit.

TIP

- You can set remote control numbers to values from 0 to 25.
- When the remote control unit batteries become exhausted and when you replace the batteries, the number on the remote control unit may be reset to 0.

Changing the remote control number on the monitor

This is set in "Monitor ID" in the Admin Settings menu. (See [page 52.](#))

Set the remote control number on the remote control side

1. While pressing the REMOTE ID SET button on the remote control, press the numbers for the remote control number.

- The number that can be set is between 0 and 25. Enter the numbers without any gaps.
- If set to "0", all displays can be operated, regardless of the remote control number on the display side.

2. Release the REMOTE ID SET button.

The remote control number is set on the remote control unit.

Checking the remote controller number

1. Press the REMOTE ID SET button on the remote control unit.

The remote control number will appear on this monitor.

If it appears in red, the remote control numbers on this monitor and remote control unit match.

If it appears in white, the remote control numbers do not match.

TIP

- To disable the remote control number on the remote control side, press and hold the REMOTE ID CLEAR button for more than 5 seconds.

■ Security Settings

Anyone can operate this monitor by using the remote control unit or by using the buttons on the control panel of the main unit. By setting security and locking the device, you can prevent unauthorized persons from using the device or changing its settings.

Setting the device password

Set a password if necessary. (See [page 51.](#))

Operate from the Admin Settings menu.

When using the monitor for the first time, the screen to set a password appears. Enter the administrator password using the on-screen keyboard. You may also use an external USB keyboard or the numeric keys on the remote control.

1. Select "Protect" → "Security Settings" → "Password".


2. Enter the administrator password and press "OK".

You will now be able to set each item in "Security Settings".

3. To change the password, press "Change Administrator Password" and enter the current password in "Current Password".

4. Enter a new password in "New Password" and enter it again in "Confirm Password".

The new password will be saved.

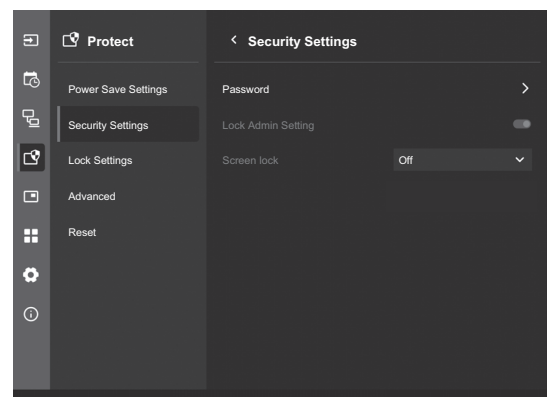

Enable security using a password


1. Select **“Protect”** → **“Security Settings”** → **“Lock Admin Setting”**.
2. **“Lock Admin Setting”** is set to **ON**.
“Lock Admin Setting” is enabled.

TIP

- To access the Admin Settings menu, you must enter the administrator password. Be sure to keep your password safe so you do not forget it.
- Screen lock requires a pattern or a password. Be sure to keep your pattern or password safe so you do not forget it. (See [page 51](#).)

Limiting the operation of the monitor and remote control

The operation of the monitor and remote control can be limited. (See [page 51](#).)

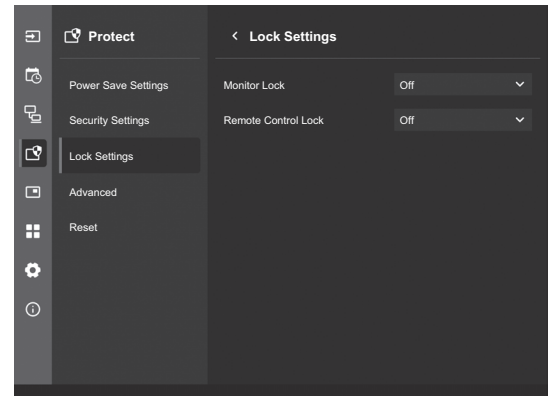**Monitor Lock**

The operation of the monitor can be limited.

1. Select **“Protect”** → **“Lock Settings”** → **“Monitor Lock”**.
2. Select the effective scope of the lock.
 - Off Enables operation.
 - All buttons Locks monitor buttons operation.
 - Touch Locks touch operation.
 - All buttons & touch Locks monitor buttons and touch operation.
3. Press the **MENU** button on the remote control.
Close the menu.

Remote Control Lock

Button operation using the remote control can be limited.

1. Select **“Protect”** → **“Lock Settings”** → **“Remote Control Lock”**.
2. Select the effective scope of the lock.
 - Off Enables operation.
 - All buttons Locks remote control buttons operation.
 - Except power & volume ... Locks operations other than power operation and VOLUME +/-.
3. When the setting is complete, touch the screen anywhere outside of the menu.
Close the menu.

Unlocking

If you press and hold the DISPLAY button on the remote control for more than 5 seconds, the Monitor Lock and Remote Control Lock are deactivated.

Troubleshooting

If you are experiencing any problem with your display, before calling for service, please review the following troubleshooting tips.

■ Display & Audio

There is no picture or sound.

- The power LED is turned off.
 - Is power supplied to this monitor?
 - Is the power cord disconnected? (See [page 15.](#))
 - Is the main power switch off? (See [page 19.](#))
- The power LED is lit in red.
 - The monitor is in sleep mode. Turn on the power. (See [page 19.](#))
- The power LED is flashing in green.
- The power LED is lit in orange.
- The power LED is flashing in orange.
 - There is no input signal.
 - Is an input mode selected that is appropriate for the input terminal to which the cable is connected? (See [page 24](#) and [page 27.](#))
 - If any external equipment is connected, make sure the equipment is operating (playing back).
- Load noises from outside may be interfering with normal operation. Turn off the main power and turn it on after waiting at least 5 seconds, and then check the operation.

There is a picture but no sound.

- Is the sound muted?
- Make sure the volume is not set to minimum.
- Are audio cables connected properly?
- Is the audio output set correctly?
- Check that the connected devices support audio signals.
- Is a USB speaker or Bluetooth speaker connected?
- Is Mute with STILL ON set to on?

Unstable video.

- The signal may be incompatible.

The video from the HDMI input terminal does not appear properly.

- Does the HDMI cable support 4K, and is it HDMI standard compliant? The monitor will not work with cables that are not standard compliant.
- Is the input signal compatible with this monitor? (See [page 63](#) and [page 64.](#))
- If the connected device does not support 4K, set "HDMI Mode" to "Mode2".

The video from the USB Type-C does not appear properly.

- Is the input signal compatible with this monitor? (See [page 63](#) and [page 64.](#))
- This monitor has been verified to operate only with source devices supporting a four-lane internal DisplayPort signal and with USB-C cables.
Therefore, if you use a source device or USB-C cable for two-lane signal, the monitor might not operate properly.
If the monitor does not operate, use a device or cable that supports four-lane compatibility.

The screen is dark.

- When the internal temperature of the monitor rises excessively, the brightness of the backlight automatically decreases in order to prevent a further temperature rise.
- Remove the cause of the excessive temperature rise.

The input mode changes automatically.

- When "Auto Input Change" is set to "Last Detect", the input mode automatically changes to that terminal when a video signal is input into the input terminal.
For this reason, the input mode may change when the computer wakes up from system standby.
- When "Auto Input Change" is set to anything other than "None", if the signal for the selected input mode is lost and a signal is detected at another input terminal, the input mode will automatically switch to that terminal.
The input mode may change in the following cases:
 - When a computer is in standby state.
 - When video play is stopped with a playback device.
- Is "HDMI CEC link" set to on? (See [page 49.](#))

There are dots that do not light up or remain lit on the screen.

- This is due to the characteristics of the LCD panel and is not a defect.
- LCD panel used in this monitor is made with the application of high precision technology. However, there may be minute points on the screen where pixels never light or are permanently lit.

The display brightness is uneven.

The display colors are uneven.

- This is due to the characteristics of the LCD panel and is not a defect.
Depending on the viewing angle, some inconsistency in the colors or brightness may occur.

Image persistence

- This is due to the characteristics of the LCD panel and is not a defect.
Do not display a still picture for a long period, as this could cause a residual image. The image retention effect can be gradually reduced by displaying moving images or videos. However, the image retention effect may become permanent if the same image is displayed for an extended period of time.

■ Operations

Remote control does not work.

- Are the batteries inserted with polarity (+,-) aligned? (See [page 16.](#))
- Are the batteries exhausted?
- Point the remote control unit toward the monitor's remote control sensor. (See [page 17.](#))
- Are remote control operations restricted? (See [page 57.](#))
- Do the remote control numbers on the remote control unit and on the monitor match? (See [page 56.](#))

The remote control unit's buttons for operating the HDMI connected device do not work.

- Is "HDMI CEC link" set to on under "Input & Output" on the Admin Settings menu? (See [page 49.](#))
- Switch to a different input mode, and then try switching the input mode back to HDMI.

Control buttons do not work.

- Load noises from outside may be interfering with normal operation. Turn off the main power and turn it on after waiting at least 5 seconds, and then check the operation.

Cannot be controlled via RS-232C.

- Is the RS-232C cable (crossover type) connected correctly? (See [page 14.](#))

Cannot be controlled via LAN.

- Is the LAN cable connected correctly? (See [page 14.](#))
- Are the LAN settings set correctly?
- Is "Monitor Control" turned on? (See [page 50.](#))
- Are "User Name", "Password", and "Port" correct?

■ Touch Panel

The touch panel does not respond.

- Is the USB cable connected properly?
- Are touch pens that are supplied touch pens?
- Is there anything attached to the screen?
Something attached to the screen may prevent correct operation.

The response of the touch panel is slow.

Some parts of the screen do not respond.

A different place is touched.

- Is the screen exposed to direct sunlight or other strong light? The touch panel uses infrared rays and thus may not operate correctly.
- Is there an obstacle between the infrared transmitter/receiver and the touch pen or your finger? An obstacle will prevent correct operation. If your fingers or a sleeve are too close to the screen, correct operation will not be possible.
- Is the infrared transmitter/receiver dirty? Gently wipe off any dirt with a soft cloth.
- If the touch panel is touched with a small tip less than about 1/16 inch (2 mm) x 1/16 inch (2 mm), the touch may not be detected by infrared and correct operation will not take place.
- Do not touch the touch panel when turning on the monitor. If you touch the touch panel, this may be detected as an element failure in the infrared transmitter/receiver and incorrect operation will result.
- Set the screen size to "Wide". (See [page 29.](#))
- Is there interference with another display? Changing the placement or orientation may resolve the problem.

Incorrect touch.

- If the display resolution and desktop resolution are different (e.g., this monitor receives a 16:9 signal, but the desktop shows a 4:3 aspect ratio with black bars on the left and right), then the touch function may not work correctly. If changing the screen size by SIZE function doesn't resolve the issue, try using a 16:9 desktop resolution on the connected device.
- If the monitor is used in portrait orientation, the touch position may not match with an OS other than Windows. (PN-LB753/PN-LB653)

■ Other

The monitor makes a cracking sound.

- You may occasionally hear a cracking sound from the monitor. This happens when the cabinet slightly expands and contracts according to change in temperature. This does not affect the monitor's performance.

Power LED is flashing in red.

- When the internal temperature of the monitor rises excessively, the brightness of the backlight decreases automatically in order to prevent high-temperature-related problems. If the brightness drops due to abnormal temperature, the power indicator will flash red, and will continue to flash red even if the unit transitions to power standby state.
- Remove the cause of the excessive temperature rise.
 - If the monitor enters standby state due to a rise in temperature, to return to normal display, turn the power switch off and then back on again. The monitor, however, will enter standby state again if the cause of the temperature rise is not eliminated. (See [page 8](#).)
 - Check whether the monitor is placed at a location where a quick rise in temperature is likely. Internal temperature rises quickly if the vents on the monitor are blocked.
 - Internal temperature rises quickly if dust accumulates inside the monitor or around the vents. Remove dust if possible. Ask SHARP dealer about removing internal dust.

No sound is heard from the speaker.

Mic cannot be used.

Web camera cannot be used.

- Check if another device is connected via the USB or Bluetooth.
- If more than one equivalent devices are connected, they will be used in the following order:
USB > Bluetooth (speaker only) > HDMI(ARC)(speaker only) > Internal (speaker only)
- Remove unnecessary devices.
- The mic of the Bluetooth headset cannot be used. This monitor does not support HSP/HFP.
- Is another application using the device? The device may not work at the same time in multiple applications. In this case, close the application.
- Do not switch the input mode while using the device. The connection will change according to the input mode switching, so speaker, mic or camera may not be recognized correctly and may not operate.
In this case, turn this monitor or device power off and then on.

The Bluetooth device cannot be connected.

The connection with the Bluetooth device is lost.

- Connect the USB extension cable (commercially available) to the USB port for HOME mode, and connect the wireless adapter (supplied) to the USB extension cable (commercially available). Place the wireless adapter (supplied) where it can be seen from the front of this monitor.

USB hub cannot be used.

- Are "Enable USB Drive" set to "ON" and "USB Port Select" set to "Auto" in "Advanced" of "Protect" in "Admin Settings"?
- Is "USB Power" set to "Auto" in "Power Save Settings" of "Protect" in "Admin Settings"?

Specifications

■Product Specifications

Model		PN-LB863	PN-LB753	PN-LB653
LCD component		86" Class [85-9/16 inch (217.4 cm) diagonal] TFT LCD	75" Class [74-1/2 inch (189.3 cm) diagonal] TFT LCD	65" Class [64-1/2 inch (163.9 cm) diagonal] TFT LCD
Max. resolution (pixels)		3840 x 2160		
Max. colors		Approx. 1.07 billion colors		
Pixel pitch		0.494 mm (H) × 0.494 mm (V)	0.43 mm (H) × 0.43 mm (V)	0.372 mm (H) × 0.372 mm (V)
Brightness (typical)		500 cd/m ² *1		
Contrast ratio (typical)		1200 : 1	1500 : 1	
Viewing angle		178° right/left/up/down (contrast ratio ≥ 10)		
Screen active area inch (mm)		74-5/8 (W) x 41-15/16 (H) (1895.04 x 1065.96)	65 (W) x 36-9/16 (H) (1650.24 x 928.26)	56-1/4 (W) x 31-5/8 (H) (1428.48 x 803.52)
Response speed (standard value)		8 ms (Gray to Gray, Ave.)		
Plug and play		VESA DDC2B		
Input terminals	Video / Audio	HDMI x 3 USB Type-C x 1: Used also for touch panel		
	Serial (RS-232C)	D-sub 9 pin x 1		
	For control kit	3.5 mm mini stereo jack x 1		
Output terminals	Video / Audio	HDMI x 1: Supports mirroring output and MST output for DisplayPort Alt Mode input.		
	Audio	3.5 mm mini stereo jack x 1		
USB port		USB 3.0 Type-A x 2 / USB 3.0 Type-C x 1 / USB 2.0 Type-A x 2		
LAN terminal		10BASE-T/100BASE-TX/1000BASE-T x 2 (IEEE802.1X compliant)		
System	OS	Android 14		
	CPU	Arm Cortex-A73 processor x 4, Cortex-A53 processor x 4		
	Memory	8 GB		
	Storage	64 GB		
Wireless LAN		IEEE802.11ax/ac/n/a/g/b compliant Encryption mode: WPA/WPA2-Personal, WPA3-Personal, WPA/WPA2/WPA3-Enterprise		
Bluetooth		5.3 compliant Supported protocols: A2DP, AVRCP, GATT, HID		
Expansion slot		18V, 3.6A (power supplied when expanding the functions with an optional part)		
Speaker output		15 W + 15 W		
Touch Panel	Detection method	Infrared blocking detection method		
	Computer connector	USB 3.0 Type-B x 1 / USB Type-C x 1: Used also for video and audio		
Power requirement		AC 100 V - 240 V, 5.8 A - 2.4 A, 50/60 Hz	AC 100 V - 240 V, 4.7 A - 2.0 A, 50/60 Hz	AC 100 V - 240 V, 4.2 A - 1.8 A, 50/60 Hz
Operating temperature*2*3		41°F to 95°F (5°C to 35°C)		
Operating humidity*3		20% to 80% (no condensation)		
Storage temperature		-4°F to 140°F (-20°C to 60°C)		
Storage humidity		10% to 80% (no condensation)		
Power consumption*4 (networked standby mode*5 / standby mode*6 / off mode)		245 W (2.0 W/0.5 W/0.0 W)	170 W (2.0 W/0.5 W/0.0 W)	140 W (2.0 W/0.5 W/0.0 W)
Dimensions inch (mm) (excluding protrusions)		Approx. 76-15/16 (W) x 3-7/16 (D) x 44-5/16 (H) (1954 x 87 x 1125)	Approx. 67-1/4 (W) x 3-7/16 (D) x 38-7/8 (H) (1708 x 87 x 987)	Approx. 58-9/16 (W) x 3-7/16 (D) x 33-15/16 (H) (1487 x 87 x 862)
Weight lbs. (kg)		Approx. 132.3 (60)	Approx. 105.9 (48)	Approx. 77.2 (35)

*1 Brightness will depend on input mode and other picture settings. Brightness level will decrease over time. Due to the nature of the equipment, it is not possible to precisely maintain a constant level of brightness. This is the brightness of the LCD panel.
Brightness of product: 450 cd/m²

*2 Temperature condition may change when using the monitor together with the optional equipment recommended by SHARP.
In such cases, please check the temperature condition specified by the optional equipment.

*3 In addition, check the requirements of the computer and other devices to be connected, and make sure that all requirements are satisfied.

*4 Factory setting. (When no optional part is attached.)

*5 When no optional part is attached. Standby time until transitioning to networked standby mode: About 60 sec. (setting at the time of shipment from the factory).

*6 When no optional part is attached. Standby time until transitioning to standby mode: About 60 sec. (setting at the time of shipment from the factory).


As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Specifications


■ Dimensional Drawings

Note that the values shown are approximate values.


[PN-LB863]

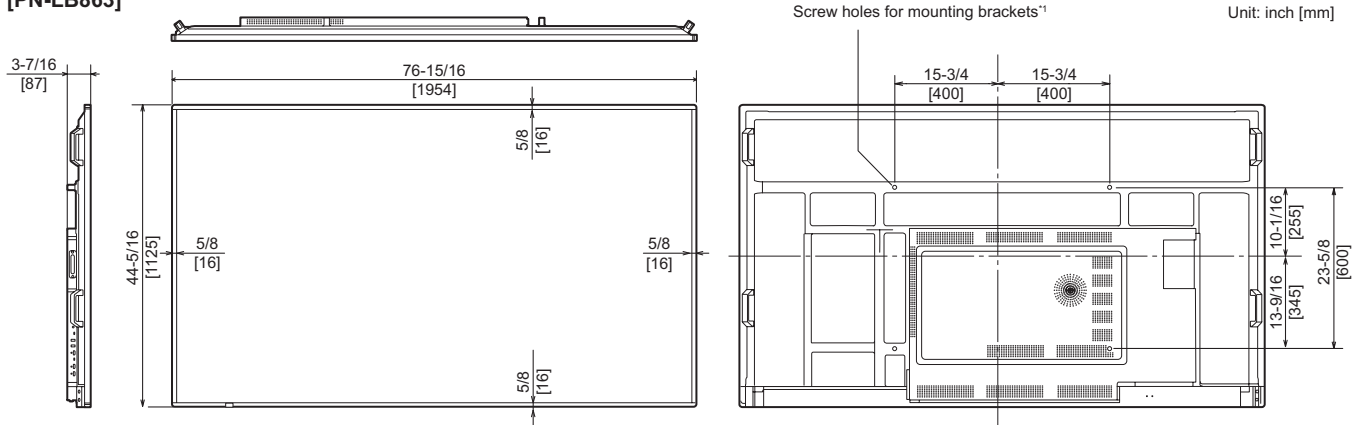

[PN-LB753]

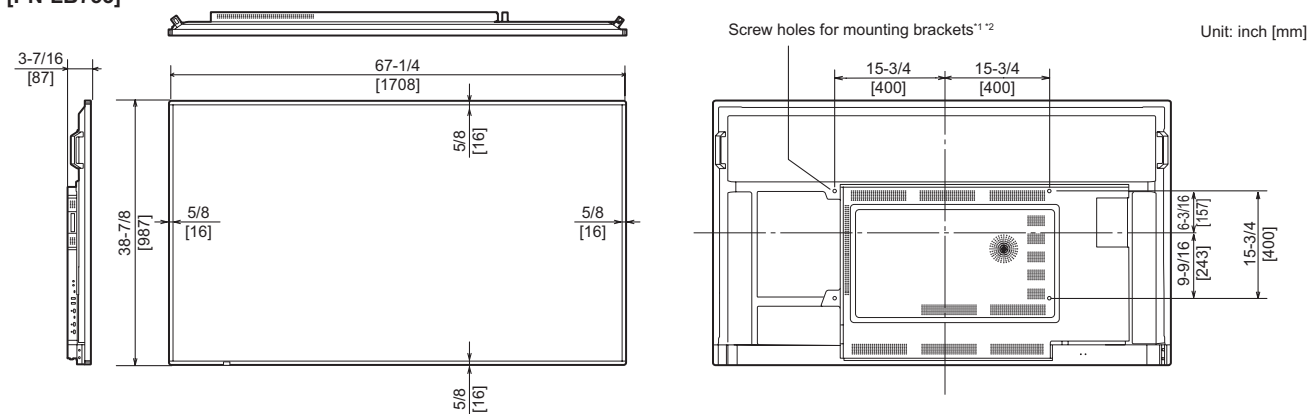

[PN-LB653]

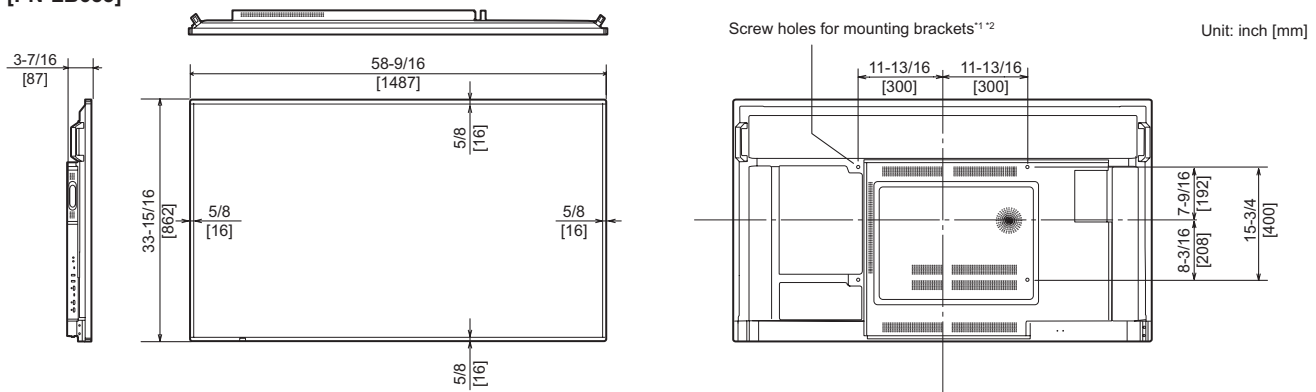

*1 When mounting the monitor, be sure to use a wall-mount bracket that complies with the VESA-compatible mounting method. SHARP recommends using M8 screws and tighten the screws.

Note that screw hole depth of the monitor is 9/16 inch (15 mm). Loose mounting may cause the product to fall, resulting in serious personal injuries as well as damage to the product. The screw and hole should come together with over 3/8 inch (10 mm) length of thread. Use a bracket which has been approved for UL1678 standard, and which can endure at least 4 times or more the weight of the monitor.

*2 When installing the monitor in portrait orientation, the screw holes are not in the exact centre of the monitor. Please check the position before fixing the wall mount.

■DDC (plug and play)

The monitor supports the VESA DDC (Display Data Channel) standard.

DDC is a signal standard for plug and play between monitors and computers. Information about resolution and other parameters is exchanged between the two. This function can be used if the computer supports DDC and it has been configured to detect plug-and-play monitors.

There are several types of DDC, depending on the communication method used. This monitor supports DDC2B.

■Compatible signal timing (PC)

Screen resolution		Vsync	HDMI		USB-C
			Mode1	Mode2	
VESA	640 × 480	60Hz	Yes	Yes	Yes
	800 × 600	60Hz	Yes	Yes	Yes
	1024 × 768	60Hz	Yes	Yes	Yes
	1280 × 960	60Hz	Yes	Yes	Yes
	1280 × 1024	60Hz	Yes	Yes	Yes
	1440 × 900	60Hz	Yes	Yes	Yes
	1680 × 1050	60Hz	Yes	Yes	Yes
Wide	1280 × 720	60Hz	Yes	Yes	Yes
	1920 × 1080	60Hz	Yes	Yes	Yes
	3840 × 2160	24Hz	Yes	Yes	Yes
		25Hz	Yes	Yes	Yes
		30Hz	Yes	Yes	Yes
		50Hz	Yes	-	Yes
		60Hz	Yes	-	Yes
	4096 × 2160* ¹	24Hz	Yes	Yes	Yes
		25Hz	Yes	-	Yes
		30Hz	Yes	-	Yes
		50Hz	Yes	-	Yes
		60Hz	Yes	-	Yes
US TEXT	720 × 400	70Hz	Yes	Yes	Yes

*1 Displays a reduced image, except in "1:1". In "1:1", the image will be cut down to panel size then displayed.

- Depending on the connected computer, images may not be displayed properly even if the compatible signal described above is input.

Specifications

■Compatible signal timing (AV)

Screen resolution	Frequency	HDMI	
		Mode1	Mode2
4096 × 2160p	24Hz	Yes	Yes
	25Hz	Yes	-
	30Hz	Yes	-
	50Hz	Yes	-
	59.94Hz	Yes	-
	60Hz	Yes	-
3840 × 2160p	24Hz	Yes	Yes
	25Hz	Yes	Yes
	30Hz	Yes	Yes
	50Hz	Yes	-
	59.94Hz	Yes	-
	60Hz	Yes	-
1920 × 1080p	24Hz	Yes	Yes
	50Hz	Yes	Yes
	59.94Hz	Yes	Yes
	60Hz	Yes	Yes
1920 × 1080i	50Hz	Yes	Yes
	59.94Hz	Yes	Yes
	60Hz	Yes	Yes
1280 × 720p	50Hz	Yes	Yes
	59.94Hz	Yes	Yes
	60Hz	Yes	Yes
720 × 576p	50Hz	Yes	Yes
720 × 480p	59.94Hz	Yes	Yes
	60Hz	Yes	Yes
640 × 480p(VGA)	59.94Hz	Yes	Yes
	60Hz	Yes	Yes
720(1440) × 576i	50Hz	Yes	Yes
720(1440) × 480i	59.94Hz	Yes	Yes
	60Hz	Yes	Yes

■Channels that can be used in wireless LAN (US and Canada)

Standard	Channel	Frequency band (center frequency)
IEEE802.11 b/g/n/ax	1-11ch	2412-2462MHz
IEEE802.11 a/n/ac/ax	36/38/40/42/44/46/48ch	5180-5240MHz
	52/54/56/58/60/62/64ch	5260-5320MHz
	100/102/104/106/108/110/112/116/132/134/136/140ch	5500-5700MHz
	149/151/153/155/157/159/161/165ch	5745-5825MHz

■Channels that can be used in wireless LAN (Europe)

Standard	Channel	Frequency band (center frequency)
IEEE802.11b/g/n/ax	1-13ch	2412-2472MHz
IEEE802.11a/n/ac/ax	36/38/40/42/44/46/48ch	5180-5240MHz
	52/54/56/58/60/62/64ch	5260-5320MHz
	100/102/104/106/108/110/112/116/118/120/122/124/126/128/132/134/136/140ch	5500-5700MHz

- Outdoor use of the 5 GHz band is restricted by the Radio Law.

■Channels that can be used in wireless LAN (Asia/Pacific)

Standard	Channel	Frequency band (center frequency)
IEEE802.11b/g/n/ax	1-13ch	2412-2472MHz
IEEE802.11a/n/ac/ax	36/38/40/42/44/46/48ch	5180-5240MHz
	52/54/56/58/60/62/64ch	5260-5320MHz

- Outdoor use of the 5 GHz band is restricted by the Radio Law.

Intellectual Property Rights and Other Matters

■ Information on the software license for this product

Software composition

The software included in this product is comprised of various software components whose individual copyrights are held by SHARP or by third parties.

Software developed by SHARP and open source software

The copyrights for the software components and various relevant documents included with this product that were developed or written by SHARP are owned by SHARP and are protected by the Copyright Act, international treaties, and other relevant laws. This product also makes use of freely distributed software and software components whose copyrights are held by third parties. These include software components covered by a GNU General Public License (hereafter GPL), a GNU Lesser General Public License (hereafter LGPL) or other license agreement.

Obtaining source code

Some of the open source software licensors require the distributor to provide the source code with the executable software components. GPL and LGPL include similar requirements. For information on obtaining the source code for the open source software and for obtaining the GPL, LGPL, and other license agreement information, visit the following website:

https://jp.sharp/business/lcd-display/support/download/source_e.html

We are unable to answer any questions about the source code for the open source software. The source code for the software components whose copyrights are held by SHARP is not distributed.

About the MPEG-4 AVC, MPEG-4 Visual license included in this product

1. MPEG AVC

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)


2. MPEG-4 Visual

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Mounting Precautions

(For SHARP dealers and service engineers)


- When installing, removing or moving the monitor, ensure that this is carried out by at least 3 people. (PN-LB863: at least 4 people.)
- Be sure to use a wall-mount bracket designed or designated for mounting the monitor.
- This monitor is designed to be installed on a concrete wall or pillar. Reinforced work might be necessary for some materials such as plaster / thin plastic board / wood before starting installation.
- This monitor and bracket must be installed on a wall which can endure at least 4 times or more the weight of the monitor. Install by the most suitable method for the material and the structure.
- To attach a VESA-compliant mounting bracket, use M8 screws that are 3/8 inch (10 mm) to 9/16 inch (15 mm) longer than the thickness of the mounting bracket.

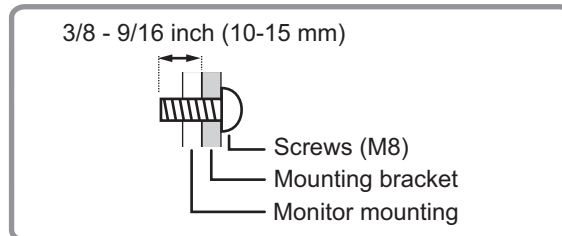

- Do not use an impact driver.
- When moving the monitor, be sure to hold it by the handles and around the main unit. Do not grasp the screen or control buttons. This may cause product damage, failure, or injury.
- After mounting, please carefully ensure the monitor is secure, and not able to come loose from the wall or mount.
- Do not use any screw holes other than those for mounting brackets, located on the rear of the monitor, for installation.
- If you need to temporarily place the monitor on a table or other surface during installation, spread a thick soft cloth on the table to prevent damage to the screen and table.

■Attaching player mount

Attach the player mount when installing an optional controller.

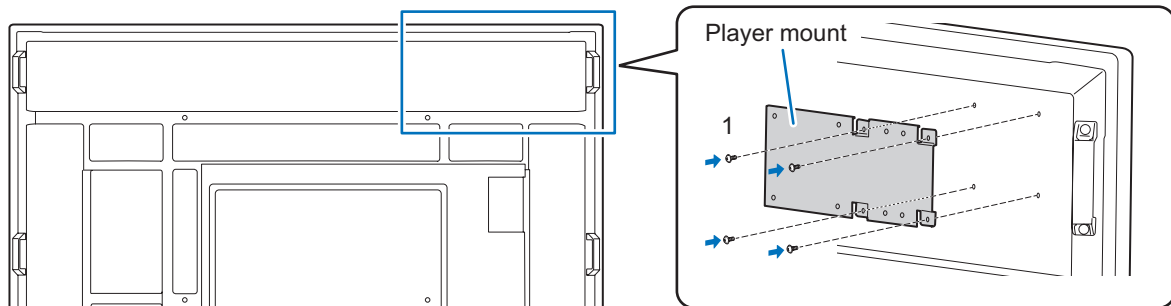

1. Attach the player mount with the player mount screw (M4x6) (supplied) (x4).

Mounting Precautions (For SHARP dealers and service engineers)

■Installing the option board

Option boards that comply with the Open Pluggable Specification (OPS) can be installed in an expansion slot.


NOTE

- If there are cables already connected, disconnect them all.
- Make sure the option board is inserted into the slot in the correct orientation.
- Do not apply excessive force to manipulate the option board before attaching it with screws.
- Fix the option board securely in place. Failing to do so could cause it to fall and injure someone.
- Keep the expansion slot cover and screws after you remove them.


TIP

- Contact your dealer for compatible optional boards.


1. Spread a thick, soft cloth (blanket, etc.) that will prevent damage to the LCD panel on a stable flat surface where the entire monitor can be placed, and place the monitor with the LCD panel face down on the cloth.

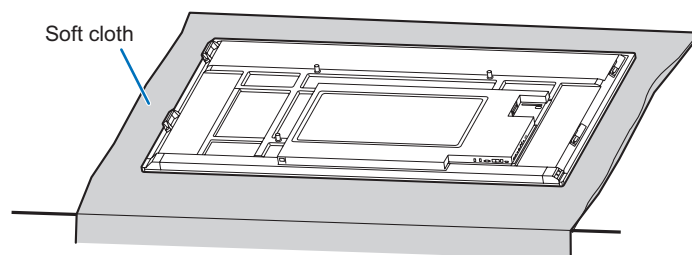

2. Remove the screws (x2) securing the expansion slot cover attached to this unit.

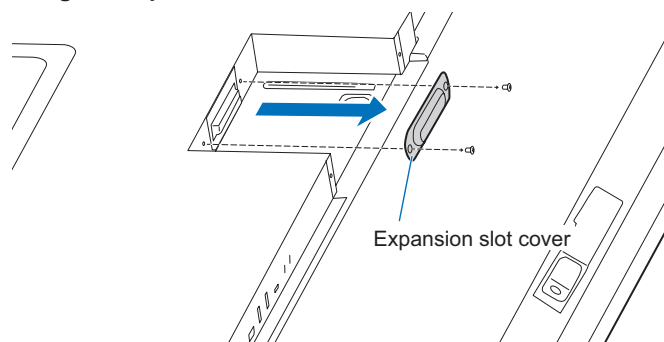

3. Use the OPS fixing screws (x2) provided with the option board to secure the option board to the unit.

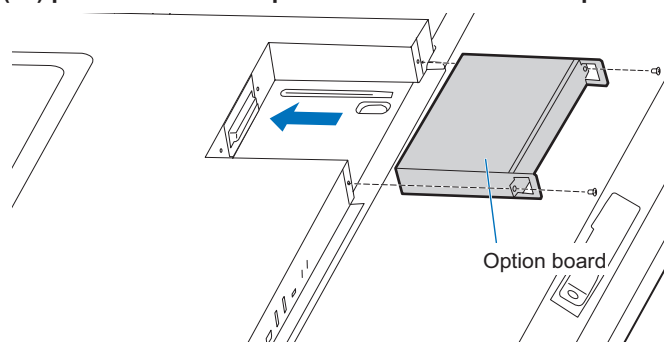

■Removing the option board

Assemble in the opposite order of the installation.

