


DLP-Link 3D Active Glasses


User's Guide

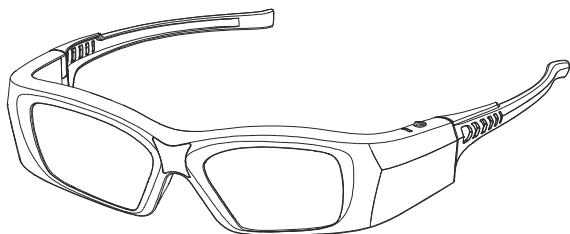

Model : C+D3PG

3D Active Glasses For DLP 3D Projectors and TVs

Product Features

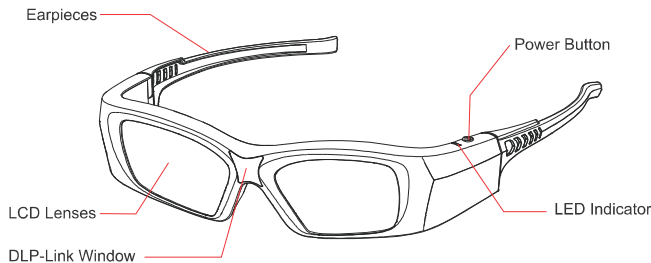

Charge the 3D glasses: Please charge your 3D glasses by connecting the 3D glasses to the USB port of your computer or the 3D glasses charger (sold separately) with supplied USB charging cable when they give low battery warning . Red LED indicator will keep lighting on until the charging is finished. A full charge may take 4 hours.

Operation Guide

Viewing 3D Contents with the DLP-Link 3D Active Glasses:

1. Turn on both your DLP 3D Ready projector and your 3D content source (such as a 3D Blu-ray player).
2. Set your DLP 3D Ready projector in "DLP 3D" BEFORE you turn on your content source like a 3D Blu-ray player. The Blu-ray player communicates with the projectors to determine whether or not the projector is capable of playing 3D content. If this communication occurs before you set the projector to 3D mode, the player will think that the projector is not capable of displaying a 3D image and will only play the video in 2D format. If this happens, turn the 3D Blu-ray player off, set the projector to 3D mode, and then turn the 3D Blu-ray player back on so the communication between the two can connect correctly.
3. Turn on your 3D content source. You can now press and release the Power ON/OFF button to turn on your DLP-Link 3D Glasses and start watching 3D content.

* The LED indicator will light on for 1.5s to indicate the glasses are turned on, If the battery is low , the LED indicator will blink once per second , please charge your 3D glasses if this happened.

Product Overview

This DLP-Link 3D active glasses are designed to be used with all 3D DLP projectors and 3D TVs . The DLP-Link 3D glasses ,equiped with high transmittance and high contrast ratio liquid crystal lenses, offer the brightest 3D visual experience.

Package Contents

1. DLP-Link 3D Active Glass x1
2. Storage Pouch x1
3. Cleaning Cloth x1
4. User's Guide x1
5. USB charging cable x1
6. Interchangeable Nosepiece x3

Specification

Shutters	LCD	Weight	39g
Refreshing rate	96/100/120/144HZ	Transmittance	38+/-2%
Working current	2.8mA	Contrast riato	1200:1
Power supply	Rechargeable battery	Sync operation	DLP-Link
Battery life	24 hours continuously working	Using range	>10m
Working Condition	Working temperature	0-40℃	
	Storage temperature	-5℃-50℃	

* Important Notice:

For a better performance of the battery, please follow the guide below when using:

- 1) continuously using the glasses until the LED give low battery warning blinking for the first time using, and then full charge the 3D glasses for at lest 12 hours;
- 2) If the glasses not being used, please fully charged the glasses at least one time within each 3 months.

4. Turn off your 3D glasses by pressing and holding the power button for about 1.5s after finish your 3D viewing.

* The LED indicator will blink 3 times to indicate the glasses are turned off. when the sync signal is blocked or the projector is exited "DLP 3D" mode, the glasses will turn off after 5min standby and will "wake up" if the signal is the sync signal is received within this period.

Maintain the 3D Active Glasses:

Clean the 3D active glasses with a clean and lint-free cotton cloth or with specified disposable lenses cleaning tissue.

Use Tips

The 3D glasses will activate their Auto OFF and Auto run intelligently in the following conditions.

1. The 3D glasses are standby (for a period of 5 minutes) when powered on, and they will turn into working mode once received the 3D sync signal during standby mode, otherwise, the glasses will automatically turn off with the green LED indicator blinking three times.
2. If the 3D glasses become disconnected with the SYNC signal because of : 1> incorrectdistance and or angle, 2> input source changed, 3> switched to 2D mode, they will automatically work for a period of 5 seconds. The glasses will resume working once a 3D sync signal is received, otherwise, the glasses will enter into standby mode(for 5 minutes).

Troubleshooting

Q1: What can I do if there is no 3D effect after I have put on and turned on the glasses ?

Try this:

1. Please check if the projector/TV setup is in DLP 3D mode or not.
2. Check the battery volume of your glasses, please change it if low in power
3. Make sure you are watching in 3D sync signal covered area .

Q2: Why do the lenses blink when watching 3D films ?

Try this:

1. Please change the battery immediately if the battery is seriously low.
2. Interference such as magnetic fluorescent lamps 50 or 60Hz may cause flickers, please turn off interference source if this occurs.