



WEEE report

COLOR MONITOR **Multi Sync EA242WU**

MODELS: EA242WU

1st Edition

 
NEC DISPLAY SOLUTIONS, LTD.

202206

DISASSEMBLY

- Before you disassemble the set, turn off power and pull out the power plug.
- Use the proper screwdriver. If oversize or undersize screwdriver is used, screws may be damaged.
- Assembly is reversed process of disassembly.
- Disassembly time: ≤ 15 minutes

1 Remove stand




2 Remove the rear cover

- Unscrew the screw and break apart latch






3 Remove the side metal support, foils, wires and speakers


- Unscrew the screws to remove side metal support and remove foils

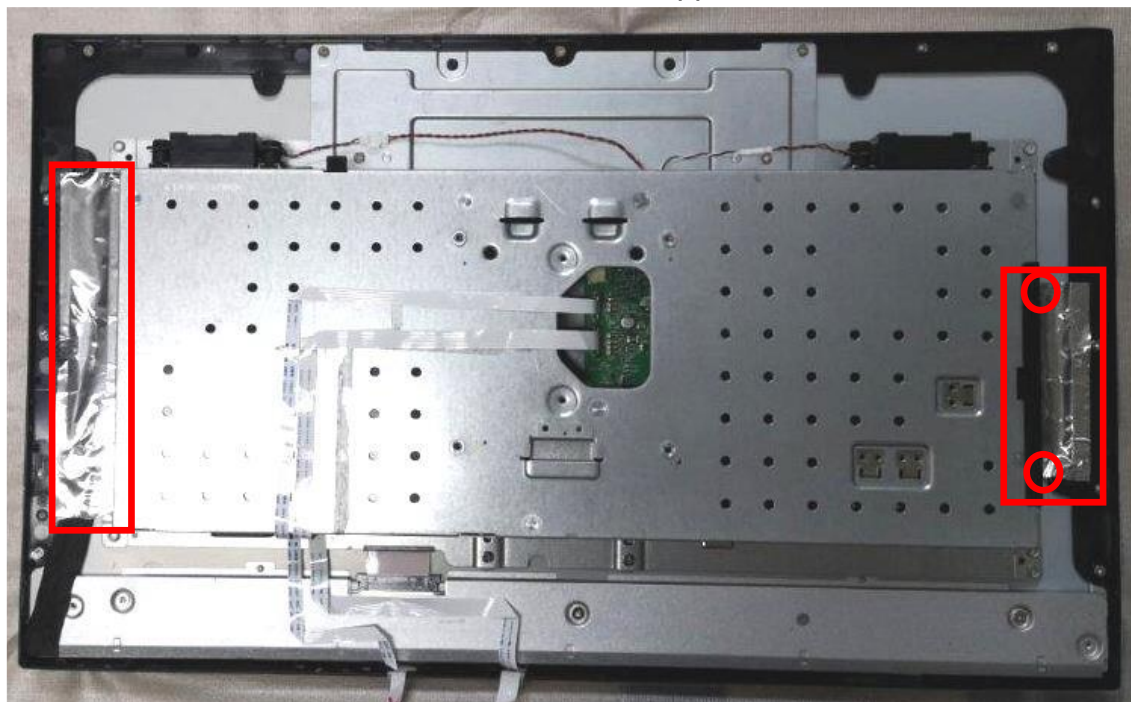

- Unlock the connector of wires

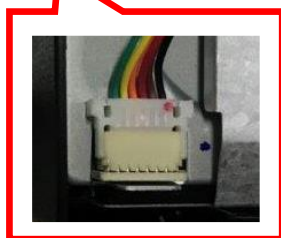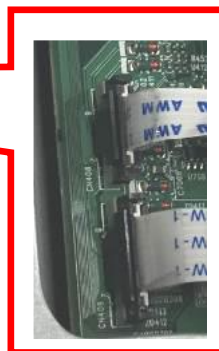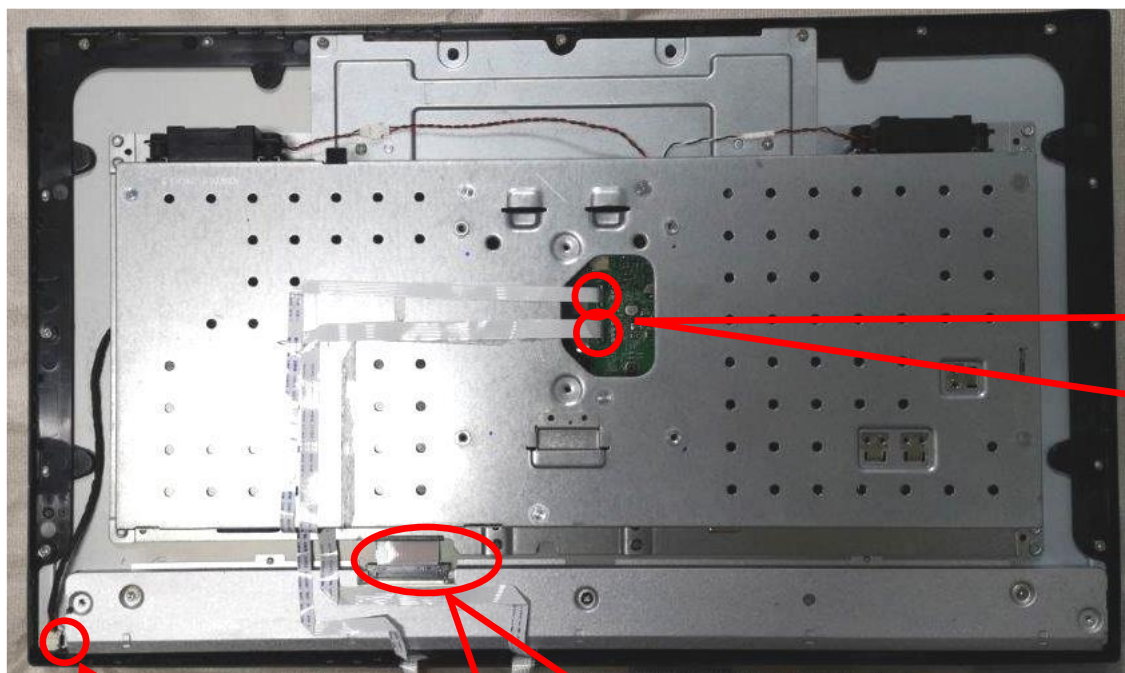


- Unscrew the speakers and remove the speakers

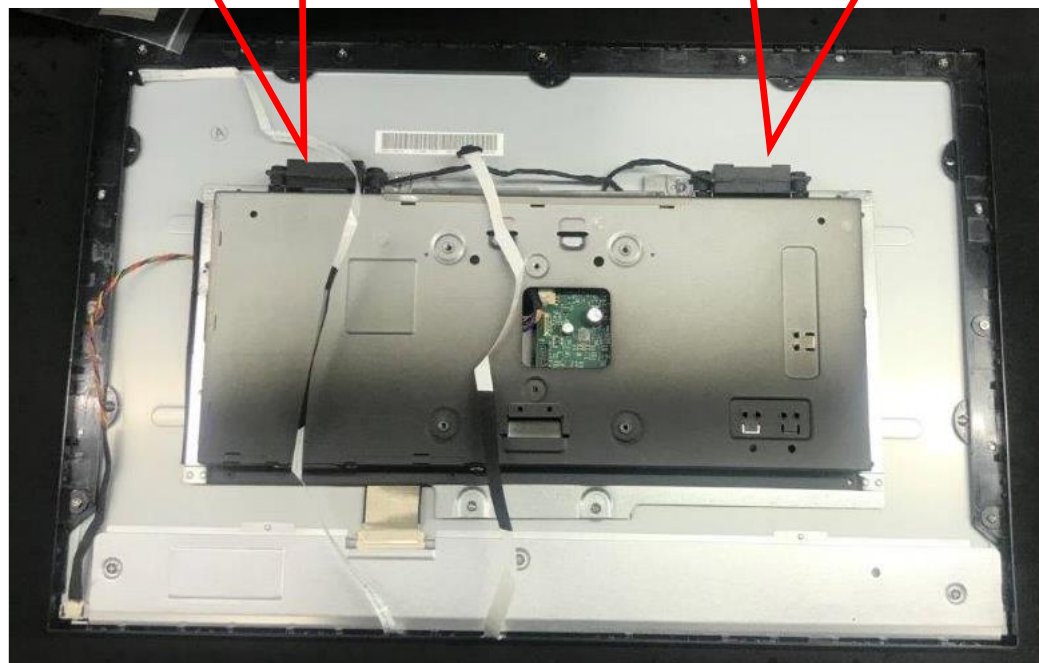


4 Remove the mid-frame, then remove the board

- Unscrew the screw marked below to remove the mid-frame

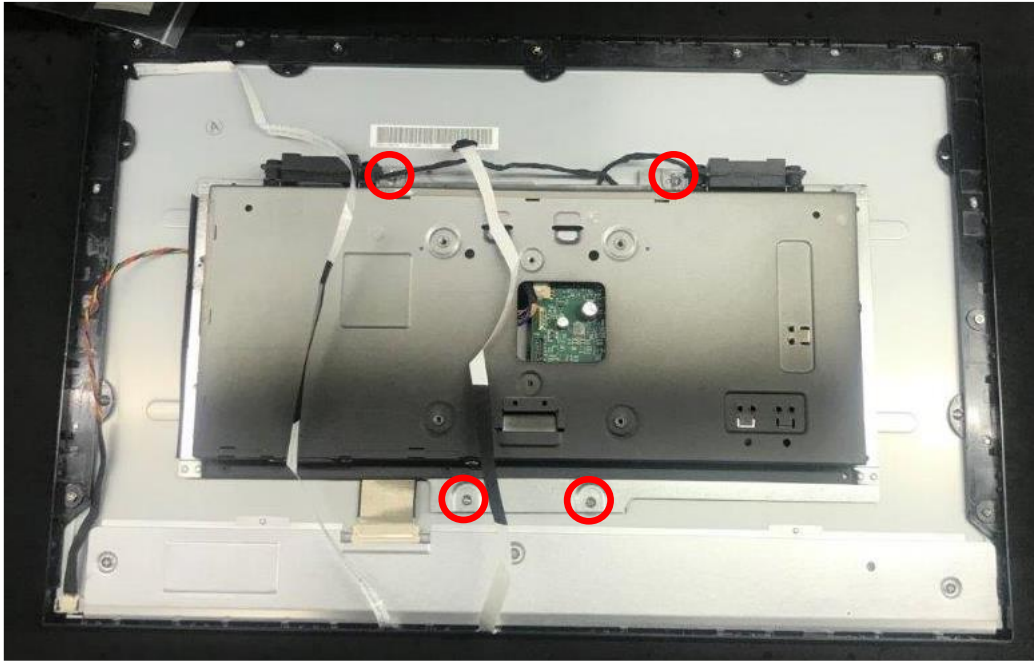


- Remove the Mylar, unscrew the screw marked below to remove the boards

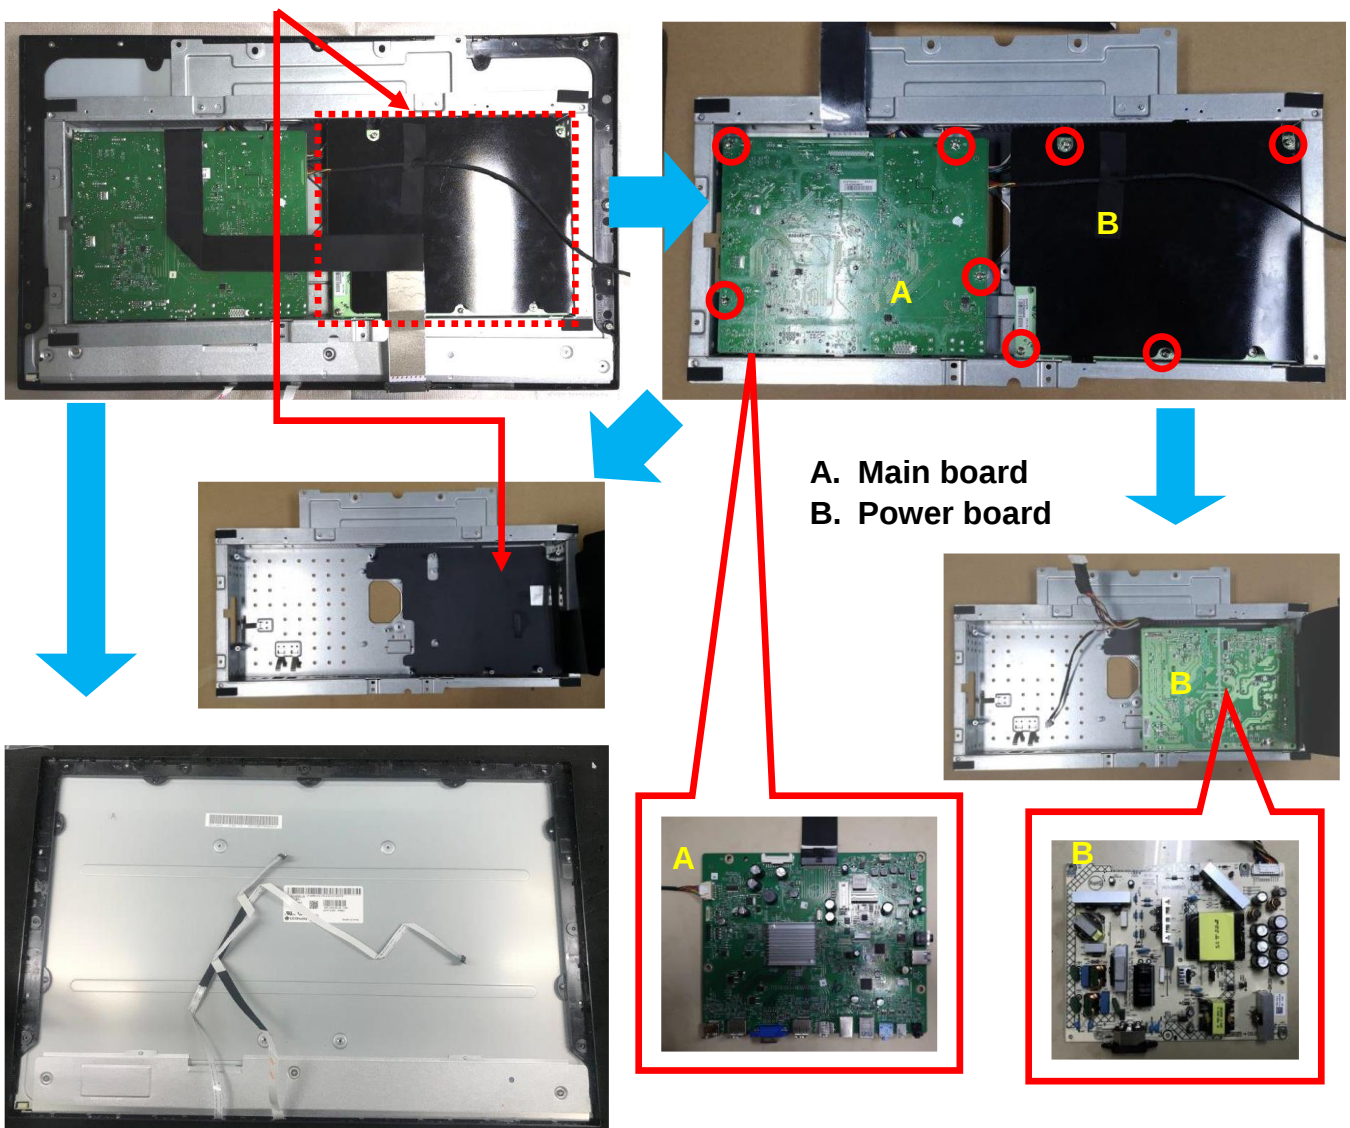


5 Remove bezel and panel

- Unscrew the screw marked below to remove the bezel

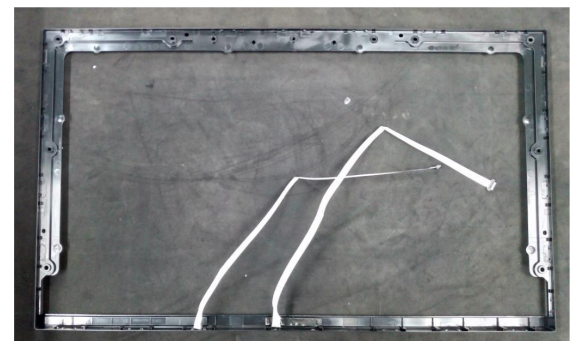

- Remove key board and light sensor board

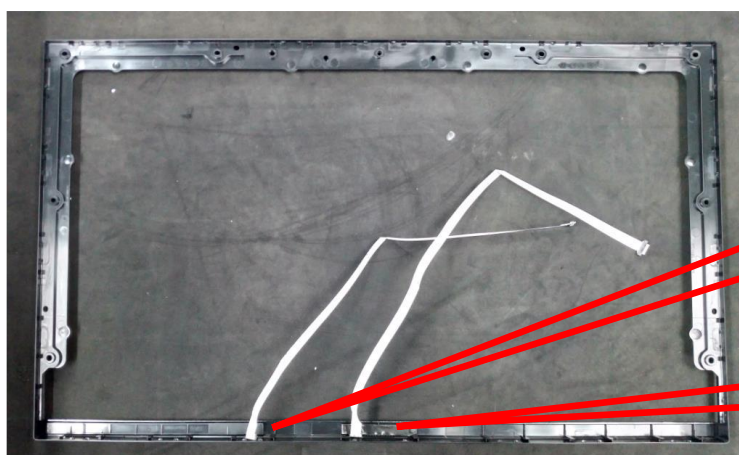

Special handling part:

Item	Part name	Quantity	WEEE Annex VII materials and components
A	Main board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²
B	Power board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²
C	Panel	1	Liquid crystal displays of a surface greater than 100cm ² and all those back-lighted with gas discharge lamps
D	Key board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²
E	LENS board	1	Printed circuit boards of mobile phones, and other PCBs whose surface is greater than 10cm ²

Package

