

NEC Projector User Supportware

Stacking Correction Tool

User's Manual



Introduction

Thank you for using the Stacking Correction Tool.

Please read this User's Manual carefully to aid in the proper use of this product before using the Stacking Correction Tool.

- The Stacking Correction Tool is software that uses the [GEOMETRIC CORRECTION] function of the NEC projector to easily perform stacked projection.



Terminology

In this manual, the term stacking correction is used to describe the following processes performed by the Stacking Correction Tool.

1. Photographing the projected images of multiple projectors with a digital camera or a web camera
2. Perform comparisons and calculations so that the content of the projected images is superimposed, and create the GEOMETRIC CORRECTION data
3. Send the [GEOMETRIC CORRECTION] data to each projector


NOTE

- (1) Unauthorized reproduction of a part of or all of the content of this manual is prohibited.
- (2) The content of this manual is subject to change without notice.
- (3) Great care has been given to the creation of the content of this manual; however, should you notice any questionable points, errors, or omissions, please contact us.
- (4) Notwithstanding section (3), NEC will not bear any responsibility for claims due to loss, lost profit, or other matters for reason of the use of this software.

Precautions in Projector Installation


- Please pay attention to the installation so that the positioning of the ventilation outlet and the ventilation inlet of adjacent projectors is not too close.

A projector taking in the exhaust of an adjacent projector will result in overheating or other faults.



- Do not physically stack projectors one above the other.


Projectors that are physically stacked could fall causing damage and breakdown of the projectors.

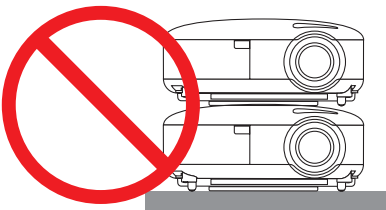

Installation Example Using 2 Projectors

In consideration of using this software, we recommend an installation like the following when the installation combines 2 projectors.

Installation Examples

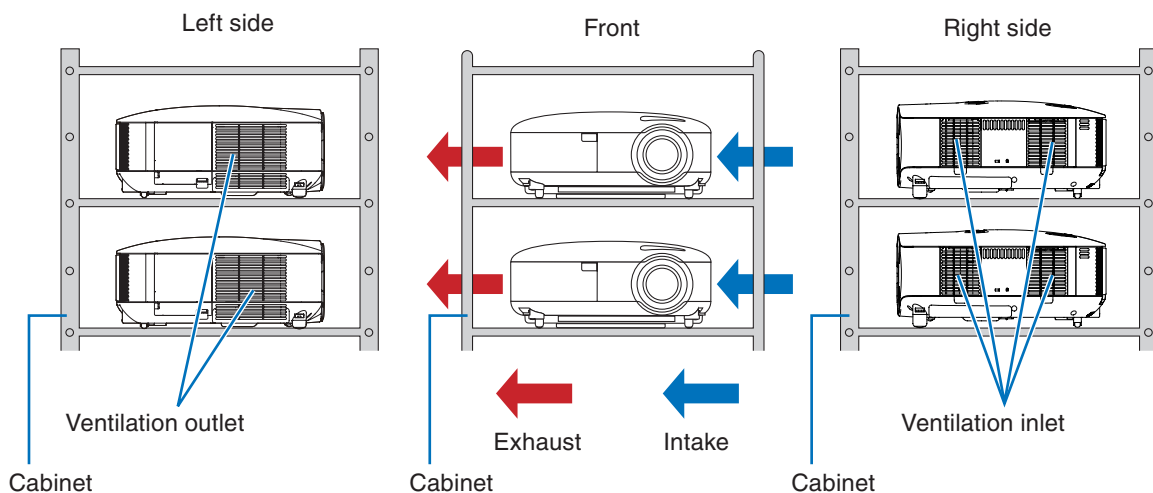

Warning

- Please request ceiling mount and other special installation at your store of purchase. Installation should never be undertaken by the customer. Doing so could result in the projectors falling or in injury. A strong cabinet that will support the weight of the projectors should be used in this installation. Do not stack the projectors directly one upon the other.



- Please see the user's manual of the projector for information about the range of projection distance.
- Leave sufficient space to the left and right of the projectors so that there is no obstruction of projector air intake and exhaust. Obstruction of air intake and exhaust will result in a rise of the internal temperature of the projector and will cause breakdown.

Please read the projector User's Manual for other installation precautions.

Restrictions on Projectors that Are to Be Installed

- Install all projectors on the same network.
- Set all projectors to the same resolution.
- Use the same model to the extent possible.
 - * When there is a difference in the brightness of the projectors, the digital camera or web camera might not accurately read the projection image at the time of calibration.
 - * There will also be a difference in brightness depending on the setting of the [LAMP MODE]; therefore, set the [LAMP MODE] to a uniform setting of either [NORMAL] or [ECO] for the projectors that are being installed.
- Please note that the use of this software for [DESKTOP REAR] and [CEILING REAR] projector projection methods is not supported.

Application Environment of the Stacking Correction Tool

The following personal computer environment is recommended to provide convenient use of digital cameras or web cameras when calibrating.

Windows Vista	Windows XP
Pentium 4, 2.4 GHz (A processor of 2.8 GHz or higher is recommended)	Pentium 4, 1.4 GHz, or AMD Athlon 1 GHz (A Pentium 4, 2.4 GHZ processor or higher is recommended)
512 MB RAM (1 GB or greater is recommended)	128 MB RAM (256 MB or greater is recommended)
1 GB or more of free hard disk space	1 GB or more of free hard disk space



Use of the Stacking Correction Tool should be performed by an "Administrator" for Windows Vista, and a "Computer Administrator" for Windows XP.

Required Components

.NET Framework 3.5

DirectX 9

Java (Version 6, update 7 or later)

Supported Equipment

Projector	NP3250/NP2250/NP1250/NP3250W*
Digital camera	Canon EOS Rebel XSi (in North America) Canon EOS 450D (in Germany)
Web camera	Logitech QuickCam® Pro 9000 Logitech QuickCam® Pro for Notebooks

* The number of pixels of the LCD panel of model NP3250W differs from that of the other 3 models; therefore, please use model NP3250W projectors with others NP3250W projectors.

Supported Screens

Only flat screens are supported. Curved screens are not supported.

Note also that proper calibration might not be possible for rear projection screens and other screens in which there is a large difference in brightness between the center and peripheral areas.

Steps up to Stacking Correction

Install the Stacking Correction Tool ➡ Page 7



Install and connect the computer, projector, digital camera, or web camera ➡ Page 11



Install the Stacking Correction Tool ➡ Page 14



Make adjustments to the projector, digital camera, or web camera



Projector preparation ➡ Page 18

Digital camera or web camera preparation ➡ Page 19

Perform the Stacking Correction ➡ Page 20

Table of Contents

Precautions in Projector Installation	3
Restrictions on Projectors that Are to Be Installed	3
Application Environment of the Stacking Correction Tool	4
Steps up to Stacking Correction	5
1. Installation of the Stacking Correction Tool	7
Installing the Stacking Correction Tool.....	7
Uninstalling the Stacking Correction Tool	10
2. Installation and Connection of Equipment.....	11
Connections for Stacking Correction	11
Connections for Projecting an Image	12
3. Stacking Correction Tool Settings.....	14
Starting the Stacking Correction Tool.....	14
Names of the Stacking Correction Tool Screen.....	14
Stacking Correction Tool Menu	15
Names of the Calibration Screen.....	16
4. Preparation of the Projectors.....	18
5. Preparation of the Digital Camera or Web Camera	19
6. Performing Stacking Correction	20
7. Calibration	23
8. List of Error Messages	25


1. Installation of the Stacking Correction Tool

Preparation: Save the downloaded Stacking Correction Tool file to the desired location


* The same installation procedure is used for Windows Vista and Windows XP.

Installing the Stacking Correction Tool

1. Double click SCTxxx.exe

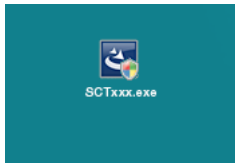

The installation screen will be displayed.

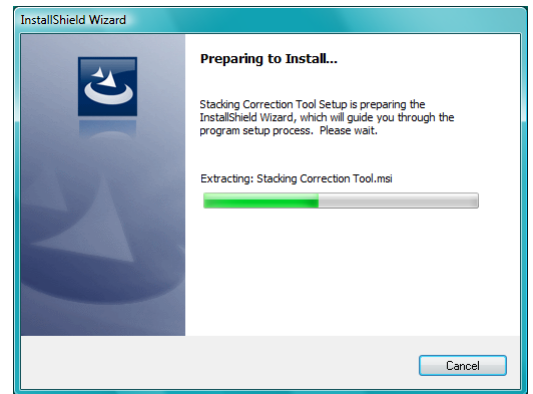

Java (version 6, update 7 or later) and .NET Framework 3.5 are required in the use of the Stacking Correction Tool. If these terms have not been satisfied, the screen to the right will be displayed when starting SCTxxx.exe. When [Install] is selected, a connection will be made with the Internet and downloading of the required component files from the distribution source site will begin.

When the download is completed, the setup program will start automatically. Follow the instructions on the screen and complete the setup.

* When making a new installation of .NET Framework 3.5 on Windows XP (i.e., an older version of .NET Framework has not been installed), the required component files will have a size of about 63 MB (and about 20 MB when using Windows Vista). It could take a considerable time from the start of downloading to the completion of installation. Also, if requested to restart Windows after installing .NET Framework 3.5, please follow the instructions and restart Windows. The installation of the Stacking Correction Tool will continue after restarting Windows.


* If connection cannot be made with the Internet, use another computer that can connect with the Internet and access the URL listed below, then download the required component files and use them.

[Java]

<http://www.java.com/en/>

[.NET Framework 3.5]


<http://msdn.microsoft.com/en-us/netframework/default.aspx>

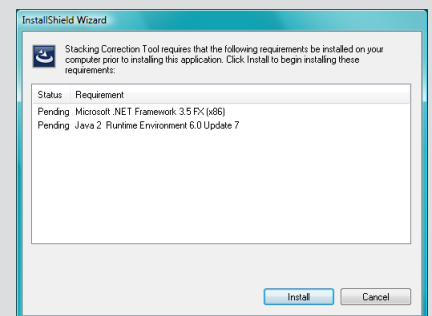

Java Installation Screen



.NET Framework 3.5 Installation Screen

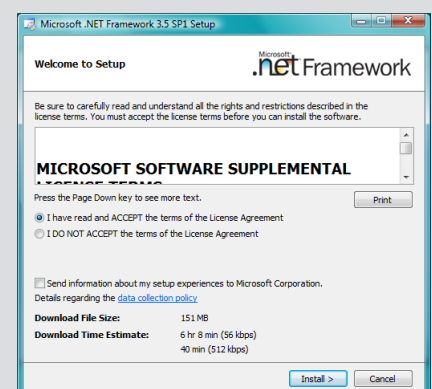

2. Select "I accept the terms in the license agreement" and click [Next].

Please read the content of the END USER LICENSE AGREEMENT carefully.

A screen for verifying the installation location will be displayed.

3. Click [Next]

To change the installation location, click [Change] and specify the installation location.

A screen notifying that the installation preparation has been completed will be displayed.

4. Click [Install]

The installation will begin.

As the installation proceeds, installation will start for applications required in the operation of the Stacking Correction Tool.






5. Click [OK]

A screen for verifying the installation location will be displayed.



Note


If a language selection screen is displayed, select the language and click [OK].

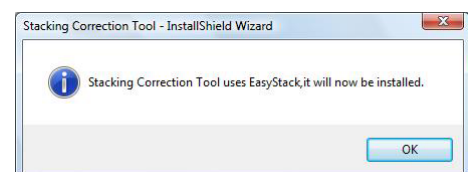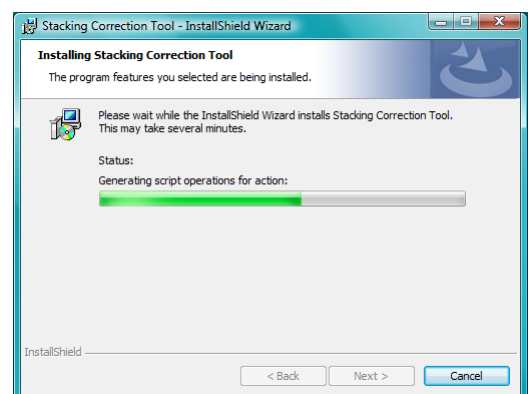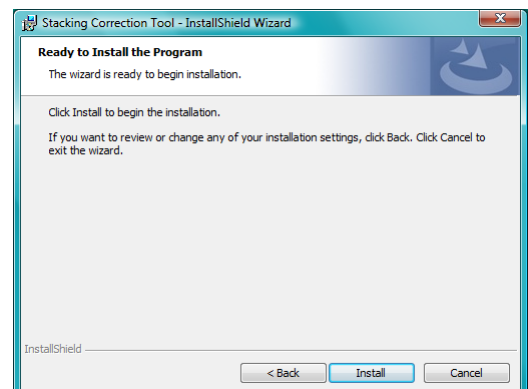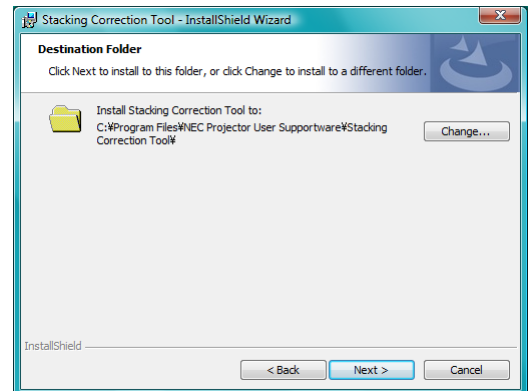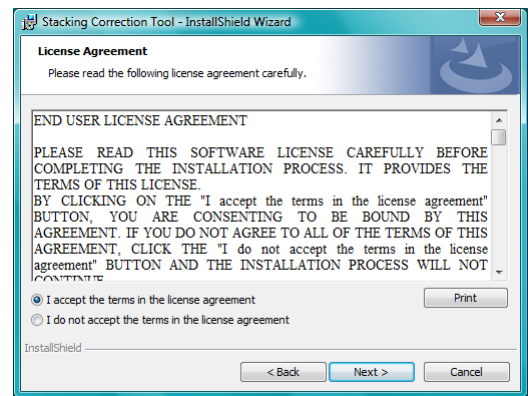

6. Click [Install]

The installation will start.

To change the installation location, click [Browse...] and specify the installation location.

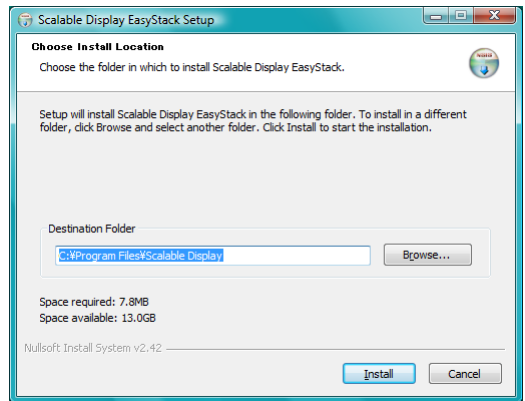


Note


DirectX 9 or later is required in the use of this application.

If these terms have not been satisfied, the screen to the right will be displayed.

Follow the instructions on the screen and complete the setup of DirectX 9.

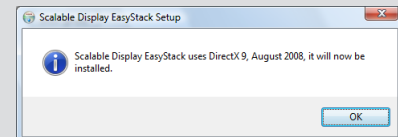



DirectX Installation Screen

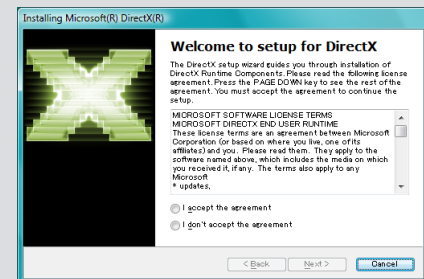

7. Click [Close]

This completes the installation of the Stacking Correction Tool.

Click [Finish] on the screen and close the setup program.

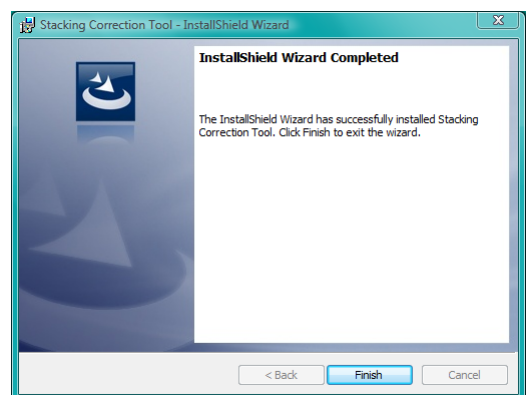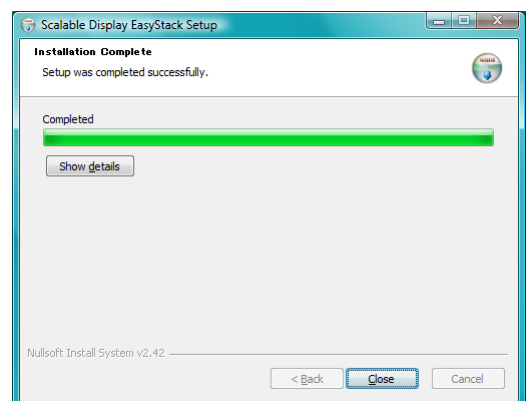

Uninstallation of the Stacking Correction Tool

Windows Vista


Select the Stacking Correction Tool from [Uninstall a program] under [Control Panel] and uninstall it.

Windows XP

Select the Stacking Correction Tool from [Add/Remove Programs] under [Control Panel] and uninstall it.

2. Installation and Connection of Equipment

Connections for Stacking Correction

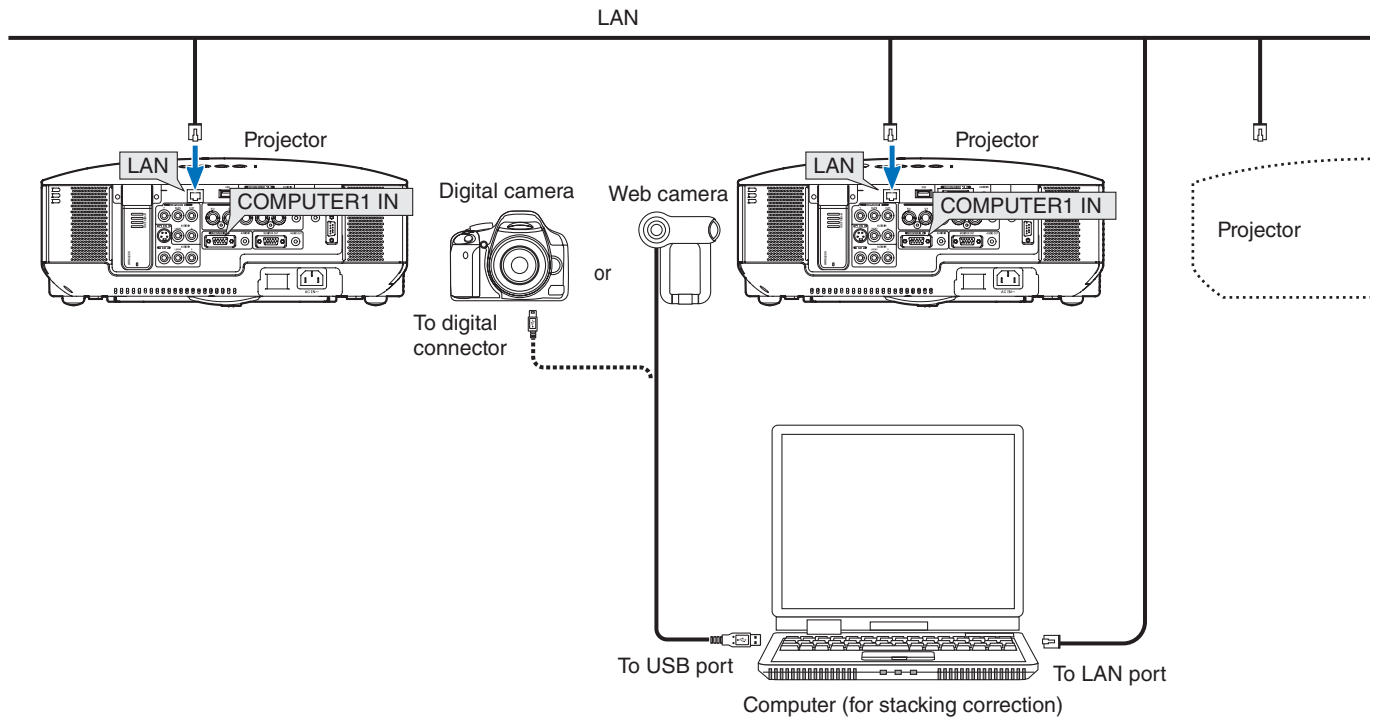


Note

- Install the digital camera or web camera facing the projection image.
- The photographic coverage of the digital camera or web camera is 30°.
- Plug each projector into a power outlet.
- Connect each of the projectors to the same network.
- Use LAN cable that supports Category 5 or higher for the connection to the network.

Connections for Projecting an Image


RGB Signal

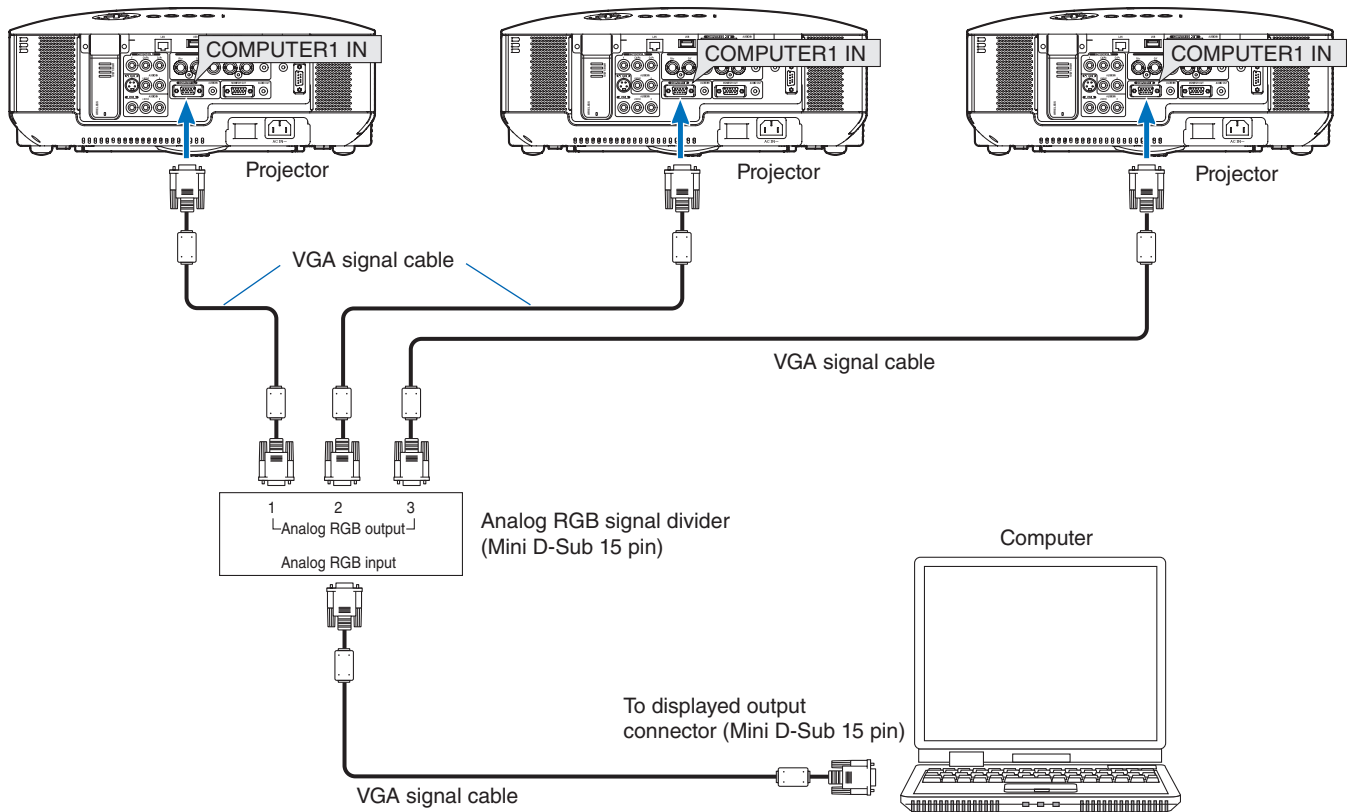

Note

- When the projectors are connected with a daisy chain connection, the RGB video signal will be attenuated and its projection might not be possible. Use an RGB signal divider as illustrated in the above connection diagram.

Daisy Chain Connection

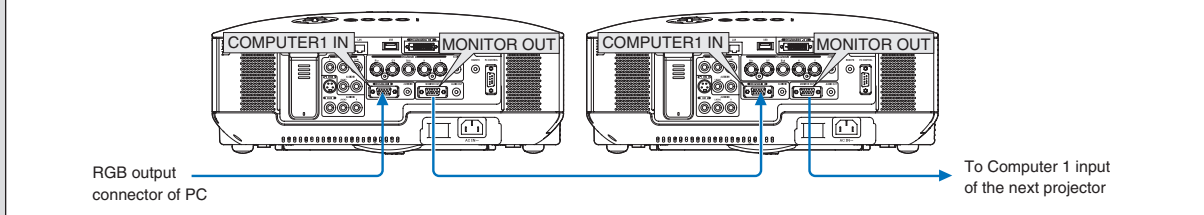


Reference


- Connections can also be made using commercially available BNC cable.

Make connections as illustrated in the diagrams below when connecting video equipment other than the computer (e.g., DVD players, S-video, etc.).

Component Signal

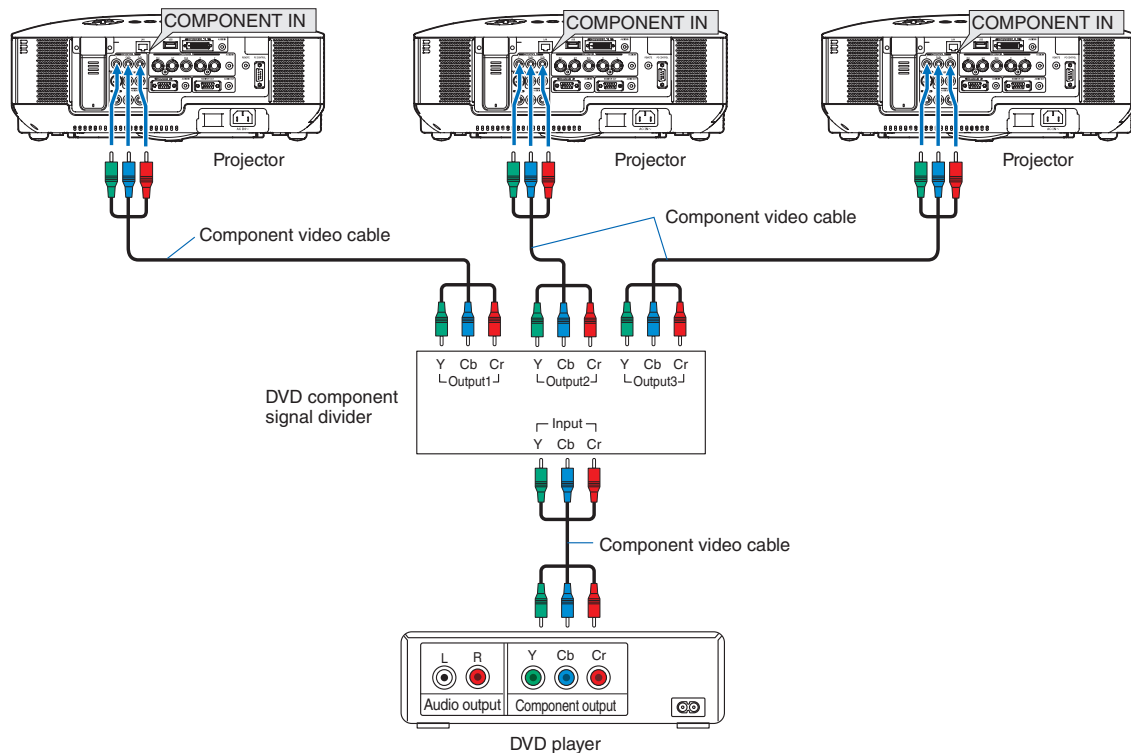

S-video signal

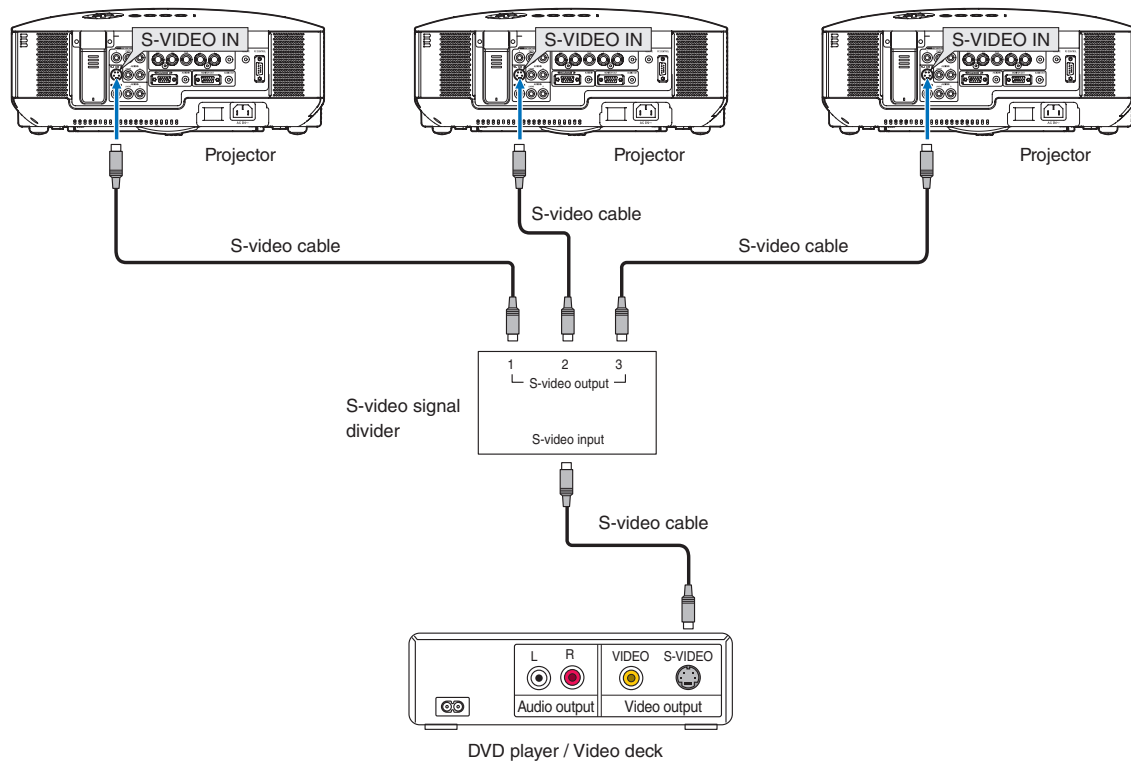

- Connections can also be made via network using Image Express Utility 2.0.

3. Stacking Correction Tool Settings


Starting the Stacking Correction Tool

The same Stacking Correction Tool starting method is used for Windows Vista and Windows XP.

Select the Stacking Correction Tool from [Start] → [All Programs] → [NEC Projector User Supportware] and start it.

Names of the Stacking Correction Tool Screen


Stacking Correction Tool Main Screen

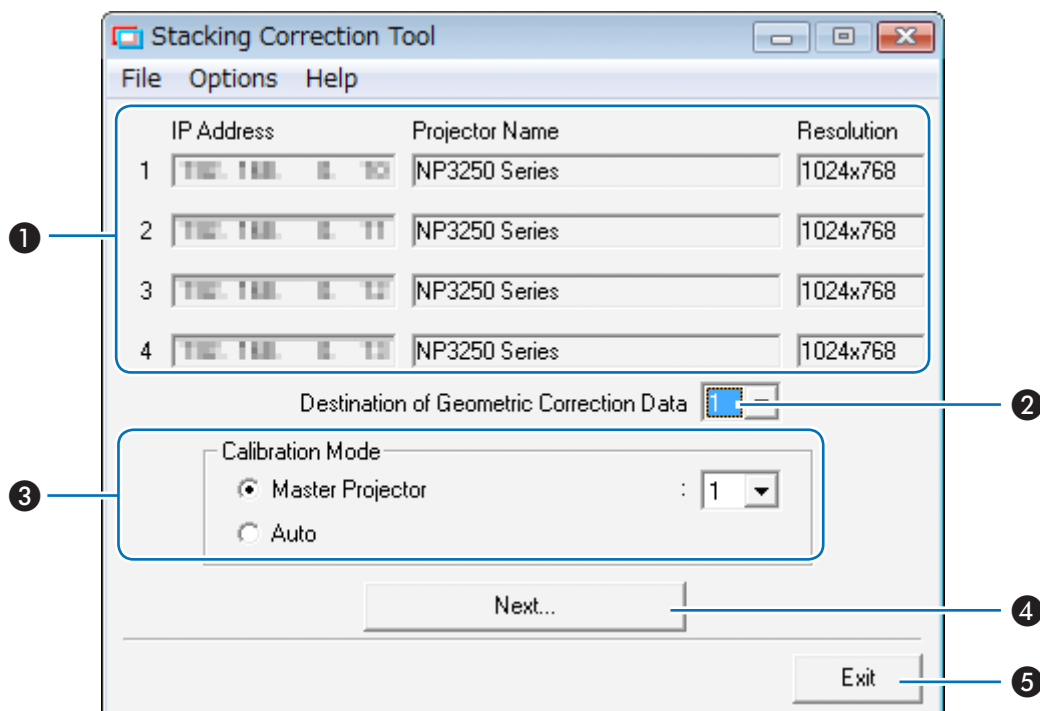


① List of Connected Projectors	Displays the connection order, IP address, projector name, and resolution for the currently connected projectors.
② Destination of Geometric Correction Data	Select settings 1 to 3 of the projector's [GEOMETRIC CORRECTION] onscreen menu as the [GEOMETRIC CORRECTION] data storage location after stacking correction.
③ Calibration Mode	Master Projector: The projector that will serve as the master is determined, and the projection image of another projector undergoes stacking correction so that it is in agreement with the projection image of the master projector. In this instance, the [GEOMETRIC CORRECTION] of the master projector does not change. Auto: When there is a screen frame, the projection image is corrected so as to fit inside that frame. When there is no frame, correction is applied so that the area of the rectangle is maximized within the superimposed portion of the projection area. The aspect ratio of the input signal is not maintained at this time.
④ [Next]	Display the calibration screen. (▶ Page 16)
⑤ [Exit]	Closes the Stacking Correction Tool.

Stacking Correction Tool Menu


File

	Open	This opens the GCXS file (with .gcxs extension) that was saved with [Save as] and sends the [GEOMETRIC CORRECTION] data to each of the connected projectors. When using a GCXS file to reproduce a projection that has undergone stacking correction, the installation and connection condition of each projector must be the same as when the GCXS file was saved. When there has been a change of the projector connection order, installation position, projection angle (including tilt foot adjustment), projection position (including lens shift adjustment), or other settings, projection that has undergone stacking correction cannot be reproduced.
	Save as * can be selected when stacking correction is completed	This gathers the [GEOMETRIC CORRECTION] data, and the connection order of each projector and saves it as stacking correction data (in a GCXS file).
	Exit	Closes the Stacking Correction Tool.

Options


	Communication Settings	The projectors that will be used in stacking correction are selected with this screen. Select the type of network (type of NIC: network interface card) with the topmost pull-down menu.	
		Connect	Detects a projector that is connected to the network and displays it on a list.
		Update	Updates the list display when there has been an increase or decrease of the number of network projectors, when there has been a change in the type of projector, or some other change.
		Input Address	Specifies and searches the IP address of the projector. The search method can be selected from the following two types. • Direct input and searching of the projector IP address • Specification and searching of a range with start address and end address
		Edit List	Specifies an address and registers on a list the projectors that have been searched. This also permits post registration editing and deletion, and additions and searches by address specification.
	Camera Setting	Selects the type of camera.	
	Geometric Correction	Changes the geometric correction settings of the projector.	

Help

	Help	This displays the help file of the Stacking Correction Tool.
	About	Displays the version of the Stacking Correction Tool.


Names of the Calibration Screen

Calibration Screen

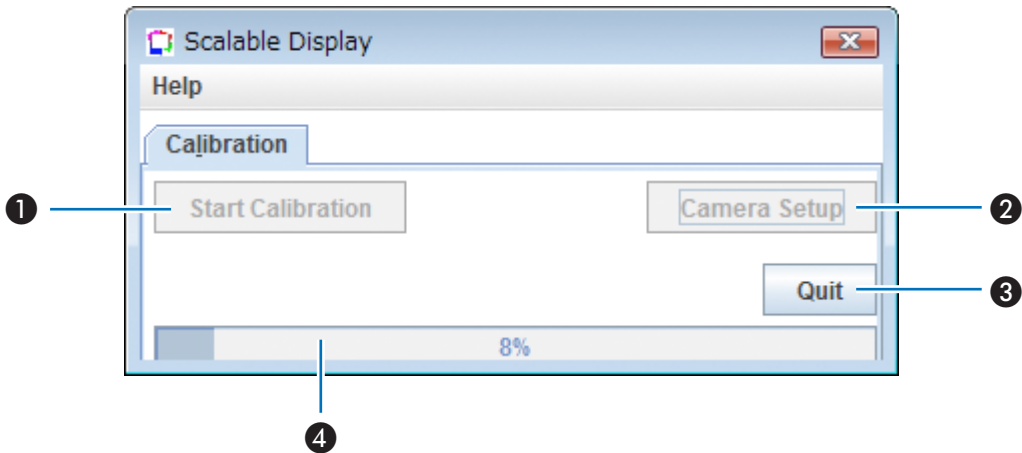

① Start Calibration	Starts the stacking correction * When using a web camera, clicking [Start Calibration] will start the utility software of the web camera.
② Camera Setup	Performs the angle of view check and other camera checks.
③ Quit	Discontinues the correction and returns to the Stacking Correction Tool.
④ Calibration Progress	Displays the progress of the calibration as a percentage.

Camera Setup Screen

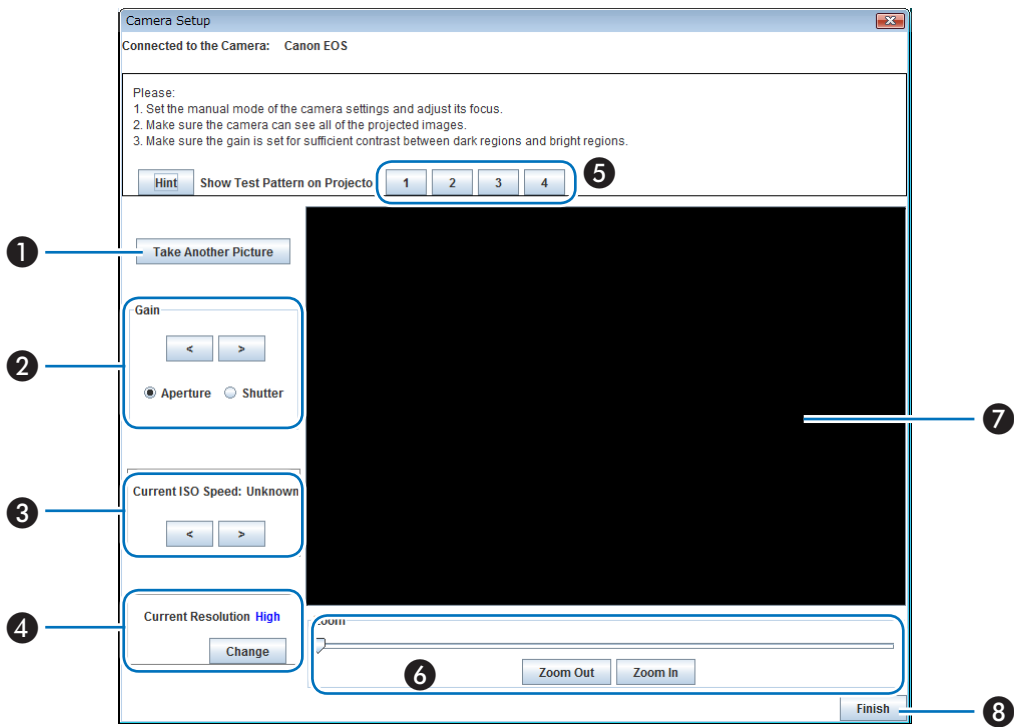

Depending on the camera, items marked with  might not function.

1 Take Another Picture	Takes a photograph.
2 Gain 	Adjusts the gain of the digital camera.
3 Curent ISO Speed 	Changes the ISO speed of the digital camera.
4 Curent Resolution 	Adjusts the resolution of the digital camera.
5 Show Focus Pattern on Projector	Sends a (15 x 15 dot) test pattern to the projector of the specified number. The number of connected projectors is displayed. (Maximum of 4.)
6 Zoom Out/Zoom In 	Adjusts the zoom of the digital camera.
7 Preview Screen	The photographs that have been taken will be displayed. Note Either when using a digital camera or a web camera, set up so that the projection image fits this preview screen. Even though the projection image fits the preview screen of the utility software supplied with the web camera, the projection image might extend beyond the photographic range in the [Camera Setup] preview screen. If this occurs, adjust the position or angle of the web camera, take a photograph with [Take Another Picture], and perform the setup while checking. When using a digital camera, the results of adjusting the gain, shutter speed, resolution, and zoom will be photographed automatically, and will be displayed on the pre-view screen.
8 Finish	Closes the Camera Setup.

4. Preparation of the Projectors

The projectors used in the stacking correction will now be prepared. Please refer to the user's manual of the projector in conjunction with the description given in this manual.


1. Install and connect the projectors that will be used, and project them onto the screen (The portion of projectors that will be used)

Connection of the Equipment  Page 11

2. Adjust the Projectors

Refer to the projector user's manual and perform the following adjustments.

- Adjust so that the projection image of each projector enters the screen.
 - Set [LAMP MODE] to the same setting for each of the projectors.
 - Make image quality adjustments, projection position adjustments, and zoom and focus adjustments as required.
 - When performing the stacking correction in conjunction with the projection screen of the master projector, perform the [CORNERSTONE] adjustment for the projector that will be the master. If the projection image of the master projector is distorted, stacking correction will be also performed for the other projectors in conjunction with the distorted projection image.
- * When there has been a selection of [By detecting the most extreme corners] (i.e., stacking correction at the maximum allowable size), the [CORNERSTONE] setting of all of the projectors will be reset and there will be no need to make the setting.

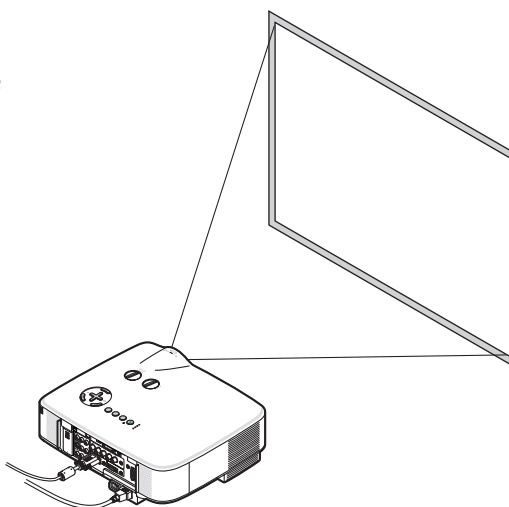

Note

- The [CORNERSTONE] screen will not be displayed when making adjustments with the [KEYSTONE] screen, or when setting [GEOMETRIC CORRECTION]. To perform the [CORNERSTONE] adjustment, hold down the 3D REFORM button for 2 seconds or longer, and clear the [KEYSTONE] adjustment values. Likewise, the [KEYSTONE] screen will not be displayed when making adjustments with the [CORNERSTONE] screen, or when setting [GEOMETRIC CORRECTION]. To perform the [KEYSTONE] adjustment, hold down the 3D REFORM button for 2 seconds or longer, and clear the [CORNERSTONE] adjustment values.

Reference

- When making settings on a number of projectors, it will be convenient to use the optional remote control (NP02RC). Using the projector [CONTROL ID] function, one optional remote control will permit the operation of individual projectors, or the operation of all projectors at once. Please see the projector user's manual for information about the [CONTROL ID] setting.
- Setting a [PROJECTOR NAME] to a projector in advance will aid in recognition even in the list displayed in the Stacking Correction Tool [Communication Settings], and will be convenient at the time of installation. Please see the projector user's manual for information about the [PROJECTOR NAME] setting.

5. Preparation of the Digital Camera or Web Camera

The digital camera or web camera used in the stacking correction will now be prepared. Please refer to the user's manual of the digital camera or web camera in conjunction with the description given in this manual.

1. Perform Settings of the Digital Camera or Web Camera that Will Be Used

Optimal camera settings will be made for the stacking correction.

Set the digital camera or web camera as described below.

Digital Camera

Setting Item	Selection	Notes
Mode dial on the digital camera body	M	Select M (Manual exposure) from among the five applicable exposure modes of A-DEP (automatic depth of field priority AE), M (manual exposure), Av (aperture priority AE), Tv (shutter priority AE), and P (program AE).
Focus mode switch on the digital camera body	MF	Select MF (manual focus) from among the two modes of AF (automatic focus) and MF (manual focus).
Stabilizer switch on the digital camera body	OFF	Set the stabilizer switch to OFF.

Web Camera

Install the utility software that comes with the web camera and after startup, perform the settings as described below.


Setting Item	Selection	Notes
Webcam Settings	Focus	[Manual Focus]
	White Balance	Manual
Use Automatic RightLight™ Settings		Off
Advanced Settings	Exposure/Gain adjustment	Manual
	Anti Flicker	[Off]
	LED Control	[Off]

2. Make a Connection to the Computer

Using the USB Cable

Connection of the Equipment  Page 11

- * Use the USB connection cable that comes with the digital camera or the web camera.

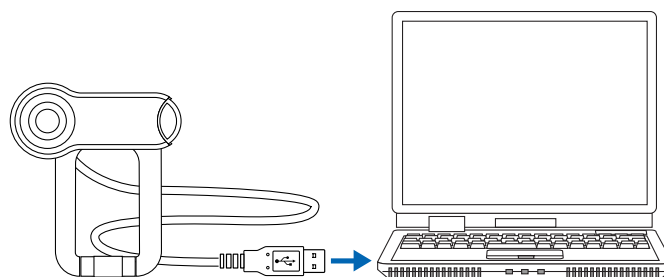

To the USB port of the computer

6. Performing Stacking Correction



The stacking correction will be performed after completion of the connections of the projectors, digital camera or web camera, and the computer.

1. Start the Stacking Correction Tool

2. Select the Projectors


Select [Communication Settings] of the [Options] menu, then ❶ select the network type, ❷ enter a check mark for the projectors that will be used, click [Connect], and add to the list.

* Up to a maximum of 4 projectors can be used in stacking correction.

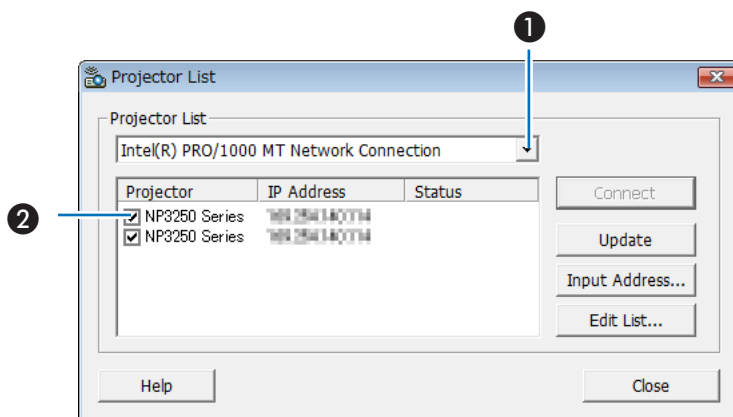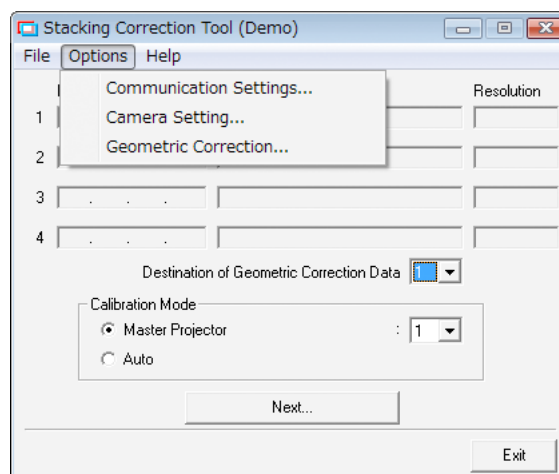

3. Select the Camera

Select the camera type with [Camera Setting] under [Options].

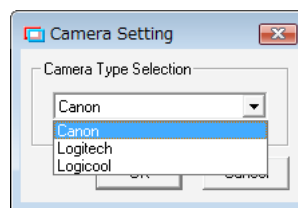

4. Select the [GEOMETRIC CORRECTION] data storage location


The default setting is [1].



Note


In the projector, GEOMETRIC CORRECTION data has already been registered in 1 to 3 as the default setting.

The existing GEOMETRIC CORRECTION data of the selected number will be overwritten in the saving location by the Stacking Correction Tool.

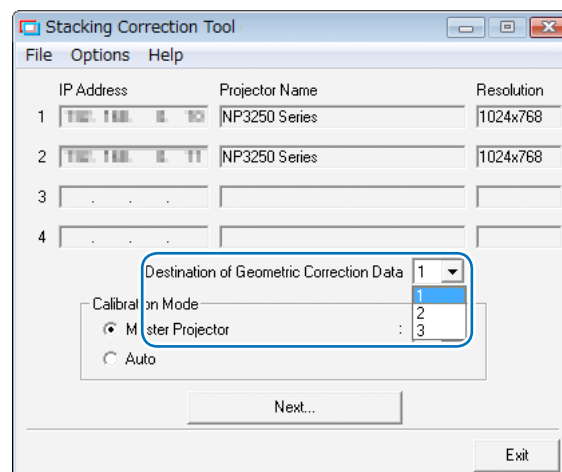

5. Select the Type of Stacking Correction

- * When the master projector has been determined and stacking correction is going to be performed, this setting selects which projector in the group will be made the master.

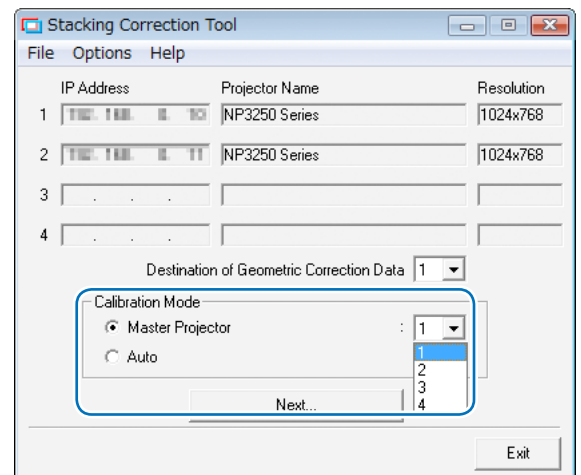


6. Click [Next]

The calibration screen will be displayed.

Click [Camera Setup] and perform the camera adjustments. (▶ Page 17, 24)

When the web camera is connected, perform the required settings with the utility software that came with the web camera. (▶ Page 24)

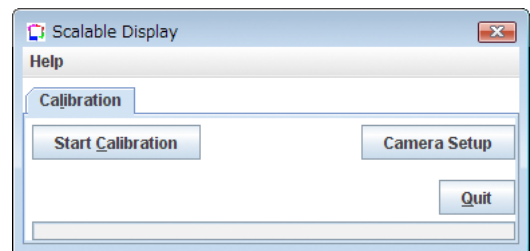




7. Click [Start Calibration]

Calibration will start.

Four types of test image (illustrated below) will be projected onto the screen in order.

Note During the calibration, please pay attention to the following points:

- Do not touch the installation platform of the camera or projector.
- Do not cut across in front of the camera.
- Do not let shadows from outside light fall upon the screen.

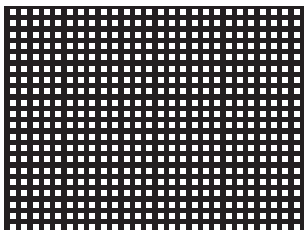First: Completely black image	Second: Completely white image
	
Third: Image of dots (Five dots at screen center)	Fourth: Image of dots (Screen full of dots)
	


Test images for the number of projectors connected will be sent and projected.

- * Screens on which test images are projected will be photographed by digital camera or web camera, and will be used as data for the calculation of stacking correction.

When an error message is displayed at the time of sending the test image, and calibration cannot be completed, please see "Calibration" (➡ Page 23), and "Error Message List" (➡ Page 25).

There will be a return to the Stacking Correction Tool screen upon completion of the calibration.

8. Click [OK]

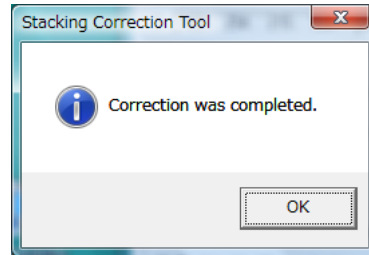

This completes the stacking correction.

Note

- When GEOMETRIC CORRECTION is set, KEYSTONE and CORNERSTONE cannot be selected.
- Hold down the 3D REFORM button for 2 seconds or longer to clear the GEOMETRIC CORRECTION data that has been set.
- GEOMETRIC CORRECTION performs an electrical correction and as such there may be a resultant drop in brightness or deterioration of picture quality.
- Exceeding the limits of the correction or other factors may result in distortion of the picture or correction not being applied at all.

Reference







- After correction, fine adjustment is permitted with lens shift or lens zoom focusing.
- Changes of conditions following installation and other factors may result in a shift of the image on the screen. Regular use of stacking correction will maintain the accuracy.

7. Calibration

In calibration, differences in brightness on the screen are identified and calculations are performed.

Also, for the purpose of the calculations, the contour of the projection image, and the position and shape of the test image are photographed with a digital camera or a web camera.

If an error message is displayed during the calibration, first check the items listed below.

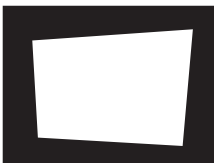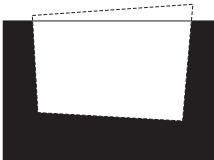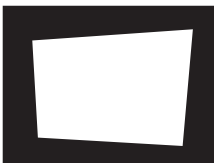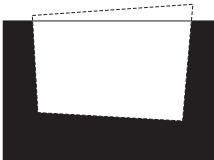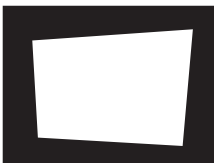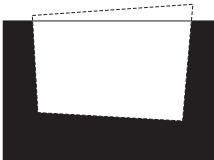Item to Check	Cause and Action to Take									
Has the resolution of each of the projectors been adjusted?	The number of pixels of the LCD panel of the model NP3250W differs from other projectors; therefore, the NP3250W cannot be used at the same time as models NP3250, NP2250, and NP1250.									
Has the brightness of each of the projectors been adjusted?	To the extent possible, use the same model of projector in the stacking correction. When there is a difference in brightness between projectors, recognition of the contour or the position and form of the test image may not be possible with one of the projection images. Note also that a difference in brightness may arise from a difference of the setting of the projector LAMP MODE; therefore, each projector should be set to the same setting. See the projector user's manual for information about the LAMP MODE setting.									
Is the digital camera or web camera compatible with the Stacking Correction Tool?	Please use a model that is supported by the Stacking Correction Tool as listed on Page 4. Note also that even though a supported model is used, please check whether the model is properly selected with [Camera Setting] under [Options]. (➡ Page 15, 20)									
Is the digital camera or web camera set as specified by the Stacking Correction Tool?	When the automatic adjustment function of the digital camera or web camera is enabled, an error may occur during calibration. Please set the digital camera or web camera as described on Page 19.									
Is the entire screen gathered within the photographic range of the digital camera or web camera?	Make adjustments so that the overall projection image can be photographed as large as possible; for example, move the setup position of the digital camera or web camera, or use the zoom function. * When using the web camera, even when the entire projection image is gathered within the photographic range in the supplied utility software preview screen, the projection image might be shifted outside of the photographic range in the [Camera Setup] preview screen. If this happens, it will not be possible to complete stacking correction (and a message will be displayed to move the camera). <table><tr><th></th><th>Preview Screen of the Web Camera Utility Software</th><th>[Camera Setup] Preview Screen</th></tr><tr><td>Yes</td><td></td><td></td></tr><tr><td>No</td><td></td><td></td></tr></table>		Preview Screen of the Web Camera Utility Software	[Camera Setup] Preview Screen	Yes			No		
	Preview Screen of the Web Camera Utility Software	[Camera Setup] Preview Screen								
Yes										
No										

After checking the items of the previous page, if an error still occurs during calibration, it is possible that the quality of the image photographed by the digital camera or web camera is insufficient and cannot be recognized.

Please pay attention to the points described below and make adjustments of the photographic image using the camera setup screen or the utility of the web camera, then try the calibration.

- Set a higher resolution of the camera.
- Perform the gain adjustment while observing the preview screen.
- Set up and adjust the camera so that the background of the screen (e.g., walls, etc.) does not enter the photographic range of the camera.

When there is a difference in brightness between the screen and the background, an error may occur during calibration.




Camera Adjustment Examples

Aim at the right image and adjust the camera so that the difference in brightness between the test image and the screen becomes distinct.

[Camera Preview Screen]



Completion of calibration may not be possible in situations such as the following.

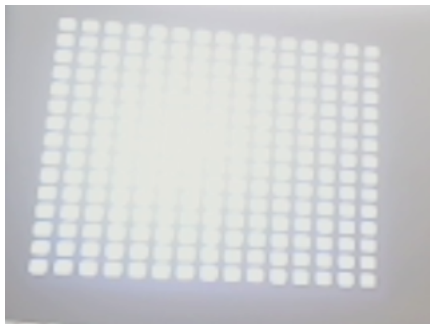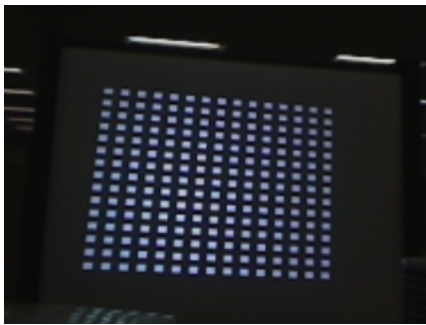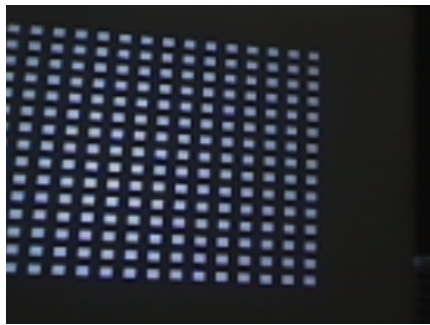Photographic Screen is too Bright	Extraneous Light Enters the Photographic Range	The Contour of the Projected Image Falls Outside of the Photographic Range
		
Adjust the gain and the exposure.	Use the camera zoom function, or adjust the installation position so that extraneous light does not enter the photographic range.	Adjust the installation position of the camera so that the contour of the projection image fits into the photographic range.

Note

When making adjustments with the web camera utility software, perform the adjustments after exiting the Calibration Screen and the Camera Setup screen to permit the post-adjustment values to be reflected. Making adjustments while the Calibration Screen or Camera Setup screen is displayed will result in the values returning to what they were at the time of beginning the correction.

8. List of Error Messages

When an error occurs during the calibration and a message is displayed, please refer to the table below and respond as indicated.

Reference

- Error messages extract a portion of the display content.
- Rarely, an error message that is not listed in this manual may be displayed.
If this happens, check the photographic image of the camera or the adjustment and position of the camera according to the error message.

Error Message	Cause of Error	Response to Error
Please move the camera. The projector is not entirely in view.	The projection image does not fall within the photographic range of the camera.	• Make adjustments so that the overall projection image can be photographed as large as possible; for example, move the setup position of the digital camera or web camera, or use the zoom function.
	The brightness at the periphery is low, and the test pattern cannot be detected.	• Check the photographic image of the camera, adjust the gain and other settings, and check the difference in brightness between the test pattern and the background. Also, darken the peripheral illumination as much as possible.
Unable to find a usable camera. and No Camera Found.	The camera that was specified with the camera settings cannot be found.	• Check that the model has been correctly selected with [Camera Setting] under [Options].
Could not initialize the Canon camera.	The camera that was specified with the camera settings cannot be found.	• Check the connections of the camera power supply and USB cable. • Check that the model has been correctly selected with [Camera Setting] under [Options].
Camera Initialization Error	Camera initialization error	• When calibration is performed with the preview screen started on the utility software of the web camera, the projection image of the test pattern cannot be photographed with [Calibration Screen] of the Stacking Correction Tool. Close the preview screen of the utility software and perform the calibration again.
Too many spots found. and Too few spots found.	The correction points cannot be properly detected from the test pattern.	• Check the photographic image of the camera, adjust the gain and other settings, and check the difference in brightness between the test pattern and the background. Also, darken the peripheral illumination as much as possible.
The programmer called a function that is not implemented.	A function not supported by the camera was used.	• Press the [Dismiss] button and return to the original screen.
Maximum value reached, cannot increase more and Minimum value reached, cannot decrease more	The maximum value or the minimum value of the adjustment range has been reached.	• Press the [Dismiss] button and return to the original screen.
The region found seems to use a very small using roughly xx by yy pixels in the camera.	An appropriate photographic range cannot be detected.	• Check whether the screen has become too bright from outside light striking it. • Check the photographic image of the camera, adjust the gain and other settings, and check the difference in brightness between the test pattern and the background. Also, darken the peripheral illumination as much as possible.
Found Maximum Colors of (rrr, ggg, bbb) with a highest possible value of 255.	There is insufficient brightness and the test pattern cannot be detected.	• Check the photographic image of the camera, adjust the gain and other settings, and check the difference in brightness between the test pattern and the background. Also, darken the peripheral illumination as much as possible.
Error Writing Image NEC Projector: (IP address)	There is an error in communication with the projector.	• Check the condition and connections of the projector, and perform the calibration again.
Unable to find a grid from the spots.	The correction points cannot be properly detected from the test pattern.	• Check the photographic image of the camera, and adjust the camera or move the camera position so that the entire test pattern can be read. Also, darken the peripheral illumination as much as possible.

Trademarks

- Microsoft, Windows, Windows Vista, .NET Framework, and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Java is a registered trademark of Sun Microsystems, Inc. in the United States and other countries.
- Powered by Scalable Display Technologies
Protected by US Patent 6,456,339 and patents pending

scalable 

DISPLAY TECHNOLOGIES

- Canon and EOS are registered trademarks of Canon Inc.
- Logitech and QuickCam® are trademarks or registered trademarks of Logitech Inc.

NEC