

POS TERMINAL

UP-820N

INSTRUCTION MANUAL



CAUTIONS:

The cash register should be securely fitted to the supporting platforms to avoid instability when the drawer is open.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

For a complete electrical disconnection pull out the mains plug.

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

SHARP ELECTRONICS (Europe) GmbH Sonninstraße 3, D-20097 Hamburg

INTRODUCTION

Thank you very much for your purchase of the SHARP POS Terminal Model UP-820N. Please read this Manual carefully before operating your machine in order to gain full understanding of functions and features. Please keep this manual for future reference. It will help you if you encounter any operational problems.

IMPORTANT

 Install your POS terminal in a location that is not subject to direct sunlight, unusual temperature changes, high humidity or exposure to water sources and keep away from heat and magnetic sources.

Installation in such locations could cause damage to the cabinet and the electrical components.

- The POS terminal should not be operated by an individual with wet hands.
 - The water could seep into the interior of the POS terminal and cause component failure.
- Do not apply excessive pressure to the display.
- Do not use a sharp-pointed object on the display.
- The LCD display will be damaged easily.
- When cleaning your POS terminal, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.
- The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- The surface of the screen may become smeared and accumulate dust during use.

 Gently wipe the surface of the screen with a soft cloth that has been dipped in a mild detergent solution and squeezed dry.
- The POS terminal plugs into any standard wall outlet (official (nominal) voltage).

 Other electrical devices on the same electrical circuit could cause the POS terminal to malfunction.
- If the POS terminal malfunctions, call your authorized SHARP dealer for service do not try to repair the POS terminal yourself.
- · For a complete electrical disconnection, the AC power cord must be removed from the wall outlet.
- Never disconnect peripherals from the POS terminal while the POS terminal remains plugged into the AC outlet.

PRECAUTION

This POS terminal has a built-in memory protection circuit which is operated by a rechargeable battery pack. It should be known that all batteries will, in time, dissipate their charge even if not used. Therefore to insure an adequate initial charge in the protection circuit and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to be recharged for a period of 24 to 48 hours prior to use by the customer.

In order to charge the battery pack, the machine must be plugged in and its power switch must be set to the "ON" position. This recharging precaution can prevent unnecessary initial service calls.

CONTENTS

	RODUCTION	
	PORTANT	
	ECAUTION	
CO	NTENTS	2
1.	Part Names and Functions	8
	External View	8
	Front view ·····	
	Rear view·····	
	Printer	
	RS232 Connector/SD Card Slot ····	···10
	Opening the RS232 connector cover	···10
	Opening the SD card slot cover	···10
	KeyboardStandard keyboard layout	11
	Optional keys ·····	۱
	Default key text on the display·····	15
	Clerk Keys	17
	Display	1 ผ
	Operator display (touch panel) ······	18
	Customer display (pop-up type) ····································	···20
	Display adjustment (operator display)	20
	Screen save mode	20
2	Selecting an Operating Mode	21
۷.	Operating Modes	21
	Mode Selection	22
	Selecting a mode	
	Returning to the mode selection window	
2	Receipts	
ა.	Built-in Printer Sample Receipt	…∠ ວ
	Receipt for Remote Printers (KP#1-KP#9)	23
	Type of receipts	24
	Sorted Receipt Function	
_	·	
4.	Prior to Entries Preparations for Entries	
	Receipt and journal paper rolls	29 20
	Receipt ON/OFF function ·····	29
	Clerk assignment·····	
	Error Warning	
	Item Selection from the Menu	
	Starting Cash Memory Entry	
_	Entries	
Э.	Item Entries	
	Single item entries	
	Repeat entries ······	
	Multiplication entries	36
	Split-pricing entries	38
	Successive multiplication entries	39
	Single item cash sale (SICS)/single item finalize (SIF) entries······	40
	Scale entries	41
	Non-turnover sales ·····	43
	Special Entries for PLU/EAN ·····	44
	Promotion function Promotion	44

PLU/EAN link entries ·····	46
EAN learning function ·····	46
EAN/ITF-to-PLU conversion ······	47
PLU/EAN information inquiry (view) function·····	48
EAN price change function ·····	49
Combo meal PLU/EAN entries ·····	
With/without entries ·····	
PLU Menu entries	51
PLU level shift (for direct PLUs)	52
Price level shift	54
Condiment entries (for PLU)	55
Pint entries Pint	57
Happy hour ·····	57
Crate entries	58
Display of Subtotals	60
Subtotal	60
Difference subtotal (Differ ST)	60
Finalization of Transaction.	61
Cash or check tendering	
Mixed tendering (check + cash)	62
Cash or check sale that does not need any tender entry	62
Cash or check sale that does not need any tender entry	62
Mixed-tender sale (cash or check tendering + credit tendering)	63
Computation of VAT (Value Added Tax)/Tax ·····	64
VAT/tax system ······	64
VAT shift entries ······	65
Guest Check (GLU)	
Guest look up (GLU) system ·····	
Deposit entries	67
Transferring guest checks out or in (Transfer-in/out)	
Bill printing	
Intermediate GLU reading ······	70
Bill totalizing/bill transfer ·····	70
Bill separating	71
Transaction migration ·····	, , , , , , , , , , , , , , , , , , ,
Recall GLU ······	75
Ordering Systems	75
Customer advance ordering	76
Credit customer advance ordering	70
Article order masks ·····	
Auxiliary Entries	00
Percent calculations (premium or discount)	01
Discount entries	01
Refund entries	
Return entries ·····	
Printing of non-add code numbers ······	
Printing of free text ·····	
Payment Treatment	03
Tip-in entries	04
Currency exchange ·····	84
Received-on-account entries	
Paid-out entries Paid-out entries	86
No-sale (exchange)	
No-sale (exchange) Transferring cash	8888
Cashiar a shadu	88
Cashing a check Service charge	89
VIP sales ······	89
VIP sales	
CUSIOTHER MANAGEMENT	9(

	Basic operations ·····	91
	Customer record search by name ······	92
	Name and address printing on receipt/bill ······	93
	Customer bill printing	94
	Employee Function	95
	Clerk/manager sign-on ·····	95
	Employee's working time recording·····	96
	Employee's working time shift	99
	Customer Relation Management	100
	Discount groups	100
	Bonus points WASTE Mode	
	TRAINING Mode·····	
	Supervisor Clerk ·····	103
	Overlapped Clerk Entry	104
6.	Correction	
	Correction of the Last Entry (Direct Void) ·····	106
	Correction of the Next-to-Last or Earlier Entries (Indirect Void)	107
	Subtotal Void ······	108
	Correction of Incorrect Entries Not Handled by the Direct, Indirect or Subtotal Void Function	108
7.	Special Printing Function	109
•	Copy Receipt Printing	109
	Guest Check Copy	110
	Validation Printing Function	110
	Barcode Printing	111
	Entertainment Bill	112
0	Manager Mode	110
ο.	Entering the Manager Mode	113
	Override Entries	112
	Tip Paid Entries	
	Bill Recording/Bill Void······	114
	Correction after Finalizing a Transaction	115
_		
9.	Reading (X) and Resetting (Z) of Sales Totals	116
	How to take an X1/Z1 or X2/Z2 report	116
	Flash report	116
	Compulsory Cash/Check Declaration (CCD)	
10	.Non-accessed EAN and Customer Deletion ······	121
11	.Prior to Programming ·····	122
''	Programming Keyboard Layout ······	122
	How to Program Alphanumeric Characters	
	Using character keys on the keyboard ······	123
	Entering character codes	124
	•	
12	.Programming ·····	
	Basic Instructions	
	Programming screen	
	Programming example ····································	126
	Department Department	128
	PLU/EAN ·····	
	Dynamic EAN ······	
	PLU range ·····	193
	Happy hour ·····	124
	PLU menu key ·····	135
		100

Link PLU/EAN table ·····	
PLU condiment table ·····	·····137
Promotion table (global/individual type)	139
Crate table	141
EAN-to-PLU converting table ······	142
ITF-to-PLU converting table	142
EAN Non-PLU code format	143
Press code (for EAN)·····	144
Scale table	
PLU/EAN stock ·····	145
EAN delete ·····	145
Direct Key Programming	146
Direct key	146
Functional Programming	147
Discount key () through ()	147
Percent key (1 through (1 th	148
Group discount key (commission c	148
Commission	149
Miscellaneous functions (deposit, RA, PO, tip, cash in drawer and check change)	
Service charge	150
Bonus points	151
Media Key Programming ·····	152
Media Key Programming ·······Cash key·····	152
Check key (CH1) through CH5)	153
Credit key (CB1 through CB9)	154
Credit key (CRI through CRI)	155
Charge key ·····	155
Foreign currency (foreign currency drawer and currency exchange key Ex1 through Ex9)	
Currency money	157
Training Text/Clerk Programming······	158
Text Programming	158
Function text	
Department group text ······	
PLU group text	161
PLU hourly group text	162
PLU information text ······	162
Personnel Programming	163
Clerk	164
Cashier ·····	
Manager ·····	167
Employee ······	168
Job location table·····	
Working time shift	169
Contactless key	170
Prohibition of the contactless key ·····	171
Terminal Programming ······	172
Date/Time Setting	173
Date/time	
Optional Feature Selection	173
Function prohibition ·····	170 17 <i>/</i>
Function selection 1 ·····	114 172
Function selection 2·····	
Printing selection 1	
Printing selection 2	170 ∩71
EURO ·····	1/9
Report Programming ·····	101
Zero skip·····	10∆
General report format	
	10.7

Transaction report format ······	184
Clerk report format······	186
Hourly report ······	
Stacked report ······	188
Message Programming······	191
Receipt logo	
Free text ·····	
Validation printing text ······	192
Slip text ·····	193
Slip footer ·····	193
Payee name ······	193
Entertainment bill message ······	193
Scrolling message for pole display ······	194
Function Key Programming	195
Function menu key	196
Function key ······	198
Function menu key list	199
Device Configuration Programming	200
Built-in printer	201
Journal printer	201
Receipt printer ······	202
Slip printer ·····	
Remote printer (KP#1 through KP#9)·····	203
BCR (SCANNER)	204
Scale/On-line	
Pole display ······	
Tax Programming ······	
Customer Programming	
Customer code	
Customer programming ······	
Order Mask Programming ······	
Branch programming	208
Transfer mask programming ······	209
Backup Data Send Programming	210
Backup data send	210
Backup Data Receive Programming······	210
Backup data receive	210
On-line Configuration Programming	210
PRICE Mode Programming	
Automatic Sequencing Key Programming	۲۱ے 21ء۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔۔
Auto menu programming	210213
Auto key sequence programming	215
SD CARD Mode	215216
Reading of Stored Programs ······	210218
Program reading sequence ······	
13.Electronic Journal/Data Clear ······	220
Electronic journal ······	220
Data clear ·····	220
14 Eurapean Artiala Number (EAN) as Universal Bradust Code (UDO)	004
14.European Article Number (EAN) or Universal Product Code (UPC) EAN or UPC code	221
Add-on code ·······	221
EAN file	
CAN THE	223

16.Operator Maintenance······	
In Case of Power Failure	
In Case of Printer Error	• • • • • • • • • • • • • • • • • • • •
Thermal Printing ·····	
Cautions in handling the printer	• • • • • • • • • • • • • • • • • • • •
Cautions in handling the recording paper (thermal paper)	•••••
Installing and Removing the Paper Roll	
Recording paper specifications	•••••
Installing the paper roll ······	
Removing the paper roll ·······	
Prevention of paper jams·····	
Removing a paper jam ······	
Cleaning the Print Head·····	
Before Calling for Service	
17.Options ·····	
List of Options	




Part Names and Functions


This chapter describes the part names and functions of this POS terminal.

External View

■ Front view

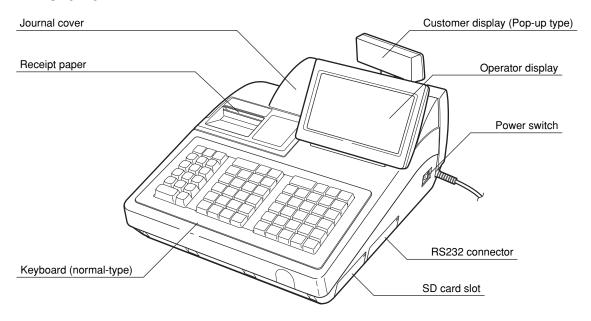

■ Rear view

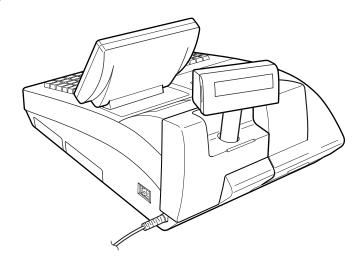

Printer





The POS terminal UP-820N may be configured with multiple types of printers offered by the market. For specific instructions related to the handling and care of the printer, please refer to the applicable printer instruction manual.

The built-in printer is a 2 station (receipt/journal) type thermal printer, and therefore it does not require any type of ink ribbon or cartridge. The average life of the printer is approximately 5 million lines.

To open the printer cover, lift up the cover as shown on the right sketch.

Your register is shipped with the print head release lever held by a white retainer in the lifted up position. Be sure to remove this retainer (see the figure at the right) and push down the print head release lever before you use the POS terminal.

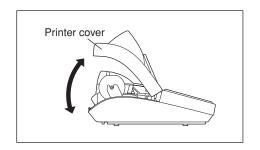

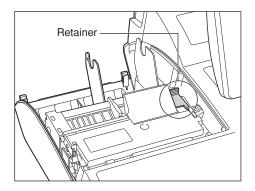


Print head release lever

The print head can be lifted by the green lever on the right side of the printer. Pulling the lever forward lifts the print head up. If the paper becomes jammed, open the cutter unit pushing the cutter open tab, then pull the lever further forward to open the print head wider so you can remove the jammed paper.

Cutter open tab

If a paper jam occurs, pull the cutter unit open while pushing the cutter open tab. Then remove the paper jam inside the printer. For the detailed procedures, refer to the "Removing a paper jam" section in the "Operator Maintenance" chapter.

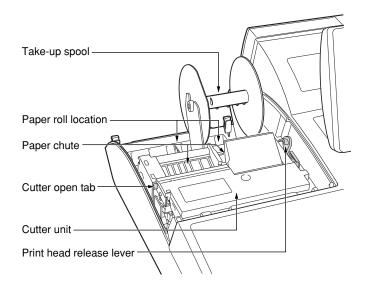


NOTE

Do not attempt to remove the paper roll with the head in the down position. This may result in damage to the printer and print head.

RS232 Connector/SD Card Slot

■ Opening the RS232 connector cover

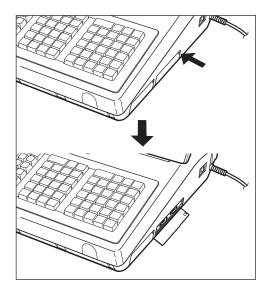

Push the part of the RS232 connector cover indicated by the arrow to open the cover.


* To close the cover, push the arrowed part in until you hear it click.


■ Opening the SD card slot cover


Refer to the "SD CARD Mode" section.

Keyboard

■ Standard keyboard layout

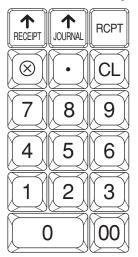

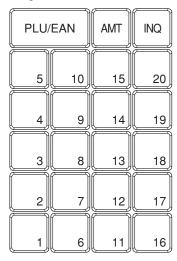

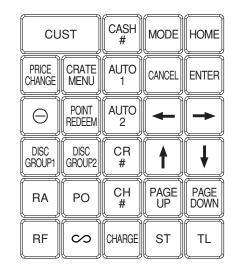

NOTE

- All the keys but the receipt paper feed key and the journal paper feed key can be re-positioned. If you want to change the layout, contact your authorized SHARP dealer.
- Department keys 1 through 20 are shown as 1 through 20 in this manual.

RECEIPT	Receipt paper feed key	ST	Subtotal key
JOURNAL	Journal paper feed key	TL	Total key
1 ~ 20	Department keys	PAGE DOWN	Page up/down keys
0~9	Numeric keys	CANCEL	Cancel key
00	And the first control of the f	-	Cursor (right/left/up/down arrow) keys
•	Decimal point key	†	Courson (highlighten up/down arrow) keys
CL	Clear key	MODE	MODE key
\otimes	Multiplication key	HOME	HOME key
\bigcirc	Void key	CASH #	Cashier code entry key (clerk code entry key by default)
PLU/ EAN	Price lookup/EAN key	AUTO AUTO 2	Automatic sequencing 1 and 2 keys
ENTER	Enter key	CHARGE	Charge key
CR #	Credit menu key (function menu 2)	POINT REDEEM	Point redemption key
CH #	Check menu key (function menu 3)	PO	Paid-out 1 key

RF	Refund key	DISC GROUP1 GF	Group discount 1 and 2 keys
CUS	T Customer code entry key	RA	Received-on-account 1 key
INC	Inquiry key	PRICE CHANGE	EAN price change key
RCF	T Receipt print key		Discount 1 key
CRA MEN		AMT	Amount entry key

Optional keys

The following optional keys can optionally be mounted in place of those shown in the figure of NOTE the standard keyboard layout. For details, consult your dealer.

BACK SPACE	Back space key	TIP PAID	Tip paid key
1 ~ 32	Direct price lookup keys *1	NS	No-sale key
21 ~ 32	Department keys *2	#/TM	Non-add code/Date & time display key
TEXT 1 TEXT 99	Text 1 through 99 keys	CLERK #	Clerk code entry key
%1 ~ %9	Percent 1 through 9 keys	SCALE	Scale entry key
⊝2 ~ ⊝9	Discount 2 through 9 keys	OPEN TARE	Tare entry key
CR1 ~ CR9	Credit 1 through 9 keys	RCP SW	Receipt ON/OFF key
TEXT #	Text number key	HALF	Half pint key
CA2 CA5	Cash total 2 through 5 keys	DEPOSIT	Deposit key
EX1 ~ EX9	Foreign currency exchange 1 through 9 keys	DEPOSIT RF	Deposit refund key
RA2	Received-on-account 2 key	DEPT #	Department number key
PO2	Paid-out 2 key	WITH	Without key
$\begin{bmatrix} AUTO \\ 3 \end{bmatrix} \sim \begin{bmatrix} AUTO \\ 99 \end{bmatrix}$	Automatic sequencing 3 through 99 keys	WITH	With key
CH1 ~ CH5	Check 1 through 5 keys	GUEST #	Guest number entry key
VAT	Value-added tax key	TRANS	Transfer out key
CASH TIP	MultipCash tip keylication key	TRANS IN	Transfer in key
NON-CASH TIP	Non-cash tip key	RCP SF	Receipt shift key

^{*1} The maximum number of direct PLU keys varies with the number of other keys set on the keyboard.

^{*2} The maximum number of department keys varies with the number of other keys set on the keyboard.

12

(DE011)		(IDVIVIOS)	
RECALL	Recall TOTAL STATUS key	ADVANCE ORDER	Customer advance order key
VP	Validation print key	CORRECT	Correct order key
RTN	Return key	WORK CHANGE	Working time shift change key
DIFFER	Difference subtotal key	INT. GLU	Intermediate GLU key
GC COPY	Guest check copy key	E-MAIL	E-mail key
REPEAT	Repeat key	DISC GROUP10	Group discount 3 through 10 keys
VIP1 VIP3	VIP1 through 3 sale keys	CRATE 1 CRATE 99	Crate 1 through 99 keys
$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$	Clerk entry 1 through 10 keys	VAT SFT TR	Value-added tax shift by transaction key
$\begin{bmatrix} CASH \\ 1 \end{bmatrix} \sim \begin{bmatrix} CASH \\ 10 \end{bmatrix}$	Cashier entry 1 through 10 keys	BS	Bill separation by item key
CHK PRINT	Check print key	BS PERSON	Bill separation by person key
LEVEL #	PLU level shift number key	FUNC FUNC MENU30	Function menu 1 through 30 keys
L1 ~ L10	PLU level shift 1 through 10 keys	EMPL #	Employee code entry key
PRICE SHIFT8	Price level shift 1 through 8 keys	TIME	Time out key
C_NEXT	Condiments next key	WASTE	WASTE mode key
E.BILL	Entertainment bill key	SEARCH NAME	Search by name key
S.SFT	Sort group shift key	CUST	Customer bill key
DEL	Delete key	CREDIT ORDER	Credit customer advance order key
SLIP	Slip printer key	MASK	Mask key
VAT SFT IT	Value-added tax shift by item key	ITF	ITF key
BS AMOUNT	Bill separation by amount key	BANK CONSOLE	Bank console key
AUTO AUTO MENU6	AUTO menu 1 through 6 keys	DISC G. SHIFT10	Discount group shift 1 through 10 keys
MGR #	Manager code entry key	CRATE #	Crate number key
TIME	Time in key	000	000 key
BREAK	Break in/out key	FINAL	Tentative finalization key
NAME& ADDRESS	Name and Address key	PRICE SHIFT#	Price level shift number key

PLU PLU PLU MENU50	PLU menu 1 through 50 keys	NBAL	New balance key
OPENED GLU	Opened GLU list key	G.C. RCPT	Guest check receipt key
GLU	Guest lookup key	ВТ	Bill totalize/bill transfer key

■ Default key text on the display

Function keys can be set on the keyboard area of the display by assigning them to the $\frac{1}{1000}$ key and $\frac{1}{1000}$ through $\frac{1}{1000}$ keys.

Note that the labels on the key tops in this manual may differ from the default texts of the displayed keys. The default texts are as follows:

Key Default text Key	Default text
0 ~ 9 0 thru 9 RTN	RETURN
00 GLU	GLU
000 NBAL	NBAL
• FINAL	FINAL
CL CLEAR RA	RA
	RA2
SUB TOTAL PO	PO
MODE PO2	PO2
↑ AMT	AMOUNT
₩ HALF PINT	HALF PINT
← MORE VAT SFT IT	VATSF ITEM
→ MORE → VAT SFITR	VATSF TRANS.
HOME VIP1 VIP3	VIP1 thru VIP3
CANCEL GUEST #	GUEST#
ENTER DEPOST	DEPO
TL CASH TOTAL PEPOSIT RF	DEPO REFUND
PAGE UP BT	B.T.
PAGE DOWN BS ITEM	B.S. ITEM
(SPACE) BACK SPACE	B.S. AMOUNT
DELETE BS PERSON	B.S. PERSON
DIFFER ST TRANS OUT	TRANS OUT
#/TM # TIME TRANS	TRANS IN
NS NS G.C.	G.C. RCPT
SCALE SCALE CASH TIP	CASH TIP
OPEN TARE (NON-CASH) TIP	NC TIP
PLU EAN TIP PAID	TIP PAID
GC COPY WITH	WITH
VP VP WITH OUT	WITH OUT
SLIP SLIP CHK PRINT	CHECK PRINT
RCPT RCPT	MGR#
RCPT SHIFT EMPL #	EMPL#
VOID REPEAT	REPEAT
REFUND RCP SW	RCP ON/OFF

Key	Default text	Key	Default text
TIME	TIME IN	BANK	BANK CONSOL
TIME	TIME OUT	E-MAIL	E-MAIL
BREAK	BREAK	LEVEL #	LEVEL#
S.SFT	SORTG SHIFT	L1 ~ L10	L1 thru L10
WASTE	WASTE	PRICE SHIFT#	PRICE SHIFT#
OPENED GLU	OPENED GLU	PRICE SHIFT8	P1 thru P8
VAT	VAT	DISC G SHIFT10	GROUP DSF01 thru 10
PRICE CHANGE	PRICE CHANGE	(CA2)~(CA5)	CA2 thru CA5
INQ	INQ	CH1 CH5	CHECK thru CHECK5
DEPT #	DEPT#	CR1 CR9	CR1 thru CR9
CUST	CUST	EX1 ~ EX9	EXCH1 thru 9
CHARGE	CUST CHARGE	%1 ~ (%9)	%1 thru %9
POINT REDEEM	POINT REDEMP		(-)1 thru (-)9
SEARCH NAME	SEARCH NAME	DISC GROUP10	GROUP DISC01 thru 10
ADVANCE ORDER	ADVANC ORDER	CLERK #	CLK#
CREDIT	CREDIT ORDER	CLK CLK 10	CLK01 thru 10
MASK	MASK	CASH #	CSR#
WORK CHANGE	WORK CHANGE	CASH CASH 10	CSR1 thru 10
NAME& ADDRESS	NAME ADD	FUNC MENU1 ~ FUNC MENU30	FUNC MENU01 thru 30
ITF	ITF	AUTO AUTO 99	AUTO thru AUTO99
CUST	CUST BILL	AUTO MENU1 ~ AUTO MENU6	AUTO MENU1 thru 6
CORRECT ORDER	CORREC ORDER	PLU MENU1 ~ PLU MENU50	PLU MENU01 thru 50
C_NEXT	C NEXT	TEXT #	TEXT#
E.BILL	E.BILL	TEXT NOTEXT 99	TEXT01 thru 99
RECALL GLU	RC-GLU	CRATE #	CRATE#
INT. GLU	INTERMED.	CRATE 1 CRATE 99	CRATE01 thru 99

NOTE You can change the default text in the PGM2 mode.

Clerk Keys


This POS terminal allows the operator to use the following four clerk identification systems:

- Contactless clerk keys (max. 126 clerks)
- Clerk code entry (max. 255 clerks)
- Clerk entry keys (max. 10 clerks)
- WMF clerk keys (max. 127 clerks)*
- * The WMF clerk key is not a SHARP product.

The standard POS terminal comes with the clerk code entry system by default. If you want to change the clerk identification system, contact your authorized SHARP dealer.

With regard to the contactless clerk key system, it is not available by default. The contactless clerk switch and the contactless clerk key are optional.


Contactless clerk keys (optional)

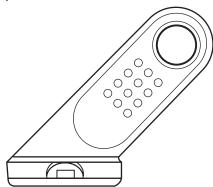

Put one of the contactless clerk keys to the clerk switch.

Clerk code entry (1 through 9999)

NOTE The clerk code entry key is assigned to the [ASH] key on the standard keyboard by default.

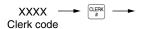

Clerk entry keys



These keys identify clerks. Press any one of these keys.


WMF clerk keys

Put one of the WMF clerk keys in the WMF clerk switch.

Display

■ Operator display (touch panel)

· Screen example 1 (REG mode)

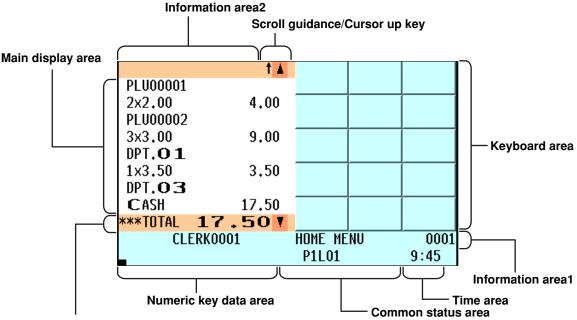

Total and REG status display area/Cursor down key

Main display area

Shows sales information you have just entered.

Total and REG status display area

Shows the sales total.

Scroll guidance/Cursor up (down) keys

Shows the scroll guidance to indicate you can scroll in the arrowed direction by using the cursor up/down keys / / when the transaction information occupies more than 8 lines.

Keyboard area

Shows the keyboard.

The press of a menu key such as the HOME key, function menu keys, PLU menu keys, etc. replaces the currently displayed keys with the ones assigned to the menu key.

Information area1

Shows the following items:

Clerk name : Shows the current clerk name (the current cashier name in case of the

clerk + cashier system).

Menu title : Shows the current menu title.

Clerk code : Shows the current clerk code (the current cashier code in case of the

clerk + cashier system).

Electronic mail indicator (M): Appears when an electronic mail is received.

Item text: Appears when an item is selected on the main display area or registered.Modification status: Shows the information such as "REFUND", "RETURN", etc. when the

corresponding key is pressed.

Information area2

Shows the GLU code during a GLU entry.

Time area

Shows the current time.

Common status area

Shows the following items:

Price level shift indicator (P1-P8) PLU level shift indicator (L01-L10)

Receipt shift indicator (r)

T-Log near full indicator (II)

Stock alarm indicator (?)

: Shows the current PLU/EAN price level.

: Shows the current PLU level. : Shows the receipt shift status.

: appears when the used memory is 80%.

: appears when the used memory is 90%.

: appears when the used memory is 95%.

: Appears when the stock of the PLU which you entered is zero, negative or reaches the minimum stock.

Electronic journal near full indicator () appears when the used memory is 80%.

: appears when the used memory is 90%.

: appears when the used memory is 95%.

VAT shift status indicator (V) Receipt ON/OFF status indicator (R)

Sentinel mark (X)

: Appears when the VAT status is shifted.

: Appears when the receipt ON-OFF function signs OFF. : Appears when the cash in drawer exceeds the programmed

sentinel amount.

The sentinel check is performed for the total cash in drawer.

19


: When a VMP file used memory is 90% or more, its file VMP file full indicator (1, 2, or 3)

number is indicated.

Numeric key data area

Shows numeric data by numeric key entry.

Screen example 2 (PGM mode)

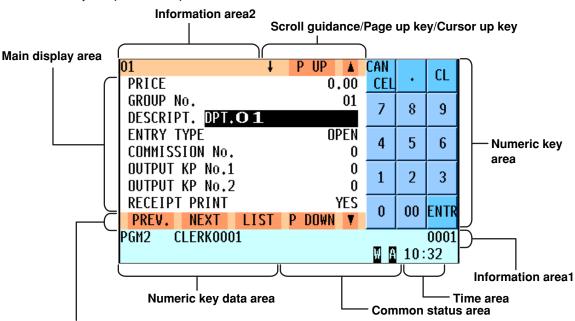

Previous record key/Next record key/Item list key/Page down key/Cursor down key

Main display area

Shows programmable items.

Information area1

Shows the mode you are in, clerk name, electronic mail indicator (M) and clerk code. Refer to the REG mode screen example for details.

Information area2

Shows the current job name like "READING", "RESETTING", etc.

Numeric key area

Shows the numeric keys.

Time area/Numeric key data area/Scroll guidance/Cursor up (down) keys

Refer to the REG mode screen example.

Common status area

Shows the following indicators besides some of those introduced in the REG mode screen example:

Caps lock indicator (A/a) : The upper-case letter "A" appears when caps lock is on,

and the lower-case letter "a" appears when caps lock is

off during text programming.

Double-size character mode indicator (W): Appears when the double-size character mode is

selected during text programming.

Page up (down) keys (PUP / PDOWN)


Used to scroll the window to go to the next page or back to the previous page.

Next/Previous record key (NEXT / PREV.)

Used to go to the next record or back to the previous record.

Item list key (LIST)

Used to list programmable options. You can also toggle the options with the • key.

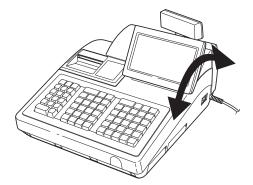

The display can be tilted back and forth to the best operational viewing angle.

Do not try to force the display beyond its full position.

■ Customer display (pop-up type)



■ Display adjustment (operator display)

You can adjust the contrast of the display in the "BRIGHTNESS" menu of the "TERMINAL" programming.

The backlight in the display is a consumable part.

When the LCD display may no longer be adjusted and becomes darker, you should replace the LCD unit. Consult your authorized SHARP dealer for further details.

Screen save mode

When you want to save the electric power or save the display's life, use the screen save function. This function can turn the LCD backlight off when any server does not operate the POS terminal for an extended period of time. You can program the time for which your POS terminal should keep the normal status (in which the backlight is "ON") before it goes into the screen save mode.


To go back to the normal mode, press any key.



2 Selecting an Operating Mode

When you turn the POS terminal on and press the key, the mode selection window will appear on the display, listing available operating modes as shown below.

Mode selection window

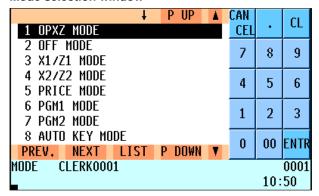

Operating Modes

You can select any mode other than REG from the list in the mode selection window. Your POS terminal supports the following ten operating modes:

REG mode	This mode allows you to enter various sales information. The mode selection window does not list this mode. To select this mode from the mode selection window, press the [AMCE] key.
OPXZ mode	This mode allows cashiers/clerks to take X or Z reports on their sales information. It can
	also be used to manage the number of hours for which employees work.
OFF mode	This mode locks all the operations of the POS terminal. When you select this mode, the
	window will disappear. Pressing any key turns the POS terminal "ON."
X1/Z1 mode	This mode is used to take various daily total reports (X1/Z1 reports).
X2/Z2 mode	This mode is used to take various weekly or monthly reports (X2/Z2 reports).
PRICE mode	This mode allows you to program unit price of PLUs.
PGM1 mode	This mode allows you to program those items which need to be changed often such as
	unit prices of departments or PLUs and percentages.
PGM2 mode	This mode allows you to program those items which can be programmed in the PGM1
	and do not require frequent changes such as date, time and functions.
AUTO KEY mode	This mode allows you to program AUTO menu keys and automatic sequencing keys.
SD CARD mode	This mode allows you to save and load the data of your POS terminal to and from an SD card.

Mode Selection

Procedure






■ Selecting a mode

- 1. Use one of the following ways:
 - Move the cursor to the desired option by using the \uparrow or \downarrow key.
 - Enter the desired option number by using a numeric key.
 - · Touch the desired option.
 - Move the cursor to the desired option by touching the or
 key.
- 2. Press the ENTER key.

NOTE

- You don't need to press the we key when you selected the option by touching.
- When you want to enter the REG mode, simply press the [MICE] key.

Procedure

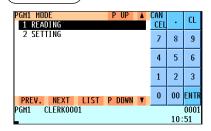


Returning to the mode selection window

To return to the mode selection window, use the following procedure:

- Press the MODE or CANOEL key with the menu screen for the selected mode displayed.
 - · You will enter the REG mode.
- **2.** Press the MODE key.
 - You will return to the mode selection window.

3 Receipts

Built-in Printer Sample Receipt

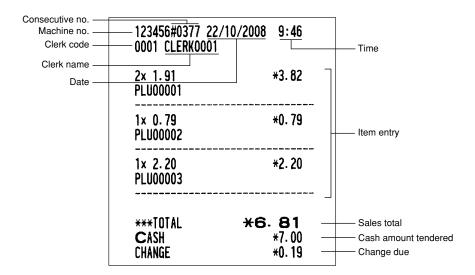

Receipt for Remote Printers (KP#1-KP#9)

■ Type of receipts

You can select one of the following 5 types of receipts for each remote printer. These types of receipts are available in the REG or MGR mode. By default, the addition receipt type is selected.

- Addition receipt type
- · Single/double receipt type
- · Addition + single receipt type
- · Double addition receipt type
- Double (addition + single) receipt type



You can shift the printing mode of items for the receipt by pressing the FSP key before item entry (Receipt Shift function).

Single/double receipt type → Addition receipt type

· Addition receipt type

The addition receipt is a standard type. Several items can be printed on one receipt.

Addition receipt

10:00 22/10/08 CLERK0001 1×PLU00001 1×PLU00002 1×PLU00003

· Single/double receipt type

When you select this type:

- One receipt is issued and the transaction is finalized each time you enter an item.
- A single receipt or a double receipt is issued depending on the PGM2 programming for the department.
- Each sales transaction is automatically handled as a cash deal.
- Items specified as SICS or SIF are treated as a single type.
- GLU entry is allowed.

Double receipt

14:55 22/10/08
CLERKO001

1×PLU00001

14:55 22/10/08
CLERKO001

** DOUBLE **
1×PLU00001

Single receipt


14:55 22/10/08 CLERKO001

1×PLU00001

· Addition + single receipt type

When you select this type:

- An addition receipt and each single receipt are issued in series after you finalize the transaction.
- Footer logo message is printed at the end of the addition receipt part.
- The information on multiplication entry will be printed on a single receipt.

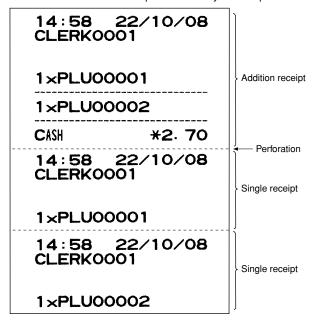

· Double addition receipt type

The contents of this type of receipt is same as the addition receipt type.

However, the same receipt will be issued two times.

· Double (addition + single) receipt type


The contents of this type of receipt is same as the (addition + single) receipt type.

However, the same receipt will be issued two times.

Sorted Receipt Function


When the sorted receipt function is programmed for your POS terminal, PLUs are printed in sorted form by PLU group regardless of the order that you entered items.

NOTE The sort group number is temporarily changed by ser key (sort shift key). $\rightarrow n \rightarrow ser \rightarrow \{PLU \ entry\} \qquad n : Group \ number (00 - 99)$

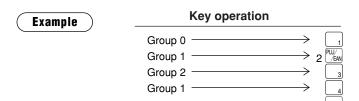

The print format differs depending on the programmed receipt type as follows:


· Addition receipt type

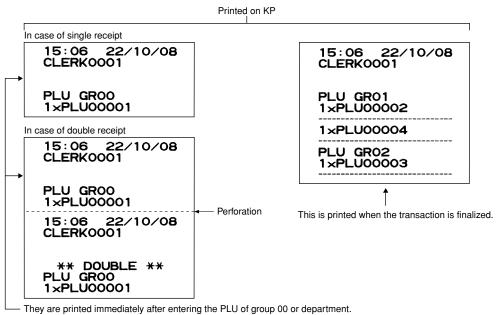

Printed on the built-in printer

22/10/2008 BILL NUMBER:7 0001 CLERK0001 #0361 15:06 *BILL* PLU GROO 1x 10.00 *10.00 PLU00001 PLU GR01 ← This is printed when you press RCPT or RCPT key after the transaction. 1x 15.00 *15.00 (After transaction receipt) PLU00002 1x 4.00 *4.00 PLU00004 PLU GR02 1x 3.00 *3.00 PLU00003 ***32.00** CASH

· Addition + single receipt type

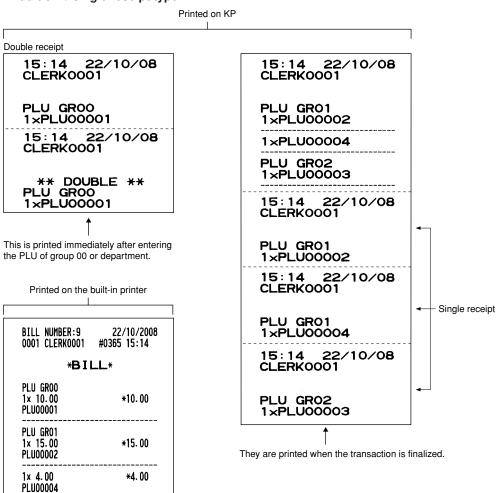

This is printed when you press RCPT or GC key after the transaction. (After transaction receipt)

***3.00**

***32.00**

PLU GR02 1x 3.00

PLU00003 CASH

4 Prior to Entries

Preparations for Entries

Receipt and journal paper rolls

If the receipt and journal paper rolls are not set in the machine or they are getting low, install new ones according to section "Installing and Removing the Paper Roll" under "Operator Maintenance."

■ Receipt ON/OFF function

You can disable receipt printing in the REG mode to save paper using the receipt function. To disable receipt printing, press the key to select "OFF". When the function is in the OFF status, the receipt off indicator "R" is highlighted.



Your register will print reports regardless of the receipt state. This means that the receipt roll must be installed even when the receipt state is "OFF".

Clerk assignment

Prior to any item entries, a clerk must enter his/her clerk codes into the POS terminal. On your POS terminal, you have four systems to enter your clerk code. You can use any of the following systems to assign your clerk code.

Contactless clerk key system (option)

This system allows clerks to be assinged by setting corresponding contactless clerk keys. Any registration cannot be performed unless a contactless clerk key is set.

Clerk code entry system (factory default)

NOTE

The clerk code entry key is assigned to the [CASH] key on the standard keyboard by default.

If you select this system, clerks can be assigned by entering his or her clerk code in advance.

To sign on:


(In case secret code is 0000)

Clerk code → Clerk code → Secret code → ENTER →

To sign off:

Clerk entry key system (factory default)

If you select this system, clerks can be assigned by pressing corresponding clerk keys on the keyboard.

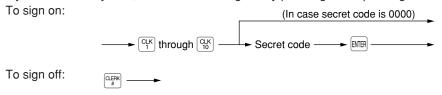

WMF clerk key system (option)

If you need this system, please consult your authorized SHARP dealer.

* The WMF clerk key is not a SHARP product.




- Contactless clerk key system has the priority over the clerk code entry system, that is, while a clerk is signed on by the clerk code entry system, the other clerk can sign on by the contactless clerk key system (the former clerk is signed off).
- While a clerk is signed on by the contactless clerk key system, the other clerk can not sign on by the clerk code entry system.
- In the clerk code entry system, if another clerk is signed on while a clerk is signed on, the latter will automatically be signed off.
- If you want to enter a clerk code before every transaction, consult your authorized SHARP dealer.

NOTE

 Your POS terminal can provide the clerk + cashier system instead of current system (clerk only system). If you want to change the system, please consult your authorized SHARP dealer.

Cashier assignment (Clerk + cashier system)

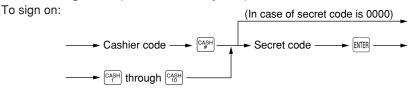

To sign off: CASH →

Error Warning

In the following examples, your POS terminal will go into an error state accompanied by a warning beep and the error message on the display. Clear the error state by pressing the $\boxed{\text{CL}}$ key and take a proper action.


- When you exceed a 32-digit number (entry limit overflow):
 - Cancel the entry and reenter a correct number.
- · When you make an error in key operation:
 - Clear the error and try the entry again.
- When you make an entry beyond a programmed amount entry limit:
 - Check to see if the entered amount is correct. If it is correct, it can be rung up in the MGR mode. Contact your manager.
- When an including-tax subtotal exceeds eight digits:
 - Delete the subtotal by pressing the [CL] key and press a media key to finalize the transaction.

Item Selection from the Menu


Your POS terminal allows you to select functions from a menu. For example, if you want to enter an item for check 1 sale, press the " or well key to display the check menu and touch "CHECK1" on the keyboard area instead of pressing the CH1 key.

Each menu can be opened as follows:


· Cash menu (function menu 1 by default)

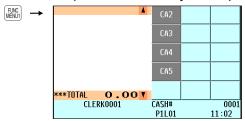

Crate menu (function menu 7 by default)

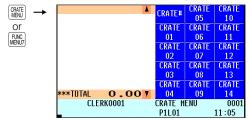


· Credit menu (function menu 2 by default)

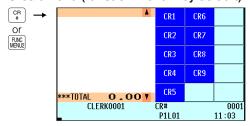


Function menu *




· Check menu (function menu 3 by default)

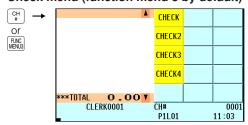


• PLU menu *

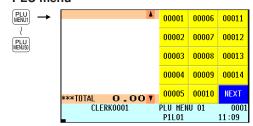


Exchange menu (function menu 5 by default)

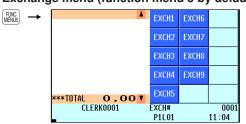

· Auto menu *

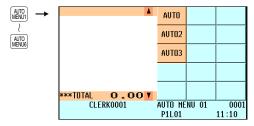

· Miscellaneous menu (function menu 6 by default)

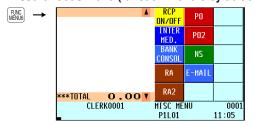



NOTE

* The keys on these menus are shown as examples.

You can set your choice of function keys on the function menu, PLU keys on the PLU menu, and automatic sequencing keys on the AUTO menu.

Example

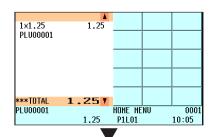

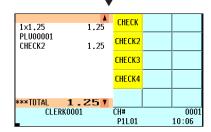

Selling a PLU code 1 item and finalize through check 2

1. Press the key.

2. Press the ch key.

• The CHECK menu will appear on the keyboard area.

3. Touch "CHECK2" on the keyboard area.

• The transaction will be finalized.


Starting Cash Memory Entry

If you enter an amount of change (starting cash) in the drawer before starting entry operations, you can discriminate that amount from the sales amount when reports are generated.

Your POS terminal can be programmed to enforce the entry of starting cash into memory. For details, contact your authorized SHARP dealer.



Select the OPXZ mode and perform the following operation:

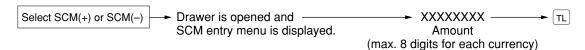

Example



- Select "04 SCM(+)" or "05 SCM(-)" in the OPXZ mode.
 - The SCM entry menu is displayed.
- 2. Enter the amount for each domestic and foreign currency.

CLK#0001		CLERK0001
		* 0.00
20 x	0.01	* 0. 20
20 x	0.02	* 0. 40
20 x	0.05	*1.00
10 x	0.10	*1.00
10 x	0.20	*2.00
10 x	0.50	*5.00
10 x	1.00	*10.00
10 x	2.00	*20.00
10 x	5.00	*50.00
5 x	10.00	*50.00
5 x	20.00	*100.00
5 x	50.00	*250.00
3 x	100.00	*300.00
3 x	200.00	*600.00
3 x	500.00	*1500.00
SCM (+)		*2889.60
SCM TTL		*2889.60

- **3.** Press the TL key.
 - The SCM report is printed.

REG MODE

Item Entries

■ Single item entries

Department entries (direct department entries)

Enter a unit price and press a department key. If you use a programmed unit price, press a department key only.


Procedure

*Less than the programmed upper limit amounts

NOTE

When those departments for which the unit price has been programmed as zero (0) are entered, only the sales quantity is added.

Department entries (indirect department entries)

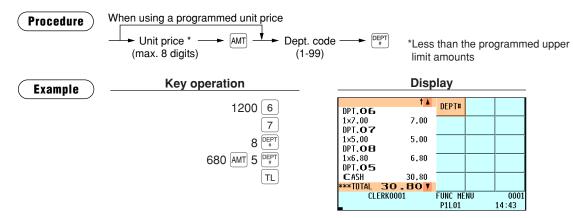

PLU entries (indirect PLU entries)

Enter a PLU code and press the key.



NOTE


When those PLUs for which the unit price has been programmed as zero (0) are entered, only the sales quantity is added.


Subdepartment (open PLU) entries




*Less than the programmed upper limit amounts

PLU entries (direct PLU entries)

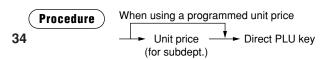


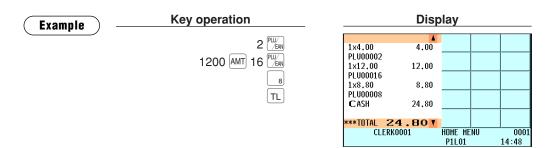


EAN entries

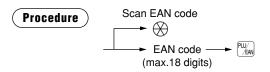

* After an EAN entry, you may be requested to enter a unit price with the display "UNDEFINED CODE" and beep sound. In this case, enter the unit price and press the key.

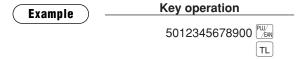

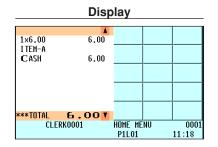

■ Repeat entries

You can use this function for entering a sale of two or more the same items.

You can use the key to repeat entry instead of department, first, direct PLU or key.

Also, you can repeat item entry from a menu screen by pressing the key.

E	xample	Key operation
	Repeated department entry (direct)	200 8
	Repeated department entry (indirect)	680 AMT 5 DEPT (DEPT)
	Repeated PLU entry (indirect)	10 PU/ PU/ /EAN PU/ /EAN
	Repeated PLU entry (direct)	3
	Repeated subdepartment entry	500 AMT 60 PU/ EM)
	Repeated EAN entry	5012345678900 PU//EAN PU//EAN
	Repeated department entry (direct) using the repeat key	600 2 REPEAT REPEAT TL

Pri	nt
3x 2.00 DPT. OB	*6.00
2x 6.80 DPT. 05	*13.60
3x 7.15 PLU00010	*21. 4 5
2x 6.00 PLU00003	*12.00
2x 5.00 PLU00060	*10.00
2× 6.00 5012345678900# ITEM-A	*12.00
3x 6.00 DPT. 02	*18.00
CASH	* 93. 05


■ Multiplication entries

Use this feature when you need to enter two or more the same items.


This feature helps you when you sell a large quantity of items or need to enter quantities that contain decimals.

Procedure

FF method (for speedy entries in the fast food restaurants)

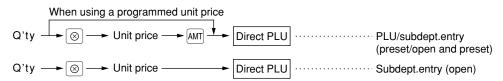

Normal method

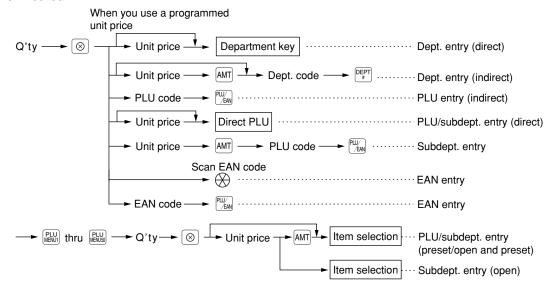

- After an EAN entry, you may be requested to enter a unit price with the display "UNDEFINED CODE" and beep sound. In this case, enter the unit price and press the RITER key.
- Q'ty: Up to four-digit integer + three-digit decimal
- Unit price: Less than a programmed upper limit
- Q'ty x unit price: Up to seven digits


Example _	Key operation	Print	
	7	7.500x 1.65 *12.38 DPT. OB	
	2	2x 2.50 *5.00 DPT. O5	
	5 © ETT 15 S C T T T T T T T T T	15× 2.00 *30.00 PLU00008	
	8 PLU/FAN 8 • 25 ⊗	8. 250× 3. 00 *24. 75 PLU00058	
	3 ⊗ 100 AMT	3x 1.00 *3.00 PLU00060	
	60 (M/SM) 5 (⊗) 5012345678900 (M/SM)	5× 6.00 *30.00 5012345678900# ITEM-A	
	Select PLU code 25 from the menu.	1.800× 2.85 *5.13 PLU00025	
	π.	CASH *110. 26	

■ Split-pricing entries


You will use this function when your customer wants to purchase more or less than the base quantity of a loose item.

Procedure

FF method

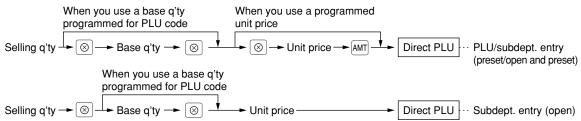


Normal method

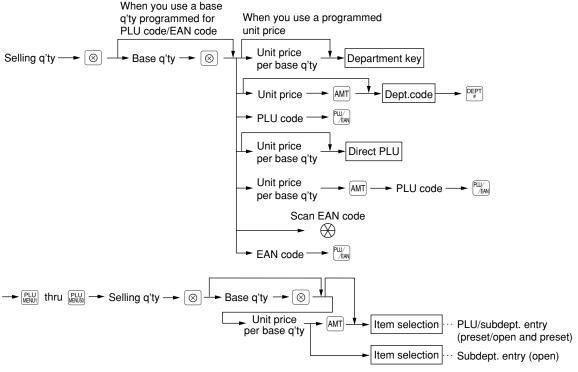

- After an EAN entry, you may be requested to enter a unit price with the display "UNDEFINED CODE" and beep sound. In this case, enter the unit price and press the [NTER] key.
- Selling quantity: Up to four-digit integer + three-digit decimal
- Base quantity: Up to two digits (integer)


NOTE For actual use of this function, consult your authorized SHARP dealer.

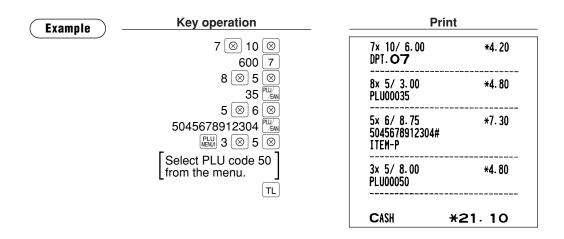


Successive multiplication entries


This function is practical for example when you enter a sale of items sold by area (square meter).

Procedure

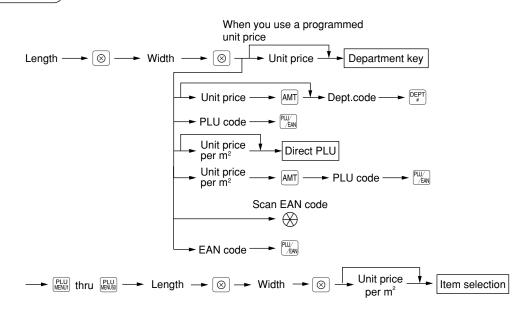

- After an EAN entry, you may be requested to enter a unit price with the display "UNDEFINED CODE" and beep sound. In this case, enter the unit price and press the [NITR] key.
- Length or width: up to seven digits (4-digit integer + 3-digit decimal)
- Unit price: less than a programmed upper limit
- Length x Width x Unit price: up to eight digits

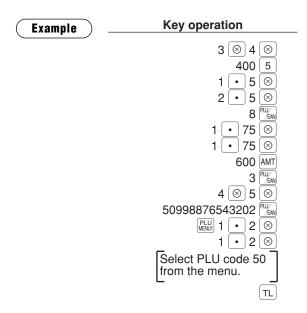

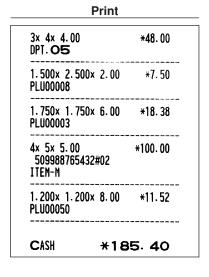


■ Single item cash sale (SICS)/single item finalize (SIF) entries

The operation is the same as that for normal department/PLU/EAN entries. The SICS and SIF functions can be available only when the KP receipt type is "addition receipt type."

SICS entries

- This function is useful when a sale is for only one item and is for cash; such as a pack of cigarettes. This function is applicable only to those departments that have been set for SICS or to their associated PLUs, subdepartments or EANs.
- The transaction is finalized and the drawer opens as soon as you press the department key, key, key, key or the direct PLU key.

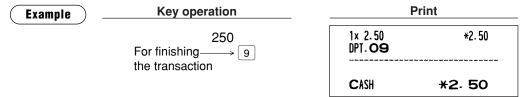

NOTE

If an entry to a department, PLU/subdepartment or EAN set for SICS follows the ones to departments, PLUs/subdepartments or EAN not set for SICS, it does not finalize and results in a normal sale.

SIF entries

- If an entry to a department, PLU/subdepartment or EAN set for SIF follows the ones to departments, PLUs/subdepartments or EANs not set for SIF, the transaction is finalized immediately as a cash sale.
- Like the SICS function, this function is available for single-item cash settlement.

Example	Key operation		Print
	1745 8 1500	1x 17.45 DPT. O8	*17. 45
	For finishing \longrightarrow 9 the transaction	1× 15.00 DPT. O9	*15.00
,		CASH	*32. 45

Scale entries


You have a choice of either the manual or automatic method for scale entry.

If the first method is chosen, the clerk needs to enter the reading of the scale manually. If the second one is chosen, the weight is automatically read from the connected scale (option) and appears in the POS terminal display. If you need manual scale entries, contact your authorized SHARP dealer.

Auto scale entries

Procedure FF method → OPEN → Tare weight When you use a programmed scale table number. → Scale table number Direct PLU


Normal method

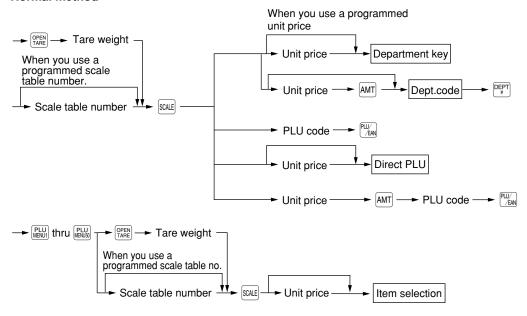

- Tare weight: Up to 4 digits (integer + decimal)
- Scale table number: 1 to 9

NOTE

- The POS terminal can be programmed with up to nine scale tables and allows different tares to be assigned to them.
- When the sale key is pressed, the net weight is automatically read from the connected scale (option) and appears in the POS terminal display.
- When the PLU is programmed for "Compulsory scale entry," it is not necessary to press the key.
- To issue a receipt which shows only a tare weight, press only a tare weight, press of take, enter a tare weight, then press of take and tale.
- The currency descriptor is displayed/printed when it is programmed for the CHECK.

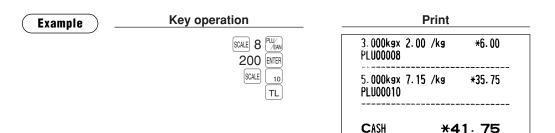


Manual scale entries


Procedure

FF method




Normal method

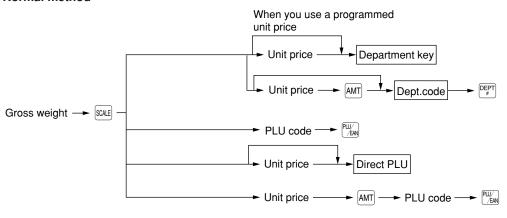

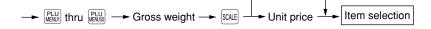

- Gross weight: Up to 5 digits (integer + decimal). When the tare weight is 0, enter a net weight.
- The net weight is automatically calculated using the programmed tare weight.
 - The currency descriptor is displayed/printed when it is programmed for the CHECK.

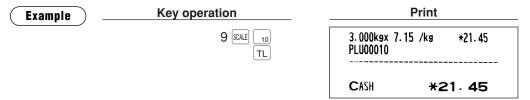

■ Non-turnover sales

This function is used to perform transaction other than ordinary sales (turnover) as is the case when cigarettes or bouquets are ordered in a restaurant and the like. In this case, a clerk once pays the bill and demands together with other payment.

It is performed by entering a department belonging to the non-turnover group or PLU belonging to the department. If you need this function, contact your authorized SHARP dealer.

Example	Key operation		Print
	$\begin{array}{c} 2700 \ \hline 8 \\ \text{Non-turnover sale} \longrightarrow 200 \ \hline 10 \\ \end{array}$	1x 27.00 DPT. O8	*27.00
	TL	1× 2.00 DPT. 1 O	*2.00
		SUBTOTAL Non-Turn	*27.00 *2.00
		CASH	*29 . 00

Special Entries for PLU/EAN

■ Promotion function

You have a choice of either global or individual type for promotion entry.

You also need to select a promotion type from the following:

Amount discount : discounts the programmed amount.

Percent discount : discounts the amount at the programmed percent rate.

Give free item : offers the programmed objected item for free.

Cheaper item free : offers the cheaper ones of the objected items for free.

Selling price : changes the total amount of the registered objected items to the programmed selling price.

NOTE For EAN item entry, you cannot enter NON-PLU type EAN code and press code.

Global type

This function is convenient for matching several PLU/EAN items and selling them in a lump (e.g. value meal, etc.). Operation is the same as for normal PLU/EAN. The promotion table consists of the text for the table, a maximum of 25 objected items (selected from PLU/EAN, department or group), trip level (the number of entries to be satisfied), promotion type and promotion detail. The promotion detail depends on the promotion type. In the example below, amount discount is used as the promotion type.

The programmed promotion entry will be made under the following condition:

• The total quantity of the objected items meet the trip level programmed in the promotion type.

Objected items of table no. 1: Item-A (*2.30), Item-B (*3.10), Item-C (*2.50)

Trip level:


Promotion type: Amount discount Promotion detail: Discount amount (1.00)

<5ale	1>	<sale< th=""><th>2></th></sale<>	2>
Item-A	*2.30	Item-C	*2.50
Item-B	*3.10	Item-C	*2.50
Item-C	*2.50	Item-C	*2.50
Subtotal	*7.90	Subtotal	*7.50
Discount	-1.00	Discount	-1.00
Total	*6.90	Total	*6.50

Example

In the case of <Sale 1> above

	Key operation	n
-	Freated as *2.30 item Freated as *3.10 item Freated as *2.50 item	$ \begin{array}{c} \longrightarrow \underbrace{\begin{array}{c} 40 \\ 41 \end{array}} $
		TL

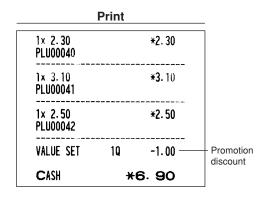

Individual type

This function is convenient for matching several PLU/EAN items and selling them in a lump (e.g. value meal etc.). Operation is the same as for normal PLU/EAN. The promotion table consists of the text for the table, a maximum of 25 objected items (selected from PLU/EAN, department or group), trip levels (the number of entries to be satisfied) for each item, promotion type and promotion detail. The promotion detail depends on the promotion type. In the example below, percent discount is used as the promotion type.

The programmed promotion entry will be made under the following condition:

• The quantities of each of the objected items meet the corresponding trip levels programmed in the promotion table.

Objected items of table no. 2: Item-A (*3.00), Item-B (*2.50), Item-C (*2.10)

Trip levels for each item: Item-A (1), Item-B (1), Item-C (2)


Promotion type: Percent discount
Promotion detail: Percent rate (40.00%)

	<sale< th=""><th>1></th><th></th><th><sale< th=""><th>2></th><th></th></sale<></th></sale<>	1>		<sale< th=""><th>2></th><th></th></sale<>	2>	
	Item-A	*3.00		Item-A	*3.00	
	Item-B	*2.50		Item-A	*3.00	
	Item-C	*2.10		Item-B	*2.50	
_	Item-C	*2.10	_	Item-C	*2.10	_
	Subtotal	*9.70		Subtotal	*10.60	
	Discount	-3.88		Discount	-0.00	Discount is not allowed.
	Total	*5.82		Total	*10.60	(Q'ty of the item-C should be
						two.)

Example

In the case of <Sale 1> above Key operation

Treated as *3.00 item \longrightarrow $_{40}$ Treated as *2.50 item \longrightarrow $_{41}$ Treated as *2.10 item \longrightarrow $_{42}$ Treated as *2.10 item \longrightarrow $_{42}$ TL

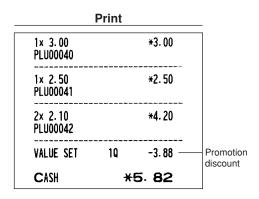


■ PLU/EAN link entries

In case that you register a PLU or EAN that has any PLU linked with the PLU or EAN, the linked PLU(s) are automatically registered together with the leading link PLU or EAN when it is registered. The print format on the receipt depends on the programming (PRINT SELECT2 in OPTIONAL menu in PGM2 mode) as described below.


Printing detailed information

The description texts and amounts of the leading link PLU/EAN and the linked PLUs are printed individually.

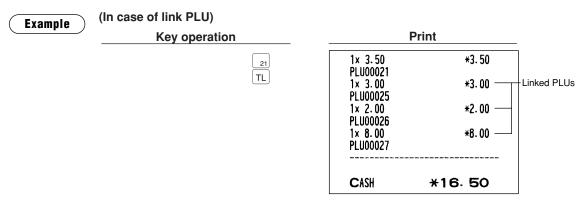

Printing leading link PLU/EAN and total sales amount

The description text of the leading link PLU/EAN and the total sales amount of the leading link PLU/EAN and the linked PLUs are printed.

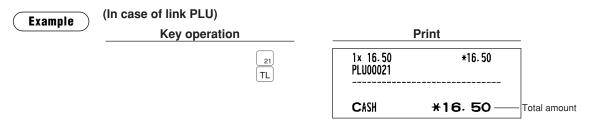

NOTE


If a discount entry is made for a link PLU/EAN entry, the discount amount is calculated based on the total sales amount. The discount itself is given to the leading link PLU/EAN.

■ EAN learning function


When you enter or scan an undefined code, you are required to enter its unit price and the associated department. The code, associated department and unit price entered are stored in the EAN file or the dynamic EAN file and used for future EAN sales entries.



- · When there is no capacity remained in the file, the data is not stored in the file.
- For the text for the EAN code, the text of its associated department is applied.
- You can use the EAN learning function in the training mode. This may be convenient to practice the scanning system.

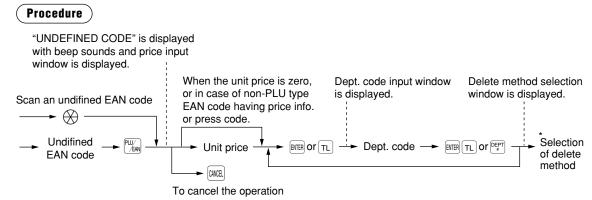

^{*} Select "1 AUTO DELETE" when you want to exempt the EAN code entered from the non-accessed EAN delete function (deletion by selecting DELETE option from EAN DELETE menu in Z1 mode).

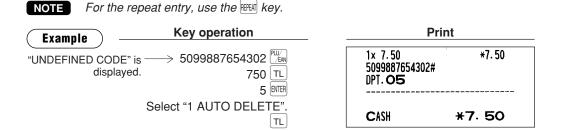

■ EAN/ITF-to-PLU conversion

EAN/ITF-to-PLU conversion allows you to convert an EAN/ITF code to a PLU code.


- Link an EAN/ITF code to a PLU code in the EAN/ITF-to-PLU converting table to use this function.
- Follow the same key procedure as for ordinary EAN entries.
- The item programmed in the converting table is registered as the linked PLU.

EAN-to-PLU conversion

Use this function to sell the same type of item marked with different EAN codes such as packs of cigarettes (They have different EAN codes in some countries because of different package designs).

CASH

***18.00**

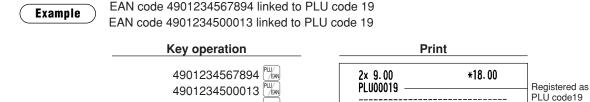


ITF-to-PLU conversion

ITF (Interleaved Two of Five) is a standard distribution code usually printed on corrugated cardboard boxes. Use this function to sell packaged items marked with ITF codes.

Example

ITF code 1234567890123456 linked to PLU code 19 ITF code 1234567890000001 linked to PLU code 19




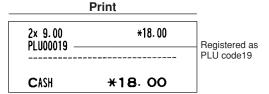

■ PLU/EAN information inquiry (view) function


This function displays the information data such as the unit price and food ingredients of a PLU/EAN item (view mode).

You can also print the information data to show to your customer.

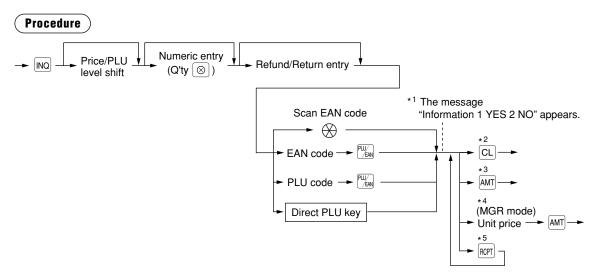

- *1: Select "1 YES" to display the information data on the screen.
- *2: Press the [CL] keys to cancel the view mode.
- *3: Press the [AMT] key to register the displayed PLU/EAN item.
- *4: You can change the unit price temporarily in the MGR mode. The unit price programmed in the PGM mode is not changed. You need to make a manager code entry to enter the MGR mode before the transaction.
- *2-4: Press the MC key first when the information data is being displayed on the screen.
- *5: Press the ROPT key to print the information data. This is available only when the information data is being displayed.

NOTE For the repeat entry, use the key.

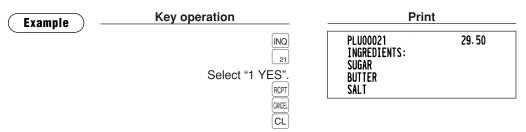

■ EAN price change function

NOTE To use this function, consult your dealer.

You can use this function when you need to change the unit price or associated department of an EAN item in REG/MGR mode.

There are two methods for change:

- 1. Price change mode
 - You can change the preset price and/or the associated department of an EAN item without entering PGM mode.
- 2. Changing price during a transaction


When you has found a wrong EAN price and/or associated department upon transaction, you can correct them at the time of transaction. With the entry of new price and/or associated department, the preset price and/or associated department is automatically changed to the new price and/or associated department.

NOTE


For the Non-PLU type EAN codes having price info. and press codes, the prices in the codes have the priority over the preset prices. So, for these codes, a changed price is valid only when price change is executed.

Procedure

Price change mode

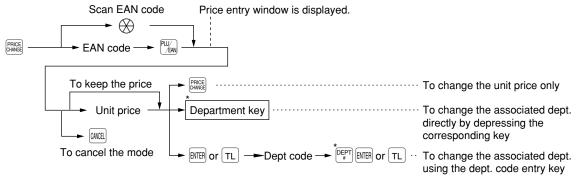

Changing price during a transaction

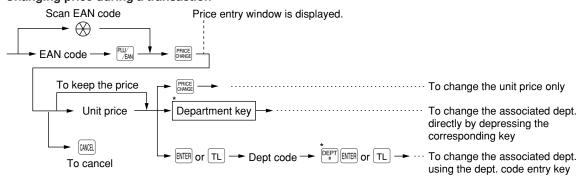


^{*:} Associated department can be changed only when the totalizer of the item is "0".

Example

Price change mode


| Control | Cont

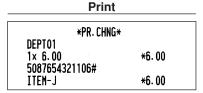

Example

Changing a price during a transaction

Key operation		
5087654321106	PLU/ EAN PRICE CHANGE	
600	PRICE CHANGE	

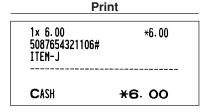

NOTE

- When an undefined code is entered in the price change mode, the register goes to an error status.
- When you press the key during a transaction, the EAN entry is voided of the 1st depression of the key, then you are allowed to enter a correct price and/or associated department.
- When an associated department is changed, the item label for the department will be also changed automatically to the item label of new associated department.
- For the repeat entry, use the REPEAT key.

■ Combo meal PLU/EAN entries


Operation is the same as that for normal PLU/EAN entries.

When a Combo meal PLU/EAN is entered, the labels of those PLUs tied to the Combo PLU/EAN are printed automatically. The sum of all adjusted prices (of those PLUs tied to the Combo PLU) becomes the "combo" price setting.

Example

Key operation



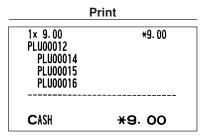



When combo meal is registered, q'ty totalizer of the combo PLU/EAN and amount totalizer of each tied PLU are updated.


With/without entries

A maximum of 10 tied PLUs of the Combo PLU can be modified (added or deleted) temporarily by using and with keys.


With: To add a PLU to the combo PLU/EAN.

Without: To delete a linked PLU from the combo PLU/EAN.


Procedure

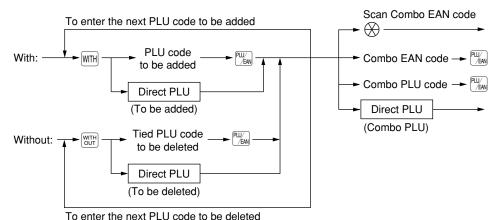

NOTE The "with" and "without" operation is allowed a total of 20 times.

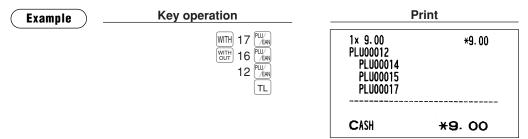


■ PLU Menu entries

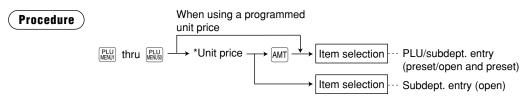

*Less than the programmed upper limit amounts

NOTE To exit the menu screen, press the HOME key.

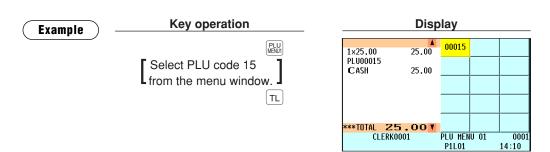

■ PLU level shift (for direct PLUs)

This shift can add to the number of direct PLUs on your POS terminal without adding additional direct PLU keys. You can use direct PLUs in ten levels by utilizing the PLU level shift number key end or the PLU level shift keys L1 thru L10.

Level key shifts the PLU level from the other nine to the required level. (The normal level is the level 1.) You must program your machine in the PGM mode to select one of the two PLU level shift modes — automatic return mode* and lock shift mode** — and decide whether to allow PLU level shift in both the REG and MGR modes or in the MGR mode alone.


- * The automatic return mode automatically shifts the PLU level back to level 1 after pressing a direct PLU key or finalizing each transaction.
- ** The lock shift mode holds the current PLU level until depression of a PLU level shift key.

Automatic return mode (for PLU levels)

If your terminal has been programmed for PLU level in the automatic return mode, press a desired PLU level shift key before a numeric entry.

Procedure

(Returning every item entry) n:PLU shift no.

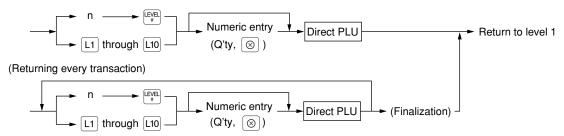


NOTE When you use the FF method, you need not press the \boxtimes key for multiplication entries.

Lock shift mode (for PLU levels)

If your terminal has been programmed for PLU level in the lock shift mode, press a desired PLU level shift key before a numeric entry.



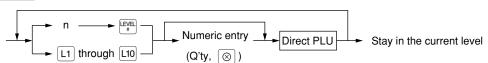

NOTE When you use the FF method, you need not press the ⊗ key for multiplication entries.

Example Level 1 : PLU code 1, PLU code 2 Level 2 : PLU code 70, PLU code 65


• When your POS terminal has been programmed for the automatic return mode (by one item):

TL

Key operat	tion
	2 (#) 1

	Print
1x 1.91 PLU00001	*1.91
1× 12.00 PLU00070	*12.00
1× 2.50 PLU00002	*2.50
CASH	*16. 41

• When your POS terminal has been programmed for the lock shift mode:

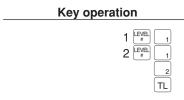

	Print
1x 1.91 PLU00001	*1.91
1x 12.00 PLU00070	*12.00
1x 5.00 PLU00065	*5.00
CASH	*18. 91

■ Price level shift

Eight different price levels can be programmed for each PLU/EAN.

The price levels can be changed for PLU/EAN registrations.

You can shift the PLU/EAN price level (level 1 thru 8) by utilizing the price level shift number key or the price shift keys shift thru shift.

You must program a price level shift mode (i.e. automatic return mode* or lock shift mode**) and the operating modes to be used for the price level shift (i.e. both REG and MGR modes or MGR mode alone).


- * The automatic return mode automatically shifts the PLU/EAN price level back to level 1 after a PLU/EAN shift entry. You can select whether the price level should return each time you enter one item or each time you finalize one transaction.
- ** The lock shift mode holds the current PLU/EAN price level until pressing a price level shift key.

Automatic return mode (for price shifts)

If your terminal has been programmed for PLU/EAN price level in the automatic return mode, press a desired price level shift key before a numeric entry.

Procedure

(each item) n: Price shift level no.

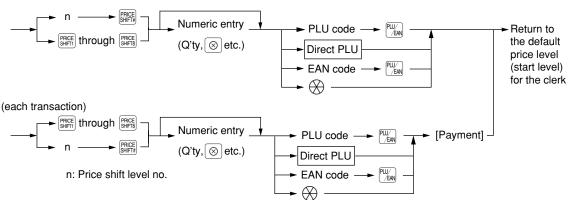


NOTE When you use the FF method, you need not press the \bigotimes key for multiplication entries.

Lock shift mode (for price shifts)

If your terminal has been programmed for PLU/EAN price level in the lock shift mode, press a desired price level shift key before a numeric entry.

Procedure

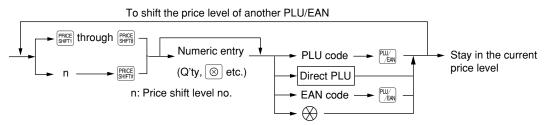

NOTE When you use the FF method, you need not press the (8) key for multiplication entries.

Example

PLU price level 1: PLU code 1 (@1.91), PLU code 2 (@0.79) PLU price level 2: PLU code 1 (@2.00), PLU code 2 (@0.99)

• When your POS terminal has been programmed for the automatic return mode (by one item):

Key operation		
2	PRICE 1 SHIFT# 1 TL	

	711111
1x 1.91 PLU00001	*1.91
1x 2.00 PLU00001	*2.00
1x 0.79 PLU00002	*0.79
CASH	*4 . 7 0

• When your POS terminal has been programmed for the lock shift mode:

y operation
1 PRICE 1 2 PRICE 1 2 TL

F	Print
1× 1.91 PLU00001	*1.91
1x 2.00 PLU00 001	*2.00
1x 0.99 PLU00002	* 0. 99
CASH	* 4. 90

■ Condiment entries (for PLU)

Your POS terminal may be programmed for prompting condiment and preparatory instructions for a menuitem PLU.

Example:

When you enter a menu-item PLU, a prompting message such as "HOWCOOK?" appears on the information area with the "Following PLUs" on the keyboard area. You must specify one of the "Following PLUs" such as "without mustard" to meet a special order of the guest. In an example of the condiment table shown below, it is assumed that the condiment table no.1 is assigned to PLU code 21 (programmed text "STEAK") and table no. 4 is assigned to table no. 1 as the next table no. When you enter the PLU code 21, the message "HOWCOOK?" will appear to prompt you to specify one of "RARE," "MED.RARE," and "WELLDONE." If the guest chooses "RARE," touch it on the keyboard area. Then the next message "POTATO?" will appear on the information area to prompt you to specify one of "P.CHIPS," "MASHED.P," and "BAKED.P." If the guest chooses "MASHED.P", select it. Then press the TL key to end this entry.

Here is an example of how to perform a condiment entry when your condiment table is as shown below.

Table number	PLU codes for condiment entry (programmed text, price)			Next table no.	
1	(HOWCOOK?)	23 (RARE 0.00)	25 (MED.RARE 0.00)	27 (WELLDONE 0.00)	4
4	(POTATO?)	33 (P. CHIPS 0.60)	37 (MASHED.P 0.60)	38 (BAKED.P 0.50)	
Menu-item PLUs	Message text		PLUs		

Example

Key operation

Touch "RARE"

[Touch "RARE"


on the keyboard.


[Touch "MASHED.P"

on the keyboard.

Display



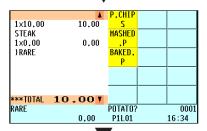

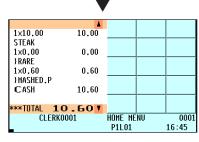


NOTE

- When the condiment entry is programmed to be compulsory, your POS terminal will continue to operate for the condiment entry until you finish the entire condiment entry programmed for the PLU. During the condiment entry, if you enter a normal PLU, which is not in the condiment table, an error message will appear.
- When the condiment entry is programmed to be non-compulsory, entering a normal PLU cancels the condiment entry.
- When the [NRT] key is pressed, the entry skips to the next table which is programmed.
- When you enter a PLU priced at "0.00," only the text will be printed on the receipt.
- No refund entry is possible for any condiment entries. When you perform a refund entry with a menu-item PLU, the condiment PLUs assigned to the menu-item PLU are automatically registered as a refund entry.
- You may omit the compulsory condiment entry by pressing the [ANCE] key.
- The last entered menu-item PLU or condiment PLU can be voided by the direct (last item) void function.
- The cursor or touching void entry is allowed for those PLUs that are entered as condiments (menu and condiment).
- The multiplication entry can be made for each condiment item independently. However, sum
 of the entered quantity per condiment table have to be same or below as menu PLU
 registration.
 - When no multiplication entry is made, the quantity is decided automatically to reach number of menu PLU registration.
- You can press the see key to shift a price level during the condiment PLU entry.

Pint entries

Using this function, you can sell an item with the desired quantity such as a half and a double.

To perform this function, press the key and enter an item assigned a PLU/EAN code for which you have programmed a pint price and a pint quantity. The price for the pint quantity will appear on the receipt. For details, contact your authorized SHARP dealer.

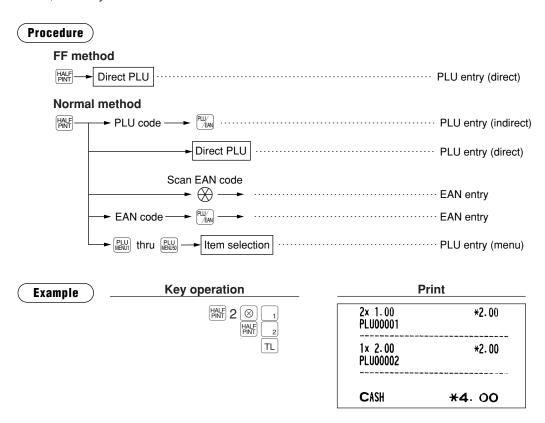

■ Happy hour


If the date/time range is programmed for each happy hour, the price corresponding to the price level is automatically registered within the time range. When the entry time becomes to be out of the time range, the price level returns to the level before the time range:

You can progarm "Happy hour price shift: YES/NO" for each clerk.

The following exmaples show that 9:00 AM and 11:00 AM are programmed for price level 2.


Example

• Between 9:00 AM and 11:00 AM

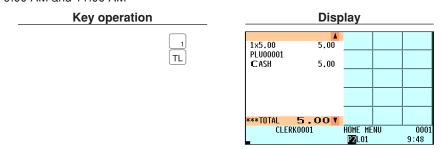

• Excepting the time range from 9:00 AM to 11:00 AM

Key operation

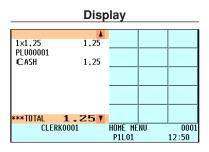

Crate entries

Using the or or thru which is thru which is sell bottles of drinks in a crate (A crate is a box for transporting and storing drink bottles). To use this function, you need to program the following items in the PGM2 mode:

- · Crate table no.
- · Crate PLU/EAN and its preset price
- · Number of bottles to pack into the crate
- PLU/EANs in the bottles (max. 10 PLU/EANs) and their price level
- · Price of the crate table
- Combination function: Yes (combination entries) / No (single entries)
- · Crate table text

There are two types of crate entries as shown below.

Single entries

Use this type of entry to sell a crate of one kind of drink.

Example

Crate table no.: 1 Crate PLU/EAN: PLU code 13 (preset price: 0.20)
Number of bottles: 12 PLU/EAN in the bottles: PLU code 14 (price level: 1)

Price of the crate table: 9.80 Combination function: No

Crate table text: CRATE01



The preset price of the PLU code 14 is 1.20, but it is ignored in the calculation of the amount registered. See the following formula:

• The amount registered = the price of the crate table + the price of the crate PLU/EAN In the above example, the registered amount (10.00) = 9.80 + 0.20

NOTE

The entry of the PLU/EAN in the bottles only (PLU code 14 in the above example) is allowed.

Combination entries

Use this type of entry to sell a crate of several kinds of drinks.

Example

Crate table no.: 2 Crate PLU/EAN: PLU code 9 (preset price: 0.20)

Number of bottles: 6 PLU/EANs in the bottles: PLU code 10, 11, 12 (price level: 1)

Price of the crate table: 5.50 Combination function: Yes

Crate table text: CRATE02

Key operation	P	rint
(PLU/EANs in the bottles need to be entered until the quantity reaches the specified number of bottles.)	1× 5.50 CRATEO2 1× 0.20 PLU00009	*5.50 *0.20
11 11 12	CASH	* 5. 70
TL		

The preset prices of the PLU codes 10, 11, and 12 are ignored. The formula for the amount registered is the same as that of single entries.



- The entry of the PLU/EANs in the bottles only (PLU codes 10, 11, 12 in the above example) is allowed.
- If open price entry is preset for the PLU/EANs in the bottles, the setting is ignored.
- When you want to make a multiplication entry, the quantity must be an integer and no more than the number of bottles specified in the crate table.

Display of Subtotals

Your POS terminal provides the following types of subtotals:

■ Subtotal

Press the st key at any point during a transaction. The sales subtotal including tax will appear in the display.

■ Difference subtotal (Differ ST)

Press the Fr key at any point during a transaction. When you press it first, the subtotal of all entries which have been made is displayed and printed. If you press it second, you will get the subtotal of entries which have been made after you got the first subtotal. Taxes are calculated each time you press the Fr key.


Example _	mple Key operation		Print
	1 2	1x 1.91 PLU00001	*1.91
	DIFFER ST	1× 0.79 PLU00002	*0.79
	(TL)	DIFF ST 1× 6.00 PLU00003	*2.70 *6.00
		DIFF ST	*6.00
		CASH	*8 . 70

Finalization of Transaction

■ Cash or check tendering

Press the $\boxed{\text{ST}}$ key to get an including-tax subtotal, enter the amount tendered by your customer, then press the $\boxed{\text{TL}}$ or $\boxed{\text{CA2}}$ through $\boxed{\text{CA5}}$ key if it is a cash tender or press the $\boxed{\text{CH1}}$ through $\boxed{\text{CH5}}$ key if it is a check tender. When the amount tendered is greater than the amount of the sale, your POS terminal will show the change due amount and the symbol "CHANGE." Otherwise your POS terminal will show the symbol "DUE" and a deficit. Make a correct tender entry.

Example Normal method

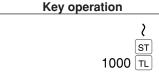

F	Print
1x 1.91 PLU00001	*1.91
1× 0.79 PLU00002	*0.79
***TOTAL Cash Change	*2. 70 *10.00 *7.30

Check tendering

Key operation	
	>
	ST
1000	CH1

Pı	rint
1× 1.91 PLU00001	*1.91
1x 0.79 PLU00002	*0.79
***TOTAL Check Change	*2. 70 *10.00 *7.30

NOTE

You can also enter a cash or check tender from the cash or check menu window. Press the representation or level and select a pertinent cash or check number and enter the amount.

■ Mixed tendering (check + cash)

	Print
1× 10.00 PLU00001	*10.00
1× 4.56 PLU00002	*4. 56
***TOTAL CHECK Cash Change	*14. 56 *10.00 *5.00 *0.44

■ Cash or check sale that does not need any tender entry

Enter items and press the $\boxed{\text{TL}}$ or $\boxed{\text{CA2}}$ through $\boxed{\text{CA5}}$ key if it is a cash sale or press the $\boxed{\text{CH1}}$ through $\boxed{\text{CH5}}$ key if it is a check sale. Your POS terminal will display the total sales amount.

Example Key operation

10 Pulpose

	Print
1× 6.00 PLU00006	*6.00
1× 7.15 PLU00010	*7. 15
CASH	*13. 15

In the case of check sale

1× 6.00 PLU00006	*6.00
1x 7.15 PLU00010	*7. 15
CHECK	*13. 15

■ Credit sale

Enter items and press the corresponding credit keys (CR1) through CR9).

Example Key operation



Print		
1x 6.00 PLU00006	*6.00	
1× 9.50 PLU00007	*9.50	
CREDIT1	*15. 50	



- Amount tendering operations (i.e. change calculations) can be achieved by the CR1 through CR9 key when a PGM2 mode programming allows them.
- You can also enter a credit tender from the credit menu window. Press the credit menu window. Press the credit number and enter the amount.

■ Mixed-tender sale (cash or check tendering + credit tendering)

Print Key operation Example 1x 1.91 *****1.91 PLU00001 ST 950 TL 1x 4.56 ***4.56** PLU00002 1x 6.00 ***6.00** PLU00003 *12.47 *9.50 ***TOTAL CASH CREDIT2 *2.97

Press the CH1 through CH5 keys or the CR1 through CR9 keys in place of the TL key when your customer makes payment by checks or by credit account.

Computation of VAT (Value Added Tax)/Tax


■ VAT/tax system

The POS terminal may be programmed for the following six tax systems by your authorized SHARP dealer.

Automatic VAT 1 through 6 system (Automatic operation method using programmed percentages) This system, at settlement, calculates VAT for taxable 1, taxable 2, taxable 3, taxable 4, taxable 5, and taxable 6 subtotals by using the corresponding programmed percentages.

Automatic tax 1 through 6 system (Automatic operation method using programmed percentages) This system, at settlement, calculates taxes for taxable 1, taxable 2, taxable 3, taxable 4, taxable 5, and taxable 6 subtotals by using the corresponding programmed percentages, and also adds the calculated taxes to those subtotals, respectively.

Manual VAT 1 through 6 system (Manual entry method using programmed percentages)

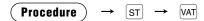

This system provides the VAT calculation for taxable 1, taxable 2, taxable 3, taxable 4, taxable 5, and taxable 6 subtotals. This calculation is performed using the corresponding programmed percentages when the VAT key is pressed just after the ST key.

Manual VAT 1 system (Manual entry method for subtotals that uses VAT 1 preset percentages)

This system enables the VAT calculation for the then subtotal. This calculation is performed using the VAT 1 preset percentages when the VAT key is pressed just after the ST key. For this system, the keyed-in tax rate can be used.

Manual tax 1 through 6 system (Manual entry method using programmed percentages)

$$ullet$$
 Procedure $ullet$ o $ullet$ ST $ullet$ VAT

This system provides the tax calculation for taxable 1, taxable 2, taxable 3, taxable 4, taxable 5, and taxable 6 subtotals. This calculation is performed using the corresponding programmed percentages when the VAT key is pressed just after the ST key. After this calculation, you must finalize the transaction.

Automatic VAT 1 through 3 and tax 4 through 6 system

This system enables the calculation in the combination with automatic VAT 1 through 3 and tax 4 through 6. This combination can be any of VAT 1 through 3 and tax 4 through 6. The tax amount is calculated automatically with the percentages previously programmed for these taxes.

NOTE


VAT/tax assignment is printed at the fixed right position of the amount on the receipt and bill as follows:

VAT1/tax1 — VAT2/tax2 ----> B *VAT3/tax3* → *C VAT4/tax4* → *D VAT5/tax5* → *E* VAT6/tax6 ----> F

When the multiple VAT/tax is assigned to a department or a PLU, a smaller number of the VAT/tax will be printed. For details, contact your authorized SHARP dealer.

Example

(When the manual VAT 1 through 6 system is selected)

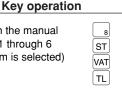

Print		
1x 2.00 PLU00008	*2.00	
SUBTOTAL	*2.00	
TAX1 ST VAT 1 NET 1	*2.00 *0.28 *1.72	
CASH	* 2. 00	

VAT shift entries

This feature is intended to shift the tax status of a particular department (or PLU) programmed for taxable 1 or taxable 1 and taxable 3.

- 1. When the VAT shift entry is made for a particular department or PLU programmed for taxable 1, their tax status shifts to taxable 2.
- 2. When this entry is made for a particular department (or PLU) programmed for taxable 1 and taxable 3, the tax status "taxable 1" remains unchanged, but the other, "taxable 3" is ignored.

There are two types of VAT shift entries: VAT shift by transaction and by item.

VAT shift by transaction enables the VAT shift function to be in effect during a transaction. Press the SATT key to enter the VAT shift mode at the start of transaction. You can also perform this function by assigning the clerk to operate in the VAT shift status (PERSONNEL-CLERK programming).

VAT shift by item is valid only for one item. Press the string key just before the item entry.

In case of VAT shift by transaction

Example	Key operation		
	(When the automatic VAT 1 through 6 system 8 TL		

1× 2.00 PLU00008	*2.00
SUBTOTAL	*2.00
TAX2 ST VAT 2 NET 2	*2.00 *0.20 *1.80


NOTE

- · If you want to achieve the VAT shift at the end of transaction, contact your authorized SHARP dealer.
- To program the initial status of the POS terminal to be in the VAT shift mode (Initial VAT SHIFT), please contact your authorized SHARP dealer.

Guest Check (GLU)

■ Guest look up (GLU) system


New guest

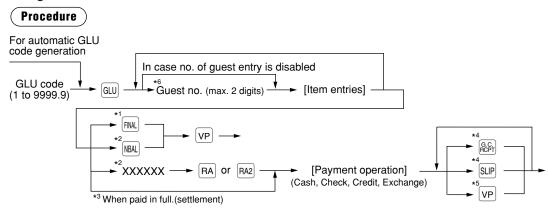


To cancel the opened GLU display, press the MICE key.



- A clerk must has been registered before starting GLU entry in case the clerk system or the clerk + cashier system is selected.
- The GLU code refers to a code that will be used whenever the guest check must be accessed for re-ordering or final payment.
- Your POS terminal can be programmed GLU codes in a sequential fashion (automatic GLU code generation). If your POS terminal has not been programmed to do so, each GLU code can be entered manually.
- When you open the guest check (ex. #2) during operating another guest check (ex. #1), the
 previous guest check (#1) is closed automatically by NBAL function. (If "clerk# compulsory" is
 selected in function selection programming, you must finish the current guest check first for
 making another guest check.)
- *1 This is the optional function. (Temporary finalization)
 You can temporarily finalize a guest check by pressing the key. This prints out a guest check to show the current balance, including tax. The guest check, however, is still "open." This means you can still make additional orders to it. The tax is calculated but is not added to the tax totalizer.
- *2 After entering items, press the NBAL key or remove the optional real clerk key (contactless clerk key or WMF clerk key) to temporally close the check. The tax is not calculated.
- *3 The tax is calculated and is added to the tax totalizer.
- *4 In case the copy receipt function is enabled, [Scr] and [Scr] key operations can be repeated only once.
- *5 Validation printing operation can be repeated once by default. You can set the number of VP operations between 0 to 9.
- *6 To correct the number of guests, re-enter a number and press the [QUEST] key.

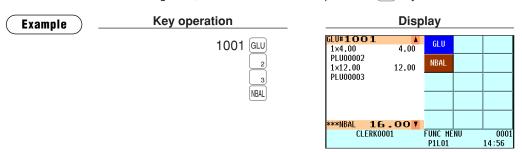

Additional ordering

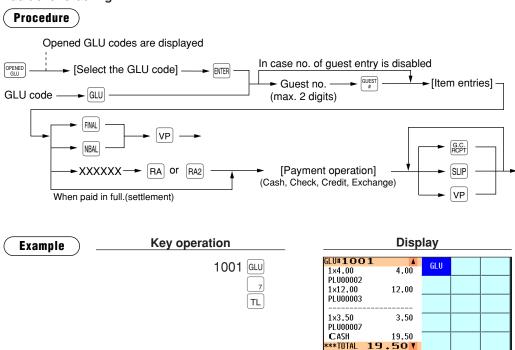

Deposit entries

Deposit refers to a prepayment on a guest check. It can be received in cash, by check or credit. You can make a deposit entry only when entering a guest check. It cannot be done during handling of a tendered amount.

CLERK0001


FUNC MENU


P1L01

0001

15:16

A received deposit can be refunded by pressing the key. You cannot attempt to refund an amount larger than the deposit balance.

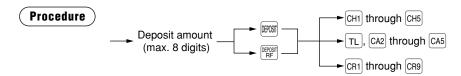


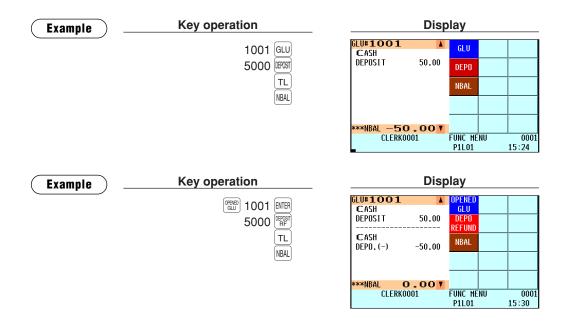

■ Transferring guest checks out or in (Transfer-in/out)


Transferring guest checks out

At the end of a clerk shift or whenever a clerk is relieved, one or more open guest checks can be transferred from the clerk to the open check file until the responsibility for the check(s) is assigned to another clerk. Also, all open guest checks of this clerk can be transferred at one time.

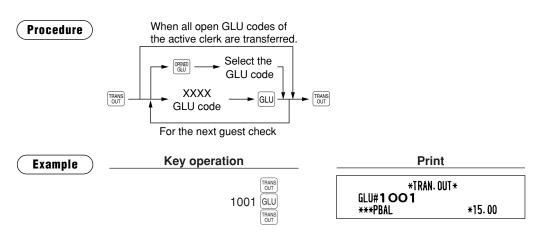


Transferring guest checks in

When the second clerk is assigned to be responsible for guest checks that have been transferred out:

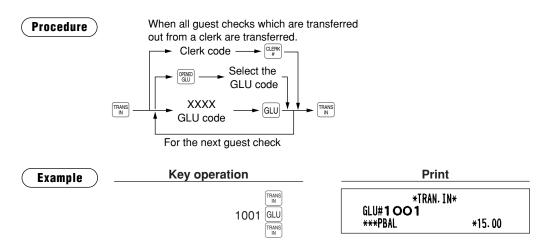

■ Bill printing

This function is used for issuing the bill to the guest. Your POS terminal can print the bill (normal bill or cumulated bill) on the slip, receipt, or journal printer. For selecting these printers, contact your authorized SHARP dealer.

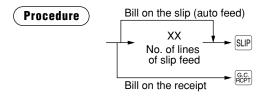

NOTE

- This function is available immediately after the finalization of transaction.
- If the copy function is allowed, you can print the bill copy on slip and receipt only once. If you need the bill copy, contact your authorized SHARP dealer.

Example	Key operation	Print	
	G.C. RCPT	BILL NUMBER:3 0001 CLERK0001	22/10/2008 #0251 14:28
		BILL	
		1x 1.91 PLU00001	*1.91
		1x 15.00 PLU00002	*15. 00
		CASH	*16. 91

■ Intermediate GLU reading


This function is used for temporary inspection of the guest check. The details of the guest check can be printed on the receipt or the slip. For selecting these printers, contact your authorized SHARP dealer.



*You can display open GLU codes by pressing the ST key.

NOTE


- This function is available after finishing the guest check entry.
- If the intermediate GLU finalization check is set to compulsory (INTERMEDIATE FINAL is set to DISABLE in FUNC. PROHIBIT), a guest check cannot make settlement without printing the GLU using the intermediate GLU reading function (temporarily finalization by the FINAL or NBAL key is available.)

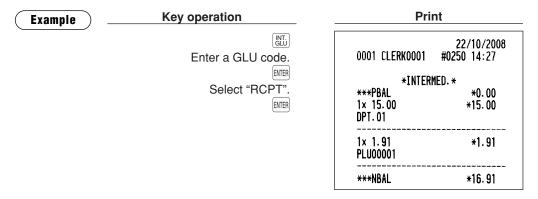

■ Bill totalizing/bill transfer


Bill totalizing

The bill totalizing function is used to totalize multiple bills when, for example, a particular guest pays not only his or her bill, but also the bills of other guests.

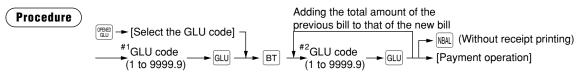


NOTE

- #1 bill and #2 bills are merged into one bill. The GLU code on the merged bill is determined by the last entered #2 bill. A maximum of 5 bills is available for #2.
- The GLU code of #1 must be in use. If the guest check(s) of #1 or #2 has already been handled by another clerk, the guest check(s) must have been made "Transferring out."

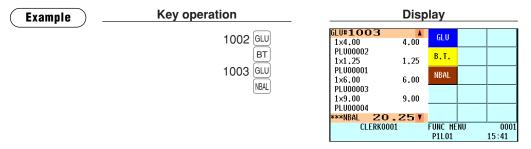


Bill transfer

This function is used to change the GLU code of a particular bill.

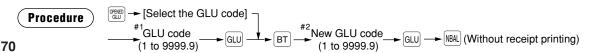

NOTE


- This function requires that the current GLU code be entered for #1 and a new GLU code be entered for #2.
- A #1 bill is transferred to a #2 bill. The #1 bill is then cleared and set free.

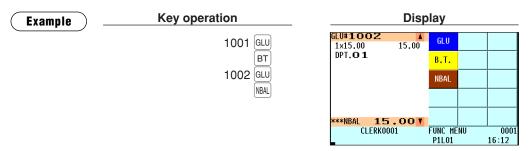

■ Bill separating


This function is used when each guest of a group pays his or her own order. With this function, you can select some items from a guest check and make an entry for the payment. Also, you can transfer the items you have selected to other guest checks.

There are three types of the bill separating functions: bill separating by item, amount and person.

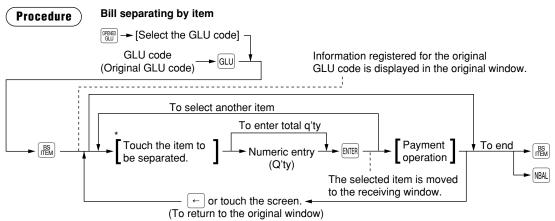


^{*} You can also select the item by moving the cursor. In this case, press the 📦 key first to display the cursor.


Bill separating by amount

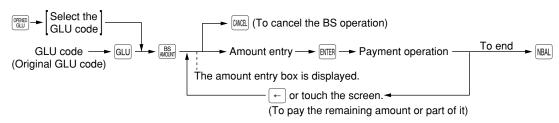


Bill separating by person

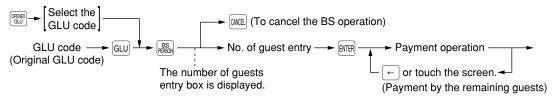


Bill separating by item

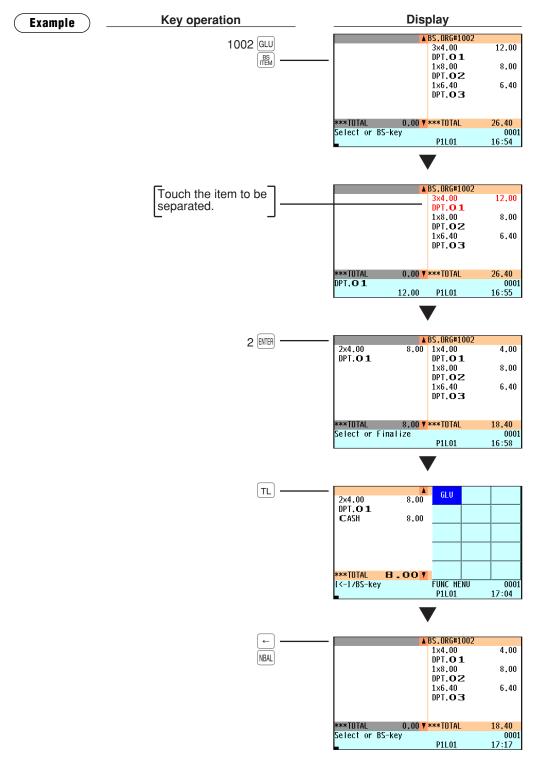

Bill separating by amount

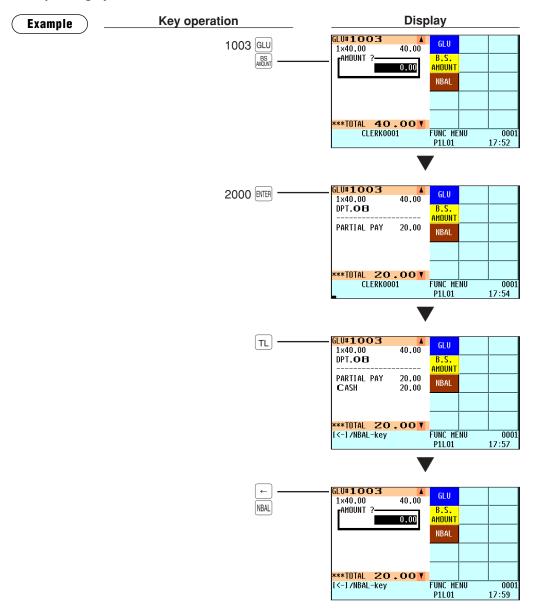

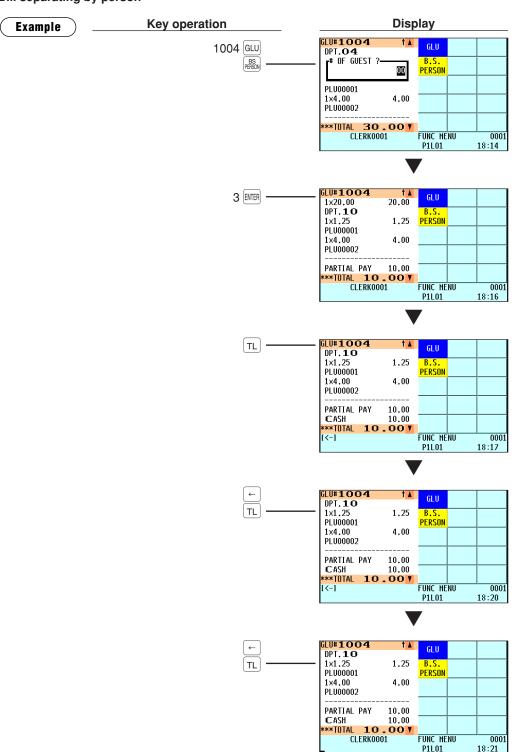




- The items which are refunded or discounted can not be separated.
- You cannot specify the quantity of an item for selection when the stored quantity has decimal fraction.
- When no item is yet selected, the B.S. mode is automatically terminated by pressing the RBAL key or removing the clerk key.
- After performing the BS by amount operation for a bill, you can not execute the BS by item or bill totalizing operation for the bill.

■ Transaction migration


This POS terminal allows you to migrate the transaction of non-GLU type to the GLU file.

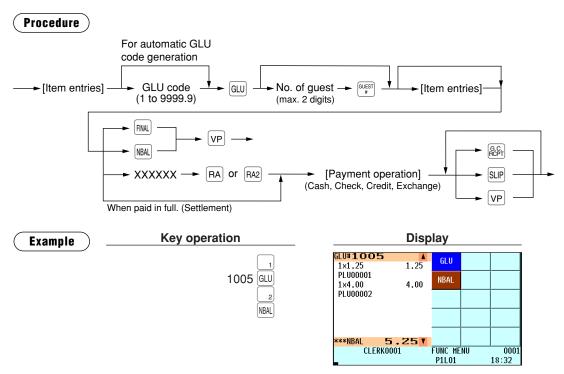

NOTE The transaction migration can be operated before payment operation was made.

■ Recall GLU

When the key is treated as the total status key (that is, FINAL key functions as a cash key), you can recall GLUs finalized by the key by pressing the key to make additional item entries and realize the settlement other than cash.

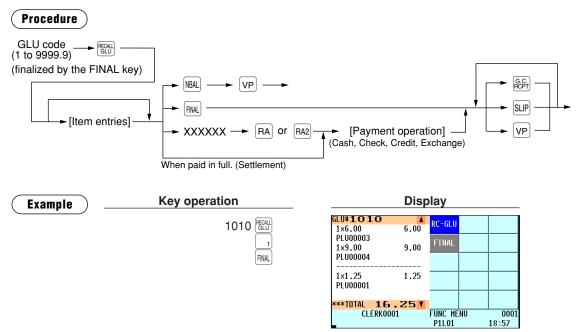

Ordering Systems

■ Customer advance ordering


Perform this function to register a customer advance order.

An ordering number is assigned to each customer advance order. Every time a new customer advance order is registered, an incremented ordering number is assigned to the order. If the order is finalized or canceled, the once-assigned ordering number will never be used again.

New/additional ordering

Procedure


Additional ordering (direct key entries)

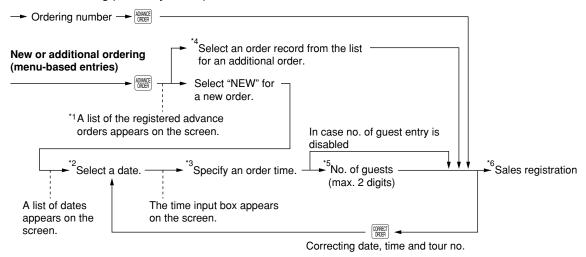

- *1: The ordering numbers sorted by date and time are displayed in the list. You can also sort them by date and tour no. or date only. For details, please consult your authorized SHARP dealer.
- *2: Choose a purchase order date for the new order.
- *3: Specify a time by entering a one-to-two or three-to-four-digit number. A one-to-two-digit number is interpreted as hour, a three-to-four-digit number as hour and minute.
- *4: To void an order record, select a record by cursor, then press the void key. The message "ARE YOU SURE? 1 YES 2 NO" appears. Select "1 YES" to void it.
- *5: To correct the number of guests, re-enter a number and press the [GUEST] key.
- *6: To cancel the registration, press the week key. The message "CANCEL REG.? 1 YES 2 NO" appears. Select "1 YES" to cancel it.

NOTE

- New advanced orders must be temporarily closed with the NBAL or FINAL key. When the purchase order date comes, finalize them by cash, check or credit tendering.
- The purchase order date must be within 100 days from the current date.
- You can finalize an order before the purchase order date. In this case, the message "DATE NOT REACHE 1 YES 2 NO" appears. Select "YES" to finalize it.

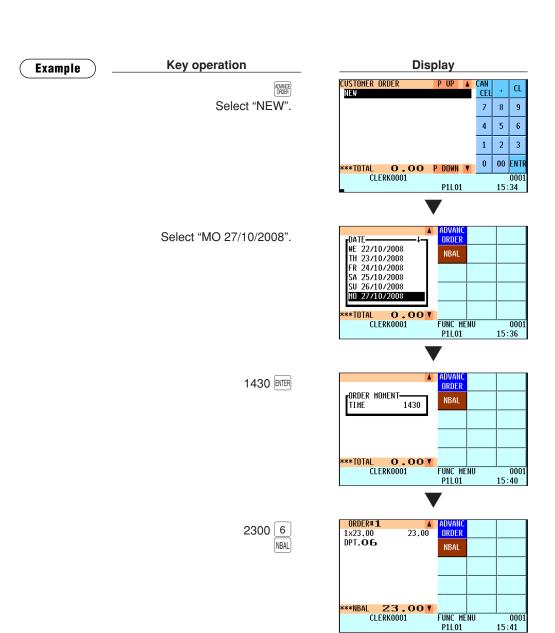

■ Credit customer advance ordering

Perform this function to register a credit customer advance order. Unlike a customer advance order, a credit customer advance order contains the following two numbers: customer number and customer related consecutive number


The customer number is six digits and the customer related consecutive number is 1 to 10 by default. They can be changed to five digits and 1 to 99 respectively by programming. To program the setting, please consult your authorized SHARP dealer.

The customer related consecutive number is incremented every time a credit customer advance order is registered.


New/additional ordering

Procedure

New or additional ordering (menu-based entries)

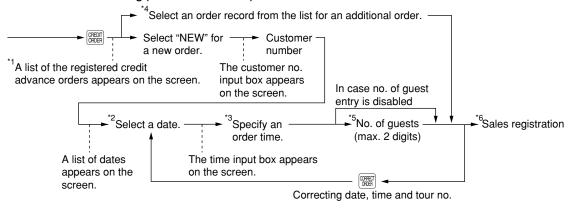


New or addtional ordering (direct key entries)

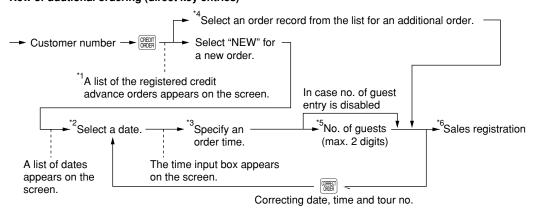

- * You need to register a new ordering by the menu-based method before performing direct key entries.
 - *1: The customer numbers and customer related consecutive numbers sorted by date and time are displayed in the list. You can also sort them by date and tour no. or date only. For details, please consult your authorized SHARP dealer.
 - *2: Choose a purchase order date for the new order.
 - *3: Specify a time by entering a one-to-two or three-to-four-digit number. A one-to-two-digit number is interpreted as hour, a three-to-four-digit number as hour and minute.
 - *4: To void an order record, select a record by cursor, then press the voil key. The message "ARE YOU SURE? 1 YES 2 NO" appears. Select "1 YES" to void it.
 - *5: To correct the number of guests, re-enter a number and press the [GUEST] key.
 - *6: To cancel the registration, press the [MILL] key. The message "CANCEL REG.? 1 YES 2 NO" appears. Select "1 YES" to cancel it.



- New credit customer advanced orders must be temporarily closed with the NBAL or FINAL key. When the purchase order date comes, finalize them by credit tendering.
- The purchase order date must be within 100 days from the current date.
- You can finalize an order before the purchase order date. In this case, the message "DATE NOT REACHE 1 YES 2 NO" appears. Select "1 YES" to finalize it.

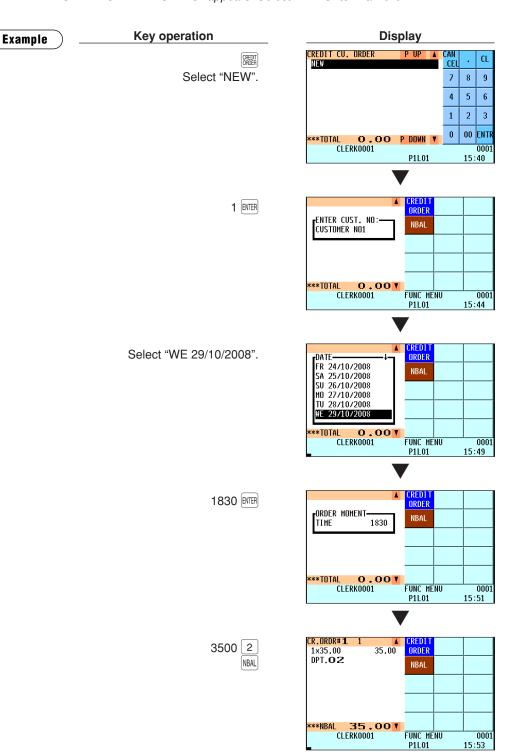

Article order masks

NOTE

To use this function, please consult your SHARP authorized dealer.

Article order masks are basically the data entry forms of orders to be sent from the POS terminal to the headquarters. They are also used for the forms of merchandise returns, inventories, delivery notes, etc. There are two types of article order masks: order masks and universal masks. You can create up to 25 masks (mask no 1 to 25) in total. The first five of them are used for order masks and the rest are used for universal masks.

Order masks

Order masks are mainly used to send orders to the headquarters. Mask no. 1 to 5 are reserved for order masks.

In an order mask, you can program orders the number of deliveries a day. One delivery is called "TOUR". For example, 100 sandwiches are delivered at 6 a.m. as TOUR1, 200 sandwiches at 11 a.m. as TOUR2 and 50 sandwiches at 3 p.m. as TOUR3.

The mask data (article codes, texts and order proposals) are downloaded to the POS terminal from the back office. On the POS terminal, you open the mask data, confirm the order proposals and enter the quantities for the articles. The mask data is uploaded online using a computer.

Universal masks

Universal masks enable you to send information such as merchandise returns, inventories, etc. to the headquarters. Mask no. 6 to 25 are reserved for universal masks.

The mask data (article codes and texts) are downloaded to the POS terminal from the headquarters. On the POS terminal, you enter information such as the quantities of returns, inventories, etc. into the mask data. The mask data is uploaded online using a computer.

One of the universal masks can also be utilized as branch-to-branch stock transfer. To use this function, you need to specify the mask no. to be used as stock transfer in the PGM2 mode.

Procedure


Order masks/Universal masks

Direct entries



^{* 01-05} for order masks, 06-25 for universal masks

Menu selection entries

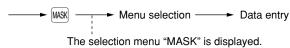

Auxiliary Entries

■ Percent calculations (premium or discount)

- Your POS terminal provides percent calculations for a subtotal or each item entry depending on the programming.
- Percentage: 0.01 to 99.99%


Percent calculation for a subtotal

Example	Key operation	
·	(When a discount of 10% is programmed for the %1 key.)	3 5 ST %1 TL

Print		
1× 6.00 PLU00003	*6.00	
2x 5.00 PLU00005	*10.00	
SUBTOTAL % 1	*16.00 -10.00% -1.60	
CASH	*14 . 40	

Duint

Percent calculation for item entries

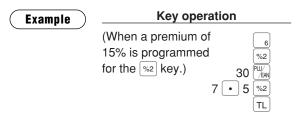

	Print	
1× 6.00 PLU00006		*6.00
% 2 1x 5.00 PLU00030	15. 00%	*0.90 *5.00
%2	7. 50%	* 0. 38
CASH	*12	2. 28

Discount entries

Your POS terminal allows you to deduct a certain amount less than a programmed upper limit after the entry of an item or the computation of a subtotal depending on the programming.

Discount for a subtotal



	Print
1x 6.00 PLU00006	* 6. 00
1x 12.00 PLU00070	*12.00
(-) 2	-1.00
CASH	*17 . 00

Discount for item entries

Example _	Example Key operation	Print	
	7 (FU/ ÆAN) 75 (⊙)	1× 6.75 PLU00007	*6. 75
	TL	(-) 1	-0. 75
		CASH	* 6. 00

Refund entries

For a refund entry, press the RF key just before you press a department key, FF key, direct PLU key or key or just before you scan an EAN code. The operation before pressing the RF key is the same as the one of normal operation. For example, if a refund item is the one entered into a department, enter the amount of the refund, then press the RF key and the corresponding department key in this order; if an item entered into a PLU is returned, enter the corresponding PLU code, then press the RF and Keys; and if a refund item is the one entered into an EAN, press the RF key and scan the EAN code.

Example	Key operation	Print	
	RF 3 7 🛞	-1× 1.50 PLU00003	R-1.50
	7 RF (PL/EA) 300 AMT	-7× 2.00 PLU00007	R-14.00
	1 (RF) (DEPT) 250 (AMT) 4 (RF) (PU)	-1x 3.00 DPT. O 1	R-3.00
	4 RF TL	-1x 2.50 PLU00004	R-2.50
		CHANGE	*21. 00

Return entries

For a return entry, press the RTN key just before you press a department key, FRN key, direct PLU key or Well key or just before you scan an EAN code. The operation before pressing the RTN key is the same as the one of normal operation. For example, if a return item is the one entered into a department, enter the amount of the return, then press the RTN key and the corresponding department key in this order; if an item entered into a PLU is returned, enter the corresponding PLU code, then press the RTN and RN, press the RTN key and scan the EAN code.


Example	Key operation	P	rint
	RTN 4	1× 5.00 PLU00005	* 5. 00
	7 (RTN) (PU/LN)	-1x 4.00 PLU00004	RT-4. 00
	300 AMT 1 RTN DEPT	-7x 2.00 PLU00007	RT-14. 00
	250 MMT 4 RTN PULL TL	-1x 3.00 DPT. O 1	RT-3. 00
		-1x 2.50 PLU00004	RT-2. 50

CHANGE

***18.50**


Printing of non-add code numbers

Enter a non-add code number such as a guest code number and credit card number within a maximum of 16 digits and press the [#TM] key at any point during the entry of a sale. Your POS terminal will print at once.

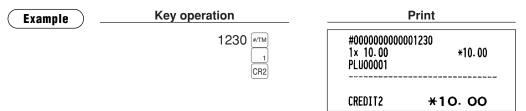

■ Printing of free text

Free text programmed in the PGM mode can be printed out by entering the corresponding text code and pressing the Fest key or by pressing a corresponding direct text key. You can describe your item together with departments and PLUs.

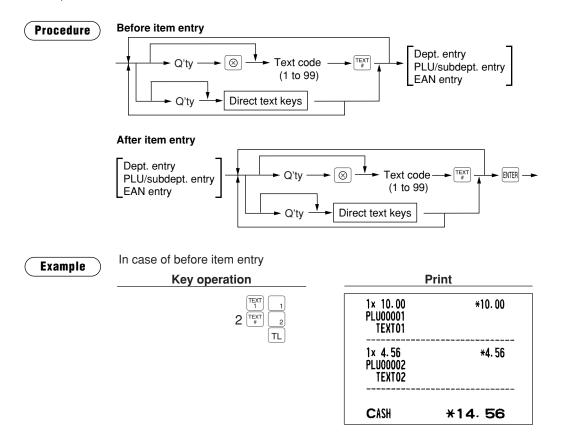

NOTE

- You can void the free text by cursor or touching void operation.
- You can enter free texts before item entry by default. If you want to enter free texts after item entry, please contact your authorized SHARP dealer.

Payment Treatment

■ Tip-in entries

Your POS terminal allows the entry of tips that your guests give to clerks in cash or other media (check or credit). The tip in entry assumes that it is carried out in the following system:

- Tip paid by a guest to a clerk is entered in the POS terminal by tip entry, and the restaurant pays the tip amount to the clerk later in cash.
- Tip amount entry to the POS terminal is normally performed by a clerk.

The entry is allowed before payment operation is performed. After the tip entry is performed, item entry is not allowed. The transaction operation must be finalized by payment operation. Two types of tip, cash tip and non-cash tip, are not allowed to be mixed in entry during one transaction operation. Tip entry only in either of them is allowed.

Cash tip entry:

In a transaction in which cash tip entry is made, when payment operation is started,

the process is as follows:

Cash tender (which may be foreign money) is compulsory until total cash tender exceeds or equals to cash tip amount. Then, check (or credit) tender operation is


Non-cash tip entry:

In a transaction in which non-cash tip entry is made, when payment operation is started, the process is as follows:

Check (or credit) tender is compulsory until total check (or credit) tender exceeds or

CHANGE

equals to non-cash tip amount. Then, cash tender operation is allowed.

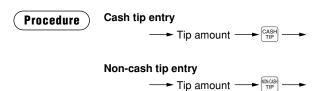


Example	Key operation	Print
	1001 GLU 300 CASH 300 TL	GLU#1001 ***PBAL *15.00 CASH TIP *3.00
	1500 СН1	***TOTAL *18.00 CASH *3.00 CHECK *15.00

■ Currency exchange

Your POS terminal allows payment entries in foreign currency. Pressing the EXI through EX9 key creates a subtotal in foreign currency. Cash alone can be handled after currency exchange.

Procedure

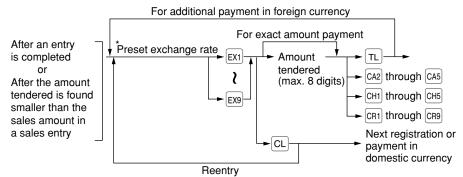


^{*}Preset rate: 0.0000 to 9999.999999


NOTE

- · When the amount tendered is short, its equivalent in deficit is shown in domestic currency.
- You can also enter a foreign currency tender from the exchange menu window. Press the key and select a pertinent exchange number and enter the amount.
- · Change amount will be displayed in domestic currency.
- Availability of credit and cheque tendering depends on the programming. (Only for the exchange 1)

Example

Preset exchange rate (1.550220) :EX1

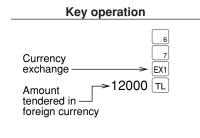

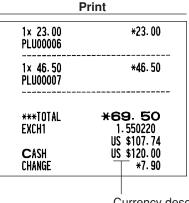


Currency description text

NOTE

Case of opening foreign currency drawer:

- · At the timing of issuing receipt after tendering exchange amount.
- At the timing of issuing X/Z report (included CCD)
- The <u>Exchange drawer open function</u> is executed.
 When the EXCHANGE(n) key is pressed simply out of transaction, the foreign currency drawer is opened, and no sale counter will counted one up.

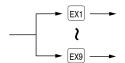


Received-on-account entries

To receive a received-on-account (RA), you can select either of cash only system or mixed tendering system. Select the cash only system when you receive RA by cash only. In the mixed tendering system, you can receive RA by cash, check or credit. In either system, you cannot receive RA in foreign currency. When you want to use the cash only system, contact with your authorized SHARP dealer.

Mixed tendering system

Procedure

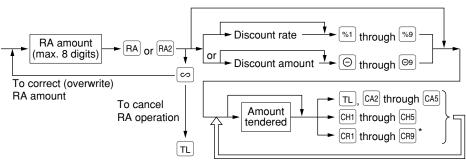


When split or mixed tendering is made

NOTE

* Of the CRI through CR9 keys, you may use only the one that is programmed to be capable of entering amounts tendered.

Example	Key operation	Print	
	12345 #/TM 4800 RA 4000 CH1 800 TL	#000000000012345 ***RÅ *48.00 CHECK *40.00 CASH *8.00 CHANGE *0.00	

Cash only system

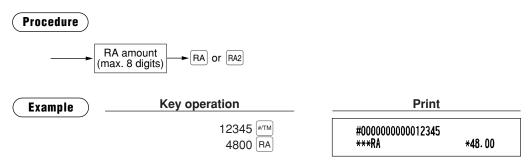


■ Paid-out entries

To make a paid-out (PO) entry, you can select either of cash only system or mixed tendering system. Select the cash only system when you make a payment by cash only. In the mixed tendering system, you can make a payment by cash, check or credit. In either system, you must a PO entry only in a transaction. When you want to use the cash only system, contact with your authorized SHARP dealer.


Mixed tendering system



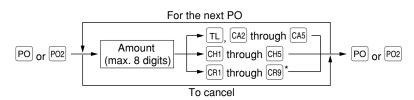


NOTE

* Of the CR1 through CR9 keys, you may use only the one that is programmed to be capable of entering amounts tendered.

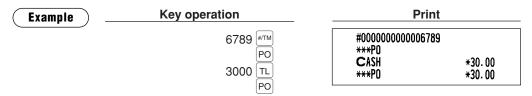


Cash only system

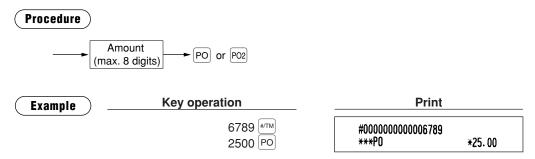


■ No-sale (exchange)

Simply press the NS key without any entry. The drawer will open and the printer will print "NO SALE" on both the journal and the receipt. If you let your machine print a non-add code number before pressing the NS key, a no sale entry is achieved with a non-add code number printed.

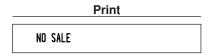

■ Transferring cash


This function is used to change cash sales amount for credit or check sales amount. For example, you can use this function when your guest asks you to credit the payment or to receive payment with check after entering the payment as cash.

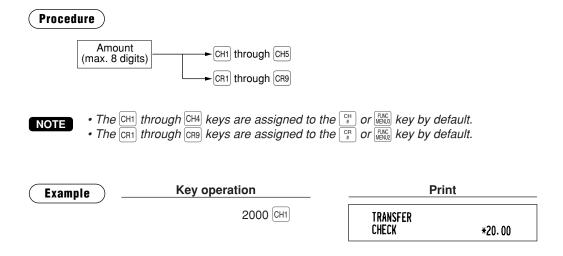

■ Cashing a check



To use this function, please consult your authorized SHARP dealer, while you cannot use this function together with the cash transferring function.

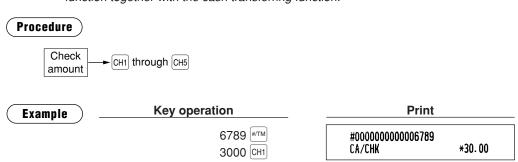


■ Service charge

When the payment operation is made for sales registrations, the service charge amount is calculated and printed. You can program a percent rate for calculating the service charge. If the percent rate is programmed as 0%, the POS terminal does not print any service charge. Service charge is available in automatic VAT 1-6, automatic tax 1-6, automatic VAT 1-3 and automatic tax 4-6 system.

Example _	Key operation		Print
	2 3	1x 15.00 PLU00002	*15. 00
	ST TL	1x 3.00 PLU00003	*3. 00
		SUBTOTAL Ser. Chrg	*18.00 *1.80
		CASH	*19. 80

■ VIP sales

This function is used for transaction for the important guest who is free of charge. In this mode, any unit price is not counted.

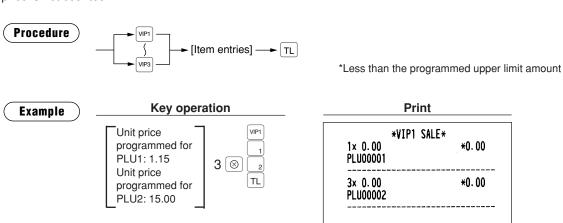

CASH

***0.00**

Customer Management


Your POS terminal can provide the customer management function.

To enable the customer management function, enter the customer code assigned to a customer. You can enter the customer code at any point during a transaction.

Normally customer information (name, code and address) are previously set by the programming. However, you can enter a new customer information during transaction. When an undefined customer code is entered, the message, "UNDEFINED CODE" is displayed, then you can enter the customer's name and address, which are saved in the customer file.

For the customer registered, you can defer his/her payment. Take the tentative finalization using the key. The sales amount is accumulated to the charge amount of each customer. When the customer settles his/her charge account take the received-on account entry.

Procedure

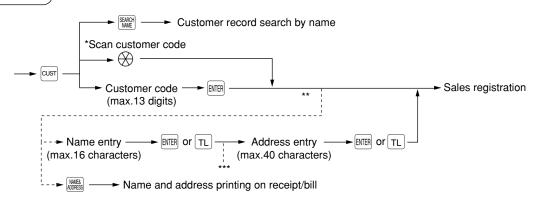

- *: Scanning the customer code on a Customer Card provided to the customer, or EAN-13 format bar code. Additionally the customer code can be read by the optional magnet card reader.
- **: When a code entered for the customer entry does not exist in the customer file, "UNDEFINED CODE" is displayed for a moment with beep sounds. Then the NAME entry window is displayed to prompt the operator to enter a customer's name.
- ***: The ADDRESS entry window is displayed.


NOTE

- The customer code entry is inhibited after the payment operation.
- When a wrong code is registered, take the following procedure to cancel it. If no item has been entered, press the \(\tau\) key.

 If the item entry has been made, perform the subtotal void operation.

■ Basic operations

• To enter a new customer code in the REG/MGR-mode

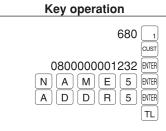

Pr	int
1× 6.80 PLU00001	¥6. 80
CASH	* 6. 8 0
080000001232# Addr5 ***PBAL Charge ***NBAL	*0.00 *0.00 *0.00 *0.00

Delina


9:51

· When you allow the customer to defer the payment;

Key operation		
UST VTER 6		
Į		

Print		
1x 53.70 PLU00006	*53. 70	
CHARGE	* 53. 70	
080000000007 ADDR1 ***PBAL CHARGE ***NBAL	*0.00 *53.70 *53.70	


• When the customer settles his/her charge account or partial payment is done;

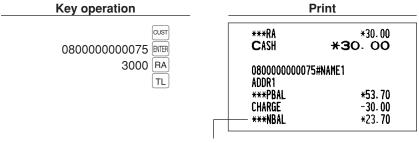

The remainder of the charge account

Customer record search by name


This function allows you to search the customer file by name for customer records. This function is available prior to/during a transaction.

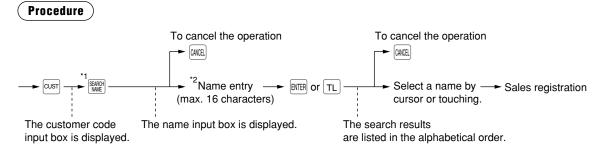

- *1: To search by code, enter a customer code.
- *2: You don't need to enter the whole name. The POS terminal searches for the names that partially match the inputted character(s).

NOTE

• When a wrong code is registered, take the following procedure to cancel it. If no item has been entered, press the \(\tau_{\text{L}}\) key. If the item entry has been made, perform the subtotal void operation.

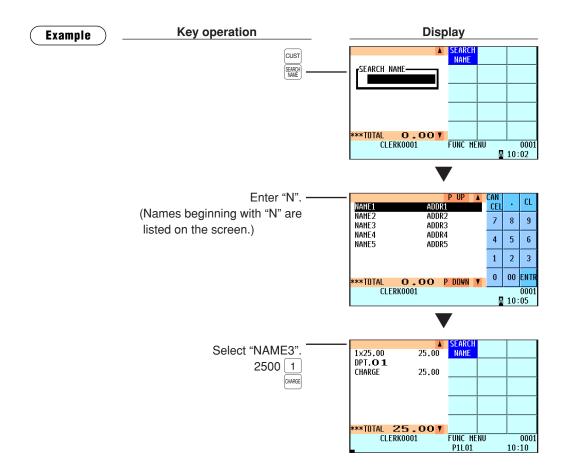

■ Name and address printing on receipt/bill


NOTE To use this function, please consult your SHARP authorized dealer.

This function allows you to print on the receipt or bill a name and address saved in the name and address file. The data of the name and address file can be created on your computer and transferred to the POS terminal via online communications or optional SD card.


This function is available in the following situations:


- Press the key during a transaction.
- Press the key in the name input box for a new customer entry.
- · After the press of a media key programmed to make name and address entries compulsory

Procedure

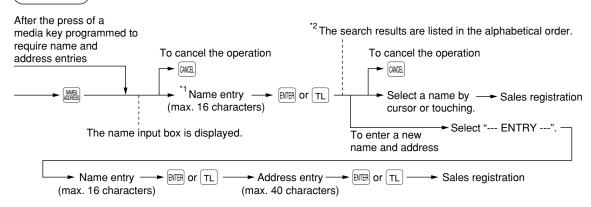

- *1: You don't have to enter the whole name. The POS terminal searches for the names that partially match the inputted character(s).
- *2: If the name and address file is not installed in the POS terminal, only "--- ENTRY ---" is displayed.

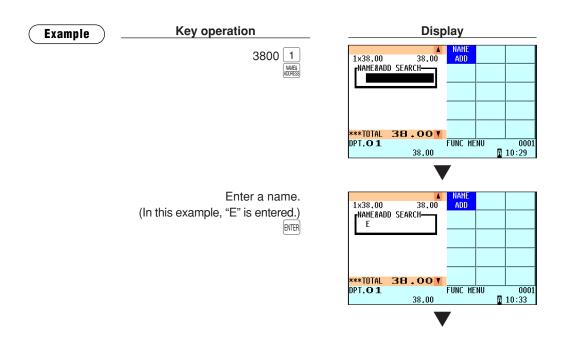

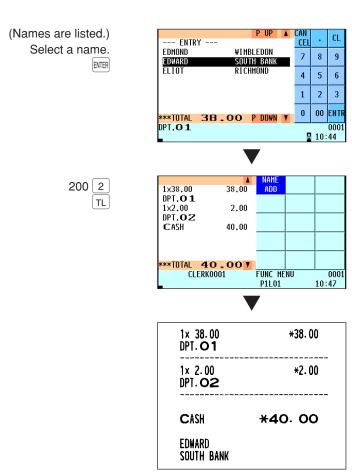


The selected name and address are printed on the receipt.

■ Customer bill printing

This function prints the data of customer transactions finalized with the week key.

Enter a customer code for which you want to print the transaction data. The range of data to be printed can be specified by date. You can also choose to clear or keep the printed data.

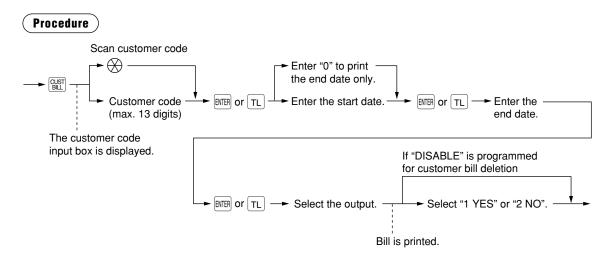

Example

Key operation

6 EMER 221008 EMER 251008 EMER Select "RCPT". Select "1 YES".

Print 25/10/2008 0001 CLERK0001 #0246 14:20 *BILL* 000000000006#DAVID LONDON 22/10/2008 19:30 CHARGE ***23.00 *23.00** 1x 23.00 DPT. 01 23/10/2008 15:00 CHARGE ***50.00** 1x 50.00 ***50.00** DPT . 05 24/10/2008 10:30 -30.00 CHARGE ***RA *30.00 25/10/2008 14:20 CHARGE ***15.00** 1x 15.00 ***15.00** DPT . 05 22/10/2008 -> 25/10/2008 CHARGE *58.00

Employee Function


You can use the following functions by using employee codes:

■ Clerk/manager sign-on

Clerks or managers can be signed on by entering employee codes, or they can be signed on by using employee cards. To use an employee card, you need a magnetic card reader (MCR). Contact your authorized SHARP dealer.


Use the following procedures:

· Clerk sign-on

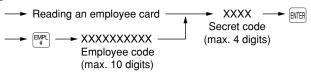

NOTE In the case of "Contactless clerk key system," sign-on cannot be done by this procedure.


· Manager sign-on

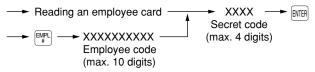

■ Employee's working time recording


You can manage the number of hours for which employees work. The working time can be recorded by the following operations:

Time-in/out and break-in/out operations

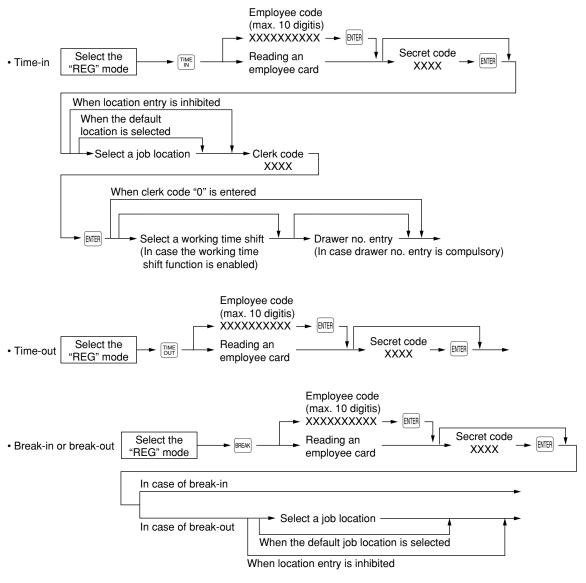

NOTE


- You can select a job location and drawer no. by using the e
- The POS terminal allows a clerk to sign-on or off without checking the clerk's time-in or out.

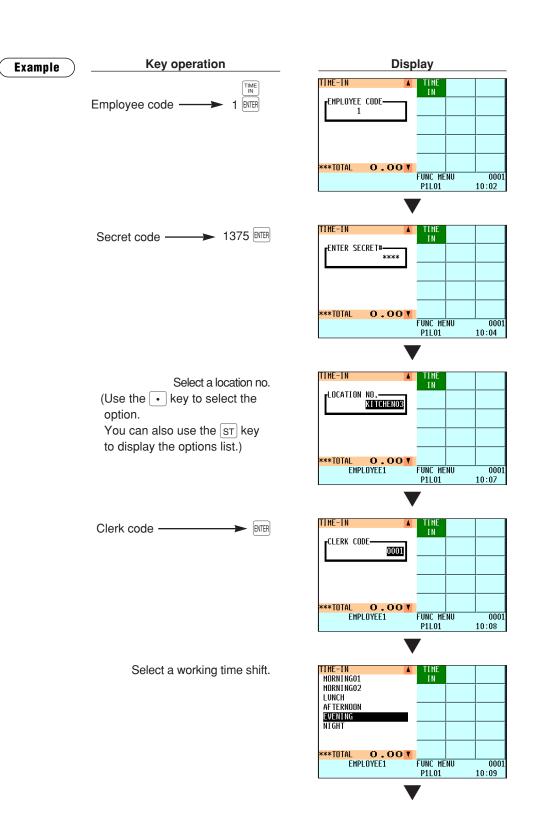

Select a drawer no.


(Use the • key to select the option.

You can also use the st key to display the options list.)

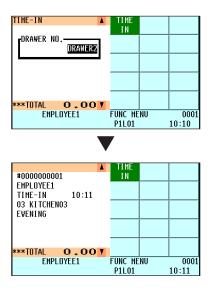

Time-edit operation

A manager can edit employee's time-in/out data to record his or her time correctly.

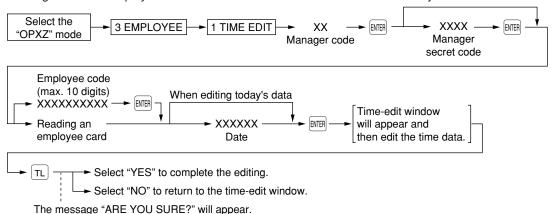

■ Employee's working time shift

This function enables you to control the employees' working time shifts. Working time shifts of a day are divided into a maximum of nine.

You can also use this function to control CCD entries, forcing the employees to make those entries at this operation (CCD per shift).

Example

In case you require the employees to make CCD entries at the working time shift operation and programmed the following working time shifts:

6:00 - 9:00	: MORNING01	(SHIFT1)
9:00 - 11:00	: MORNING02	(SHIFT2)
11:00 - 14:00	: LUNCH	(SHIFT3)
14:00 - 16:00	: AFTERNOON	(SHIFT4)
16:00 - 19:00	: EVENING	(SHIFT5)
19:00 - 23:00	: NIGHT	(SHIFT6)

In this example, SHIFT7 to 9 are not used. Press the key to move the current shift to the next one.

When the shift reaches the last one (SHIFT6 in this example), it returns to the SHIFT1.


Key operation

Make the CCD entry.

CD ENTRY CLCEL CASH IS 7 8 9 EXCH1 IS 0.00 EXCH2 IS 0.00 4 5 6 EXCH3 IS 0.00 EXCH4 IS 0.00 2 1 3 EXCH5 IS 0.00 EXCH6 IS 0,00 0 00 ENTI DOWN ¥ CLERK0001 በበበ1 12:38

Display

Select "1 YES".

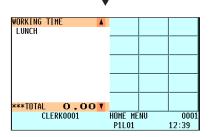

NOTE

- To use this function, the employee must assign their working time shift at the time-in operation.
- The employee can make operations only at the assigned working time shift.
- If you program the POS terminal to require a CCD entry at the working time shift operation, the CCD entry window is displayed as shown above.
- You can also program the POS terminal to allow the employee to make a CCD entry anytime
 after the working time shift operation. In this case, the message "CCD IS NOT DONE" appears
 to remind you to complete the CCD entry if the employee makes a time-out operation without
 completing the CCD entry when the woking time is shifted.

Customer Relation Management


■ Discount groups

This function is useful in dividing all the sales items into groups and making discount/markup entries based on the rates and other settings programmed for each of the divided groups.

To use this function, press a group discount key (to after department or PLU/EAN entries. Pressing a discount group shift key (to before the group discount key displays the discountable subtotal for the corresponding group.

Example

PLU code 40 and 41: discount group 1 PLU code 50 and 51: discount group 2

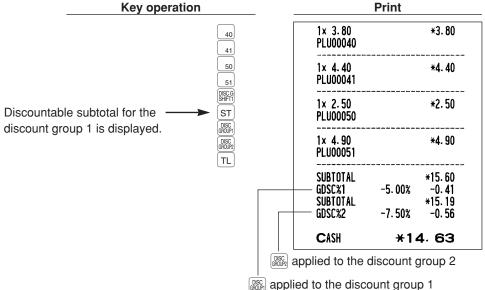


Discount group shift

You can also shift the discount group to a different group during a transaction. Press a discount group shift key (Reprint to Reprint to Reprin



PLU code 40: discount group 1

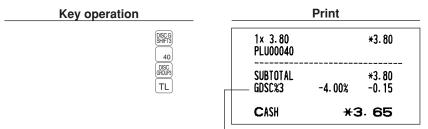

The discount group 1 is shifted to the discount group 3.


Bonus points

Customers can get redeemable bonus points for their purchases. There are the following two types of bonus points:

- Bonus points to be given for purchasing specified PLU/EANs.
- Bonus points to be given for purchasing more than the specified amount.

For the former type, the number of bonus points to be given can be programmed in the PLU/EAN article programming. For the latter type, it can be programmed in the bonus point table.

In the bonus point table, you can also program the discount amount redeemable for the programmed number of bonus points.

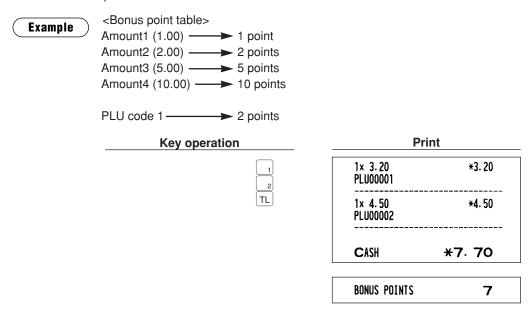

Redemption of bonus points

Customers can redeem their accumulated bonus points for discounts.

Press the key at any time before payment operation.





WASTE Mode

This mode is used to throw away an article which has already been prepared and is no longer serviceable.

Procedure



NOTE

- PLU entries are only allowed in the WASTE mode, and direct and indirect void operations are also allowed in this mode.
- When a WASTE-mode transaction is finalized , the drawer does not open.
- The consecutive number is incremented every WASTE-mode transaction.
- When the WASTE mode is activated by pressing the week, the mode caption "WASTE" is displayed.

Example

Key operation



Print			
* WA \$ 1x 7.15 PLU00010	STE* *7.15		
1x 5.25 PLU00011	*5. 25		

TRAINING Mode

The training mode is used when the operator or the manager practices POS terminal operations.



In case "clerk and cashier system" is applied to your POS terminal, cashiers can enter to the training mode.

When a clerk/cashier set in training is selected, the POS terminal automatically enters the training mode, while a clerk/cashier not set in training is selected, the POS terminal automatically enters the ordinary REG mode. A training text and a maximum of two training clerks/cashiers can be programmed.

The training operations are valid in all modes.


A mark which is identifying a training receipt is printed on the receipt which is issued in the training mode.


The journal report completely stops in the training mode. The consecutive number is not updated. The preceding number is repeated in printing.

The memory in clerk/cashier is updated in the training mode. Other memories are not updated.

The GLU codes which are opened in the training mode are also printed on the GLU report. In this case, those GLU codes are distinguished from others by the character of "T." The data of training GLU codes are not added to the total.

The reading and resetting of training clerks/cashiers is printed on the clerk/cashier reports. However, the sales total of training clerks/cashiers is not included in the clerk/cashier total on the full clerk/cashier report.

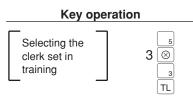

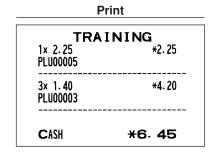


Supervisor Clerk

This function is used to substitute a supervisor clerk for an ordinary clerk. The supervisor clerk can make entry as an ordinary clerk by assigning the ordinary clerk code. You can use the supervisor clerk function only for substituting for an ordinary clerk. This function is available only in the real clerk key system.

To use this function, insert a real clerk key assigned supervisor clerk, enter the ordinary clerk code and press the key. When you insert a supervisor clerk key and open an existing guest check, the original clerk who usually controls the guest check will automatically be assigned.


NOTE


- This function is unavailable when the "overlapped clerk function" is enabled.
- When the supervisor clerk and the original clerk are entered, the operation in OPXZ, X1/Z1, X2/Z2, PGM1, or PGM2 mode is inhibited.

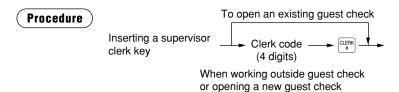

Example

• When opening a new guest check (GLU code 1010) with this function:

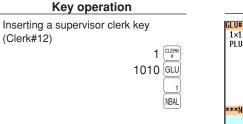

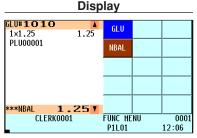


NOTE

If it is programmed to display the clerk popup window ("CLERK POPUP" in FUNC.SELECT2 menu), you can start the operation from a GLU code entry. After you press the <code>GLU</code> key, the popup window will open for a clerk# entry.

• When receiving payment for the order stored in the GLU code 1010:

Key operation			
Inserting a supervisor clerk (Clerk#12)	1010 GLU TL		

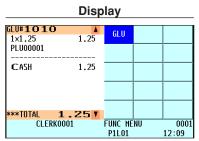

Overlapped Clerk Entry

This function allows you to switch from one clerk to another clerk and to interrupt the first clerk's entry. So the second clerk can do his or her entry in this mode. Interrupt handling is possible only in the overlapped clerk entry. For actual use of this function, contact your authorized SHARP dealer.

NOTE

- The overlapped clerk entry is available only in the clerk entry system.
- The overlapped clerk entry is not effective while the tendering sale is going on.
- If any clerk is still making an entry (or has not finalized the transaction yet), the POS terminal does not run in any mode other than REG and MGR, and no X/Z reports can be printed. The message "CLERK REMAINED" and the related clerk are displayed.


Example

Clerk 1: Entry started

Clerk 2: Clerk change (1 to 2), interrupt initiated

Clerk 2: Transaction finished

Clerk 1: Clerk change (2 to 1), entry restarted

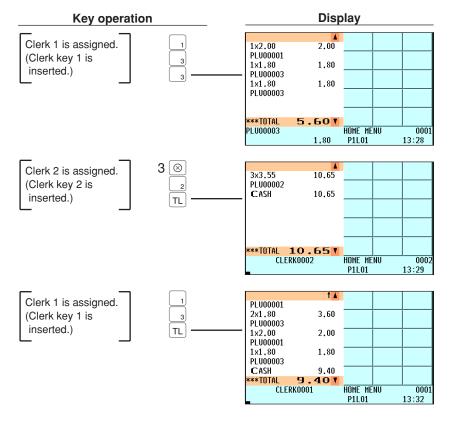


6 Correction

REG MODE

MGR MODE

Correction of the Last Entry (Direct Void)

If you make an incorrect entry relating to a department, PLU/subdepartment, EAN, percentage (%1 through %9), discount (() through ()), item refund, or tip, you can void this entry by pressing the () key immediately.

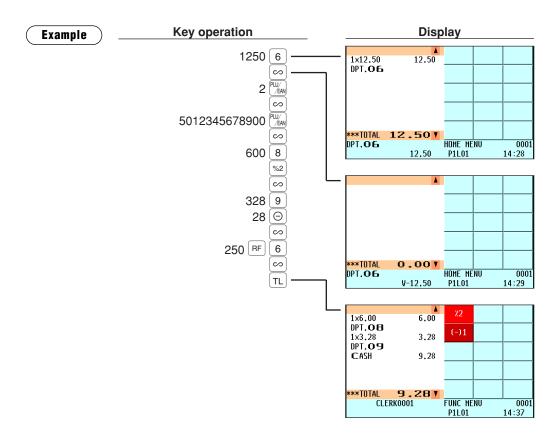

Correction of the Next-to-Last or Earlier Entries (Indirect Void)

If you find an incorrect entry before finalizing the transaction (e.g. before pressing the TL key), you can void the entry by the cursor operation or the key sequence operation.

Indirect void by cursor/touching operation


You can void department, PLU/subdepartment, EAN, item refund, amount discount/premium and percent entries.

Press the ↑ key first to display the cursor, then move it to the item to be voided with the ↑ and ↓ keys. You can also select the item by touching it on the screen. After selecting the item by cursor or touching, press the wey. When you want to void two or more items, enter the quantity to be voided in the quantity entry box.

Indirect void by key sequence operation


You can void department, PLU/subdepartment, EAN and item refund.

Press the key just before you press a department key, key, direct PLU key or key or just before you scan an EAN code. For the refund indirect void, press the key after you press the key.

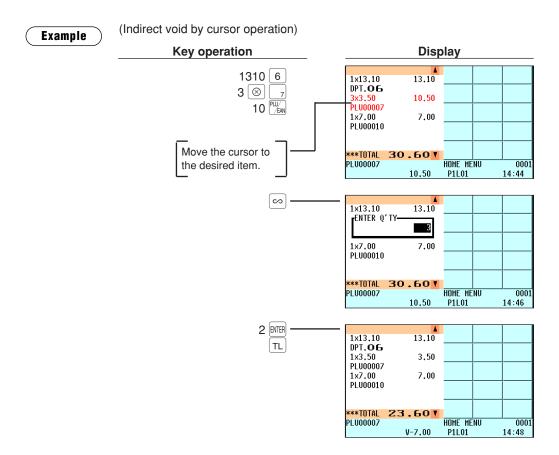

Subtotal Void

You can void an entire transaction. Once subtotal void is executed, the transaction is aborted and the POS terminal issues a receipt.

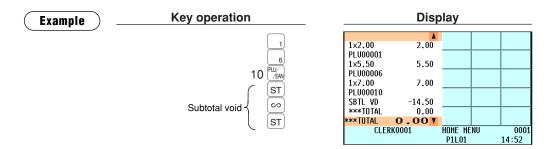

Correction of Incorrect Entries Not Handled by the Direct, Indirect or Subtotal Void Function

Any errors found after the entry of a transaction has been completed or during an amount tendered entry cannot be voided. These errors must be handled by the manager. The following steps should be taken.

- 1. If you are making the amount tendered entry, finalize the transaction.
- **2.** Make correct entries from the beginning.
- **3.** Hand the incorrect receipt to your manager for its cancellation.

REG MODE

Special Printing Function

Copy Receipt Printing

If your customer wants a receipt after you have finalized a transaction with the receipt ON-OFF function in the "OFF" status (no receipting), press the ROPT key for receipting. Your POS terminal can also print a copy receipt whether the receipt ON-OFF function is in the "ON" or "OFF" status. If you want to make a copy, please consult your authorized SHARP dealer.



To toggle the receipt ON-OFF status, use the following procedure:

• Press the RCP SW." window.

Example

Printing a receipt after making the entries shown below with the receipt ON-OFF function "OFF" status

Key operation	Key operation				
3 ⊗ 1 TL	Print on the journal	PLU00002	#4.50 #9.60 1 O		
For receipting→ ROPT		1× 4.50 PLU00002	*4. 50		
	Print on the receipt	3x 3.20 PLU00001	*9.60		
		CASH *14.	10		

"COPY" is printed on the copy receipt.

1× 4.50 PLU00002	*4.50
3x 3.20 PLU00001	*9.60
CASH	*14 . 10


Guest Check Copy

You can use this function when you want to take a copy of guest check.

Press the GCPY key and make a desired entry.



- NOTE
- The guest check copy has nothing to do with the memory.
- The operation is the same as normal entry. But the validation printing is disabled and the drawer does not open.

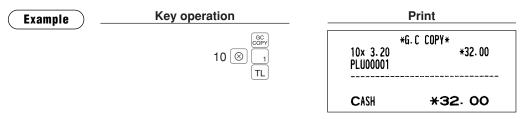

Validation Printing Function

The POS terminal can perform validation printing when it is connected with the slip printer. For the details of slip printer, contact your authorized SHARP dealer.


- **1.** Set a validation slip to the slip printer.
- 2. Press the VP key. The validation printing will start.

NOTEProgrammed compulsory validation printing can be overridden by performing the following operation. If you need this function, contact your authorized SHARP dealer.

1. Enter the manager mode.

Barcode Printing

This function is used to print a barcode which encodes the total amount of the sales or the amounts of each department sales. The transaction must be finalized with the <code>CA2</code> key. For details, please contact your authorized SHARP dealer.

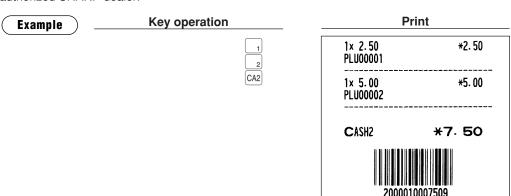

Entertainment Bill

This function is used to print sales data on guest checks (Entertainment bill) on a receipt printer.



Print sample

SHA	IRP
BILL NUMBER:4 0001 CLERK0001	
∗B I	LL*
1x 10.00 PLU00001	*10.00
CASH	*1 0.00
Angaben zum Nachweis de betrieblichen \ Bewirtungsaufwe Bewirtete Perso	/eranlassung voh endungen
Anlass der Bewi	rtung:
Höhe der Aufwer	ndungen *1 0.00
bei Bewirtung i	m Restaurant
in anderen Fäll	en
Ort TOWNNAMETOWNNAM	Datum IE 22/10/2008

8

Manager Mode

MGR MODE


The manager mode is used when managerial decisions must be made concerning POS terminal entries, for example, for overriding limitations and for other various non-programming managerial tasks.

NOTE

Normal POS terminal operations may also be performed in this mode.


Entering the Manager Mode

To enter the manager mode, use the following procedure in the REG mode:

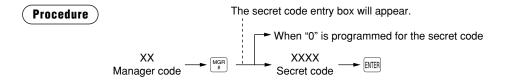

Example

The manager code is stored in the manager file in advance. If the code is not found in this file, an error occurs. If the code is correct, the POS terminal enters the manager mode.

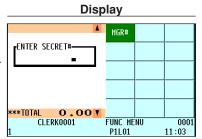


Override Entries

Programmed limits (such as maximum amounts) for functions can be overridden by placing the POS terminal in the manager mode.

Example

This example presumes that the POS terminal has been programmed not to allow coupon entries over 2.00.

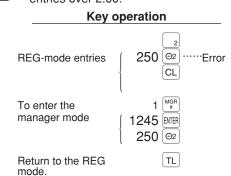


Print								
1× 15.00 PLU00002	*15.00							
(-) 2	-2.50							
CASH	* 12. 50							

Tip Paid Entries

This operation is used when tips that guests have paid by using media other than cash (check or credit) are paid to respective clerks in cash.


You can make tip paid entries in the MGR mode only. The tips are paid to corresponding clerks according to their portions.

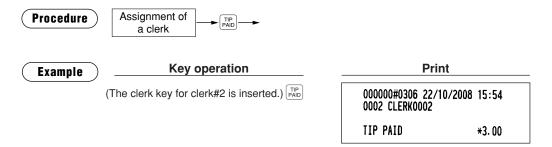

Bill Recording/Bill Void

This bill information have to be recorded when BILL REPORT FILE was created (Bill recording). Each record contains "bill consecutive number", "clerk number", "issued date", and "amount".


The bill record can be voided from BILL REPORT FILE (Bill void). The voided bill number will be used on newly issuing bill to filling bill report completely.

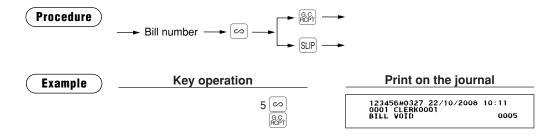

Correction after Finalizing a Transaction

When you need to void incorrect entries that clerks cannot correct (incorrect entries that are found after finalizing a transaction or cannot be corrected by direct, indirect or subtotal void), follow this procedure in the MGR mode.

- 1. Enter the manager code and press the key, then enter the secret code if applicable.
- 2. Press the key to put your POS terminal in the VOID mode. (Note the indication on the display.)
- **3.** Repeat the entries that are recorded on an incorrect receipt. (All data in the incorrect receipt is removed from POS terminal memory; the voided amounts are added to the void mode totalizer.)

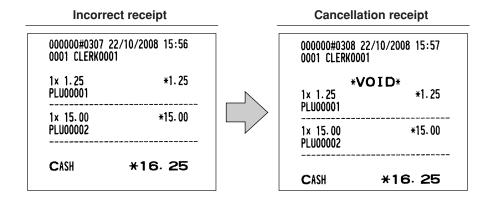

NOTE

Your POS terminal leaves the VOID mode whenever a transaction is canceled (i.e. finalized in the VOID mode). To void additional transactions, repeat steps 2. and 3. above.

9

Reading (X) and Resetting (Z) of Sales Totals

X1/Z1 MODE

X2/Z2 MODE

OPXZ MODE

- Use the reading function (X) when you need to take the reading of sales information entered after the last resetting. You can take this reading any number of times. It does not affect the POS terminal's memory.
- Use the resetting function (Z) when you need to clear the POS terminal's memory. Resetting prints all sales information and clears the entire memory except for the GT1 through GT3, reset count, and consecutive number.
- X1 and Z1 reports show daily sales information. You can take these reports in the X1/Z1 mode.
- X2 and Z2 reports show periodic (monthly) consolidation information. You can take these reports in the X2/Z2 mode.
- In the OPXZ mode, a clerk and/or cashier can take his or her report.
- If you want to stop the printing report, press the [MICL] key. Even if the printing is stopped, the consecutive number (and Z counter if you are printing a Z report) is increased by one.



Only when "clerk + cashier system" is applied to your machine, you can take both of Clerk and Cashier reports.

■ How to take an X1/Z1 or X2/Z2 report

[To take an X1 or X2 report:]

- 1. Select "1 READING" in the X1/Z1 or X2/Z2 mode menu window to display the items list.
- 2. Select a report title listed in the table shown later. When you select an item with parentheses on the opening screen, you can jump to the pertinent report title(s).
- If needed, enter corresponding values described in the "Data to be entered" column on the table shown later.
- 4. Select a device ("DISPLAY" or "REPORT PRINTER") to receive the output.

[To take a Z1 or Z2 report:]

- 1. Select "2 RESETTING" in the X1/Z1 or X2/Z2 mode menu window to display the items list.
- 2. Select a report title listed in the table shown later.
- If needed, enter corresponding values described in the "Data to be entered" column on the table shown later.
- **4.** After the report has been taken, the message "RESET OK?" will appear. Select one of the following actions:
 - Select "YES" to reset the sales information.
 - Select "NO" to save the sales information.

■ Flash report

You can take flash reports (display only) in the X1 mode for department sales, cash in drawer (CID) and sales total at the point you take the report

- 1. Select "3 FLASH MODE" in the X1/Z1 mode menu window to display the items list.
- 2. Select "DEPT. SALES" to take a flash report of department sales, "CID" to take a flash report of cash in drawer, or "SALES TOTAL" to take a flash report of sales total.


Description	OPXZ	V4 (74		Data to be entered
	0. AL	X1/Z1	X2/Z2	
General report	-	X1,Z1	X2,Z2	
Department by group report	-	X1	X2	Department code
				(The range can be specified by
				entering start and end codes.)
Individual department group report	-	X1	X2	Department group no. (1 to 17)
Department group total report	-	X1	X2	
PLU/EAN sales report by	-	X1,Z1	X2,Z2	PLU/EAN code
specified range				(The range can be specified by
				entering start and end codes.)
PLU/EAN pickup report	-	X1,Z1	X2,Z2	*1
Combo sales report	-	X1	X2	PLU code
				(The range can be specified by
				entering start and end codes.)
Combo sales pickup report	-	X1	X2	*1
	-	X1,Z1	X2,Z2	Department code
PLU/EAN individual group report	-	X1	X2	PLU/EAN group no.
PLU/EAN group total report	-	X1	X2	
PLU/EAN stock report	-	X1	-	PLU/EAN code
				(The range can be specified by
				entering start and end codes.)
PLU/EAN stock pickup report	-	X1	-	*1
PLU/EAN top 20 sales report by	-	X1	X2	
sales amount				
PLU/EAN top 20 sales report by	-	X1	X2	
sales quantity				
PLU/EAN zero sales report	-	X1	X2	All PLU/EAN codes
PLU/EAN zero sales report by	-	X1	X2	Department code
associated dept.				
PLU/EAN minimum stock report	-	X1	-	PLU/EAN code
				(The range can be specified by
				entering start and end codes.)
PLU/EAN sales report by price	-	X1	X2	PLU/EAN price category
category				
PLU/EAN hourly group report	-	X1,Z1	-	
	1	•	•	
Transaction report	-	X1	X2	
Total-in-drawer report	-	X1	X2	
Commission sales report	-	X1	X2	
Tax report	-	X1	X2	
· · · · · · · · · · · · · · · · · · ·	1	i		
	Individual department group report Department group total report PLU/EAN sales report by specified range PLU/EAN pickup report Combo sales pickup report PLU/EAN report by associated dept. PLU/EAN individual group report PLU/EAN group total report PLU/EAN stock report PLU/EAN stock pickup report PLU/EAN top 20 sales report by sales amount PLU/EAN zero sales report by sales quantity PLU/EAN zero sales report by associated dept. PLU/EAN minimum stock report PLU/EAN hourly group report PLU/EAN sales report by rice category PLU/EAN hourly group report Transaction report Total-in-drawer report Commission sales report	Individual department group report Department group total report PLU/EAN sales report by specified range PLU/EAN pickup report Combo sales report	Individual department group report - X1 Department group total report - X1 PLU/EAN sales report by specified range PLU/EAN pickup report - X1,Z1 Combo sales report - X1 PLU/EAN report by associated dept X1,Z1 PLU/EAN individual group report - X1 PLU/EAN group total report - X1 PLU/EAN stock report - X1 PLU/EAN stock pickup report - X1 PLU/EAN top 20 sales report by sales amount PLU/EAN zero sales report by associated dept X1 PLU/EAN top 20 sales report by - X1 PLU/EAN top 20 sales report by - X1 PLU/EAN preport - X1 PLU/EAN zero sales report by - X1 PLU/EAN zero sales report - X1 PLU/EAN minimum stock report - X1 PLU/EAN minimum stock report - X1 PLU/EAN sales report by price - X1 Transaction report - X1 Transaction report - X1 Transaction report - X1 Transaction sales report - X1 Commission sales report - X1	Individual department group report - X1 X2 Department group total report - X1 X2 PLU/EAN sales report by specified range - X1,Z1 X2,Z2 Specified range - X1,Z1 X2,Z2 Combo sales report - X1,Z1 X2,Z2 Combo sales pickup report - X1 X2 PLU/EAN report by associated dept X1,Z1 X2,Z2 PLU/EAN individual group report - X1 X2 PLU/EAN group total report - X1 X2 PLU/EAN stock report - X1 X2 PLU/EAN stock pickup report - X1 X2 PLU/EAN top 20 sales report by - X1 X2 Sales amount - X1 X2 PLU/EAN top 20 sales report by - X1 X2 Sales quantity - X1 X2 PLU/EAN zero sales report - X1 X2 PLU/EAN minimum stock report - X1 X2 PLU/EAN minimum stock report - X1 X2 PLU/EAN sales report by - X1 X2 Total-in-drawer report - X1 X2 Commission sales report - X1 X2 Total-in-drawer report - X1 X2 Commission sales report - X1 X2 Tansaction report - X1 X2 Commission sales report - X1 X2 Tansaction report - X1 X2 Commission sales report - X1 X2 Tansaction report - X1 X2 Commission sales report - X1 X2 Tansaction report - X1 X2 Commission sales report - X1 X2 Tansaction report - X1 X2 Commission sales report - X1 X2 Commission sales report - X1 X2 Tansaction report - X1 X2 Commission sales report - X1 X2 Commission sales report - X1 X2

Depart type	Description	Oper	ating n	nodes	Data to be entered		
Report type	Description	OPXZ	X1/Z1	X2/Z2	Data to be entered		
PERSONNEL>							
ALL CLERK	All clerk report	-	X1,Z1	X2,Z2			
IND. CLERK	Individual clerk report	X,Z	X1,Z1	X2,Z2			
ALL CASHIER	All cashier report	-	X1,Z1	X2,Z2	Only for the clerk + cashier system		
IND. CASHIER	Individual cashier report	X,Z	X1,Z1	X2,Z2			
EMPLOYEE	Employee report	-	-	X2,Z2	Employee code		
					(The range can be specified by		
					entering start and end codes.)		
EMP. ADJUSTMENT	Employee time adjustment report	-	-	X2	Employee code		
					(The range can be specified by		
					entering start and end codes.)		
EMP. ACTIVE STATUS	Employee active status report	-	-	X2	Employee code		
					(The range can be specified by		
					entering start and end codes.)		
EMP. OVER TIME	Employee over time report	-	-	X2,Z2			
				,	(The range can be specified by		
					entering start and end codes.)		
OTHERS>							
HOURLY	Hourly report (by specified range)	_	X1	-	For an individual time range		
	Hourly report (all)	_	X1,Z1	-			
DAILY NET	Daily net report	_	-	X2,Z2			
LABOR COST%	Labor cost % report	_	X1	-			
GLU	GLU report	_	X1,Z1	-	GLU code		
			,		(The range can be specified by		
					entering start and end codes.)		
GLU BY CLERK	GLU report by clerk	_	X1,Z1	_	3		
BALANCE	Balance report	_	X1	X2			
BILL	Bill report	_	X1,Z1	-			
CUSTOMER SALES	Customer sales report	_	-	X2	Customer code		
					(The range can be specified by		
					entering start and end codes.)		
CUSTOMER SALES 1	Customer sales report 1	-	_	Z2	Customer code		
	(Only details)				(The range can be specified by		
	, , , , , , , , , , , , , , , , , , , ,				entering start and end codes.)		
CUSTOMER SALES 2	Customer sales report 2	_	_	Z2	Customer code		
	(Detail/amount & total)				(The range can be specified by		
	,				entering start and end codes.)		
CUSTOMER BY AMT	Customer sales report by	_	-	X2	Customer sales range		
	specified sales range				3		
CHARGE ACCOUNT	Customer charge account report	_	-	X2			
	(Customer no payment report)						
CUSTOMER	Customer ordering report	_	-	X2,Z2	Customer ordering code		
ORDERING				,	(The range can be specified by		
222					entering start and end codes.)		
STACKED REPORT	Stacked report 1	_	X1,Z1	X2,Z2	ontoning start and ond bodos.)		
OTA OTALL OTT	Stacked report 2	1	^ 1,	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			
E. JOURNAL	· · · · · · · · · · · · · · · · · · ·	X 7	X1,Z1	_			
L. JUUNINAL	Electronic journal	X,Z	<u> </u>				

NOTE

*1: You can pick up PLU/EAN codes for issuing the report. You can pick up new PLU/EAN codes or the codes that were picked up the last time. To pick up new codes, select "1 NEW PICKING", and follow the procedure show below to pick up new codes. To pick up the codes that were picked up last time, select "2 LAST PICKING".

Follow the following procedure for picking up PLU/EAN codes.

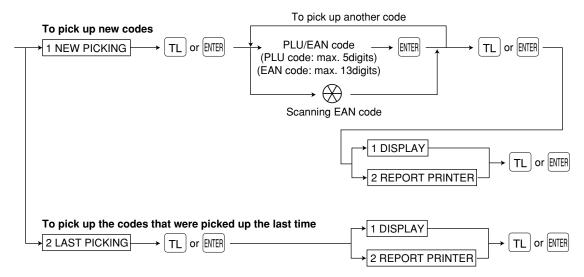

* The following reports relating to PLU/EAN is issued in the sequence of PLUs and EANs. PLU, PLU BY DEPT, PLU IND. GROUP, PLU ZERO SALES, PLU STOCK, PLU MINIMUM STOCK and PLU PRICE CATEGORY

Also the EAN codes are printed in the sequence shown below.

EAN-13
EAN-8
UPC-A
UPC-E

Compulsory Cash/Check Declaration (CCD)

If your POS terminal has been programmed for compulsory cash/check declaration, you must declare cash/check in drawer in advance according to the type of the declaration when you take clerk Z reports.

Use the procedure shown in "Key operation" below for this declaration.

Types of compulsory cash/check declaration

In case CCD by clerk/cashier (in "Clerk only system") is applied to your machine:

Compulsive when individual clerk resetting is taken.

In case CCD by clerk/cashier (in "Clerk + Cashier system") is applied to your machine*:

Compulsive when individual cashier resetting is taken.

In case CCD by terminal (CCD at the end of the day) is applied to your machine:

· Compulsive when general resetting is taken.

In case CCD per shift (CCD per each working time shift) is applied to your machine:




- You can not make a CCD entry at the already-CCD-completed shift.
- · You can not make any sales registration at the already-CCD-completed shift.
- You need to complete CCD entries at all of the programmed working time shifts before taking a general Z1 report.
- Compulsive when "CCD SHIFT ENTRY" is selected in the OPXZ mode.
- · Compulsive when general resetting is taken with CCD of the last working time shift uncompleted.
- · Compulsive at the working time shift operation.*
 - * You can also allow the employee to make the CCD entry after the working time shift operation by programming.

NOTE

Compulsory cash/check declaration is available in the above four types. You can choose either of these. Contact your authorized SHARP dealer for details.

Key operation

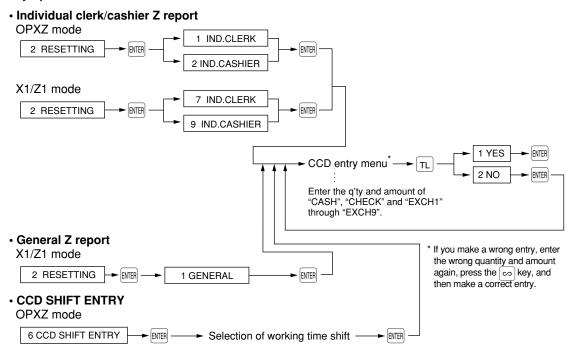



Non-accessed EAN and **Customer Deletion**

X1/Z1 MODE X2/Z2 MODE

You can delete EANs and customers that had not been accessed for a certain period. You can program a period in the PGM2 mode. As for customer, you can also delete customers with regardless to a non-accessed period.

Follow the procedure shown below.

Non-accessed EAN deletion

- 1. Select the X1/71 mode.
- 2. Select "7 NON ACCESSED EAN".
- 3. Select "1 READING" to take a report, or "2 DELETE" to delete non-accessed EANs.
- 4. After selecting "2 DELETE", select "1 ALL DELETE" to delete all the non-accessed EANs or "2 IND.DELETE" to delete the non-accessed EANs individually.

NOTE

It is recommended to take a report first before executing deleting operation.

Non-accessed customer deletion

- 1. Select the X2/Z2 mode.
- 2. Select "6 NON ACCESSED CUST.".
- 3. Select "1 READING" to take a report, or "2 DELETE" to delete non-accessed customers.
- 4. After selecting "2 DELETE", select "1 ALL DELETE" to delete all the non-accessed customers or "2 IND.DELETE" to delete the non-accessed customers individually.

NOTE

It is recommended to take a report first before executing deleting operation.


Customer deletion


- 1. Select the X2/Z2 mode.
- 2. Select "7 CUSTOMER DELETE".
- 3. Specify the range (start/end customer codes) you want to delete.


Prior to Programming

Programming Keyboard Layout

In the PGM1 or PGM2 mode, the keyboard layout is changed to the following one for programming.

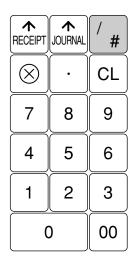

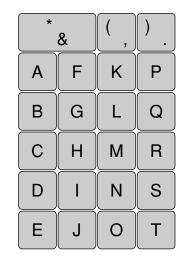

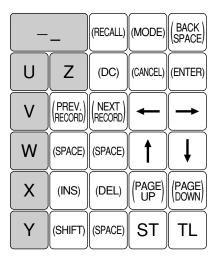


: The shaded area contains the character keys which are used for programming characters.

(DC) (INS) (DEL) (SACK): Used for programming characters. For more information about programming characters, see the section "How to Program Alphanumeric Characters."

- ↓]: Used to move the cursor.
- ENTER: Used to program each setting.
- TL: Used to finalize programming.
- : Used to cancel programming and to get back to the previous screen.
- [Used to go back to the previous record, e.g., from the department 2 programming window back to the department 1 programming window.
- : Used to go to the next record, for example, in order to program unit prices for sequential departments.
- [PAGE]: Used to scroll the window to go to the next page.
- (PAGE): Used to scroll the window to go back to the previous page.
- [CL]: Used to clear the last setting you have programmed or clear the error state.
- Used to toggle between two or more options.
- ST: Used to list those options which you can toggle by the [] key.
- (REALL): Used to call up a desired code.

Numeric keys: Used for entering figures.

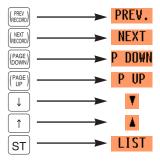

For more information about using these keys, see "Basic Instructions" section in Chapter 12 "Programming."

How to Program Alphanumeric Characters

This section discusses how to program alphanumeric characters such as "DESCRIPTION," "NAME" and "TEXT."

Using character keys on the keyboard

Entering alphanumeric characters

To enter a character, simply press a corresponding character key on the programming keyboard layout. To enter a digit, simply press a corresponding numeric key.

Entering double-size characters

(DC): This key toggles the double-size character mode and the normal-size character mode. The default is the normal-size character mode. When the double-size character mode is selected, the letter "W" appears at the bottom of the display.

Entering upper-case letters

You can enter an upper-case letter by using this key. Press this key just before you enter the upper-case letter. You should press this key each time you enter an upper-case letter.

Editing text

You can edit the text you have entered by deleting and/or inserting characters.

To select a text editing mode

(INS): Toggles between the insert mode ("_") and the overwrite ("■") mode.

To move the cursor

← or → : Moves the cursor.

To delete a character or figure

DEL : Deletes a character or figure in the cursor position.

(BACK): Backs up the cursor for deleting the character or figure at the left of the cursor.

Text copy/paste

Copy (to the buffer): Move the cursor to the target text line to copy, and press (8) key. Paste (from the buffer): Move the cursor to the target text line to paste, and press (900) key.

■ Entering character codes

Numerals, letters and symbols are programmable by entering the 00 key and character codes. Use the following procedure with the cursor placed at the position where you want to enter characters:

00 --- XXX XXX : cha

XXX : character code (3 digits)

Character code:

	016	017	018	019	020	021	022	023	024	025	026	027	028	029	030	031
016 - 031		T	‡	: :	P	δ		‡	†	ŧ	→	+	J	#	A	Ŧ
	032	033	034	035	036	037	038	039	040	041	042	043	044	045	046	047
032 - 047		Ť	4.0	#	\$	7.	å	,	()	*	+	,	-		/
	048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	063
048 - 063	0	1	2	3	4	5	6	7	8	9	-		<	=	>	?
	064	065	066	067	068	069	070	071	072	073	074	075	076	077	078	079
064 - 079	e	A	В	C	D	E	F	G	Н	Ι	J	K	L	Σ	H	0
	080	081	082	083	084	085	086	087	088	089	090	091	092	093	094	095
080 - 095	P	Q	R	S	T	U	V	3	X	Y	Z		1]	^	_
	096	097	098	099	100	101	102	103	104	105	106	107	108	109	110	111
096 - 111	٠.	a	Ъ	C	d	е	f	g	h	i	j	k	1	Ħ	n	o
	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
112 - 127	p	q	r	S	t	u	V	W	X	y	z	•	i	}		Δ
	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
128 - 143	Ç	ü	é	â	ä	à	å	G	ê	ë	è	ī	î	ì	Ä	Å
	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
144 - 159	É	æ	Æ	ô	Ö	ò	û	ù	ij	Ö	Ü	Ø	£	Ø	×	$ \mathbf{f} $
	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
160 - 175	á	í	ó	ú	ñ	Ñ	<u>a</u>	₽	Ł	R	7	ሄ	N		≪	>>
	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
176 - 191					-	Á	Â	À	0	1		7]	7	¢	¥	7
	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
192 - 207	L	T	T	-	_	+	ã	Ã	L	<u>[</u>	TI	T	<u> </u>		#	Ø
	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
208 - 223	ð	Đ	Ê	E	È	€	Í	Î	Ϊ	J	Γ			i	Ì	
	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
224 - 239	Ó	ß	ô	Ò	õ	Õ	h	þ	Þ	Ú	Û	Ù	ý	Ý		•
	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
240 - 255	_	<u>+</u>	=	*	P	δ	=	٠.	•		-	1	3	2		(DC)

*(DC) : Double-size character code

_(095) : Line feed code

: Shaded characters can not be printed by the built-in printer (display only).

12

Programming

PRICE MODE
PGM1 MODE

PGM2 MODE

AUTO KEY MODE

SD CARD MODE

This chapter explains how to program various items.


Before you start programming, select the PRICE, PGM1, PGM2, AUTO
KEY or SD CARD mode from the mode selection screen depending on the item you are going to program.

Basic Instructions


This section illustrates the basic programming by using an example of programming for departments.

■ Programming screen

Opening screen: When you select the PRICE, PGM1, PGM2, AUTO KEY or SD CARD mode from the mode selection screen, your display will show a programming opening screen corresponding to the mode you selected.

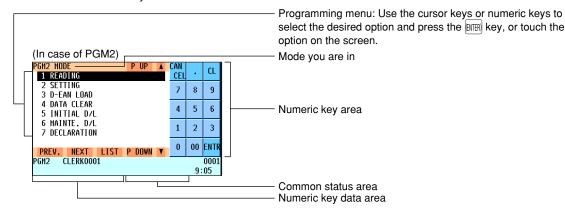

Code selecting screen (Dept. PLU/EAN, Customer):

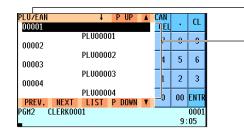


Code title

Code number and its description:

(In case of PLU/EAN and customer, two lines are used for one code, upper line - code, lower line - description.)

Use the cursor keys or numeric keys to select the desired option and press the key, or touch the option on the screen. (When you select the last item, the screen goes to the selected option screen without pressing the key.)

Programming screen:

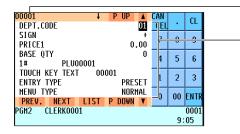

Selected menu message

Setting items:

Use the cursor to select the desired option or touch it on the screen. To enter the data for each option, follow the instruction shown below. Numeric entry: Use numeric keys.


Character entry: Use character keys.

Selective entry: Press the | • | key to toggle options and press

the wey to select it, or press the st key to show the options list. Use the cursor keys to move the cursor and press the key to select it, or touch the option on the screen.

■ Programming example


The following example shows how to program 2.00 for the unit price, "ABCDE" for the description, and "taxable 2 yes" for department 1.

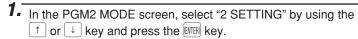

• The SETTING screen will appear.

NOTE

- You can also select "2 SETTING" by using numeric key "2," then press the Firsh key, or touching "2 SETTING" on the screen.
- To return to the previous screen, press the [MICL] key.

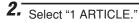


• The ARTICLE screen will appear.


NOTE

The arrow mark 1 in the window shows that the window contains more options than are now on the screen. To scroll the window, press the key.

To return to the previous page, press the PAGE key.

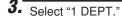

 The DEPT screen will appear, listing programmable departments.

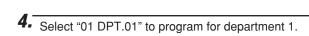

• The "01" window will appear.
















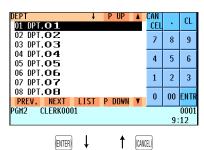

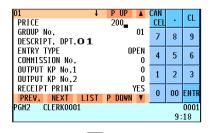

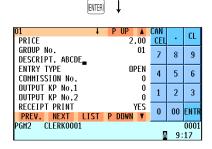



PAGE UP

1

(PAGE)

On the first page of the "01" window, program the unit price and description as follows:

NOTE

There are three entry patterns for the programming: the numeric entry, character entry, and selective entry.

- Move the cursor to or touch "PRICE," enter "200" by using numeric keys, then press the Republic keys. → Numeric entry
- Move the cursor to or touch "DESCRIPT.", enter "ABCDE" by using character keys, then press the REE key. → Character entry

If you want to clear setting, press the [CL] key before you press the [EL] key.

- Press the key two times and you will see the page shown left, then program the machine to set "TAXABLE 2" as follows:
 - Move the cursor to or touch "TAXABLE 2," press the key to select "YES," then press the □ key. → Selective entry

NOTE

The \bullet key toggles between two options as follows: $NO \rightarrow YES \rightarrow NO \rightarrow$

Pressing the ST key displays all pertinent options.

- Select one of the following actions:
 - To cancel the programming, press the key. Select "1 YES" in the "ARE YOU SURE?" window.
 - To finalize the programming, press the TL key, then press the Key. You will return to the "DEPT" window.
 - To program the following department, press the key. The "02" window will appear. To return to the "01" window, press the key.

The following sections describe how to program each item which is contained in a programming group.

Article Programming


Use the following procedure to select any option included in the article programming group:

Procedure



- 1. From the SETTING menu, select "1 ARTICLE."
 - The ARTICLE window will appear.



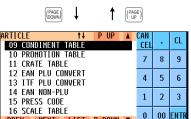

The screen continues.

2. Select any option from the following options list:

1 DEPT: Departments PLUs/EANs 2 PLU/EAN: Dynamic EANs 3 DYNAMIC EAN: A range of PLUs 4 PLU RANGE: 5 HAPPY HOUR: Happy hour PLU menu kev 6 PLU MENU KEY: 7 Combo meal COMBO MEAL: LINK PLU/EAN TABLE: Link PLU/EAN table

8 LINK PLU/EAN TABLE: Link PLU/EAN tab
9 CONDIMENT TABLE: Condiment table
10 PROMOTION TABLE: Promotion table
11 CRATE TABLE: Crate table

12 EAN PLU CONVERT: EAN-to-PLU converting table
13 ITF PLU CONVERT: ITF-to-PLU converting table
14 EAN NON-PLU: EAN Non-PLU type code format

15 PRESS CODE: EAN press code format


16 SCALE TABLE: Scale table

17 PLU/EAN STOCK: PLU/EAN stock quantity
18 EAN DELETE: EAN record delete period

The following illustration shows those options included in the article programming group.

0001

9:21

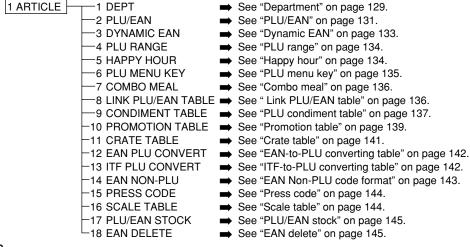


Department

Your POS terminal is equipped with 20 standard departments, and can be equipped with a maximum of 99 departments.

Use the following procedure to program for departments.

Procedure

Select a pertinent dept. code from the departments list.

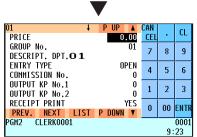

The screen continues.

Program each item as follows:

NOTE

For more information about the entry patterns, see the "Basic Instructions" section.

• PRICE (Use the numeric entry)

Unit price (max. 6 digits)

• GROUP No. (Use the numeric entry)

01-09: Plus department
10: Minus department
11: Plus hash department
12: Minus hash department
13: Plus bottle return department
14: Minus bottle return department

15-17: Non-turnover 1-3

 If the "Hash", "Bottle return" and "Non-turnover" functions are disabled, you are not allowed to select any hash, bottle return or non-turnover department.

• DESCRIPT. (Use the character entry)

Description for a department. Up to 16 or 20 characters can be entered.

ENTRY TYPE (Use the selective entry)

Type of unit price entry for departments
OPEN & PRESET: Open & preset
PRESET: Preset only
OPEN: Open only
INHIBIT: Inhibited

COMMISSION No. (Use the numeric entry)

Commission group number (1 through 9)

If the number "0" is entered, no commission group number will be assigned to a department.

You can assign each department to a commission group.

OUTPUT KP No. 1 and No. 2 (Use the numeric entry)

ID number of the network remote printer 1 or 2 (1 through 9) If the number "0" is entered, no remote printer will operate.

RECEIPT PRINT (Use the selective entry)

YES: Prints the department sales information on the receipt.

NO: Prints nothing on the receipt.

SIF/SICS/NORMAL (Use the selective entry)

Department type selection
SIF: SIF department
SICS: SICS department

NORMAL: Department other than SIF or SICS department

RECEIPT TYPE (Use the selective entry)

Receipt type selection (When the receipt type is "single/double" or "single/double + addition.")

DOUBLE: Double receipt type SINGLE: Single receipt type

■ Department (continued)

PRINT ON CLK (Use the selective entry)

YES: Prints the department sales information on the clerk report.

NO: Prints nothing on the clerk report.

• ITEM VP (Use the selective entry)

COMPULSORY: Makes item validation printing compulsory. NON-COMPULSORY: Makes item validation printing non-compulsory.

HALO (Use the numeric entry)

- You can set an upper limit amount (HALO) for each department. The limit is effective for the REG mode operations and can be overridden in the MGR mode.
- AB is the same as A x 10⁸.
- A: Significant digit for HALO (1 through 9)
- B: Number of zeros to follow the significant digit for HALO (0 through 8)

SCALE (Use the selective entry)

COMPULSORY: Makes a scale entry compulsory.

ENABLE: Enables a scale entry. INHIBIT: Inhibits a scale entry.

TARE TABLE (Use the numeric entry)

Scale table number associated with scale entry (1 through 9)

VMP No. (Use the numeric entry)

VMP file number for EAN (1 through 3)

If the number "0" is entered, no VMP file number is assigned.

• TAXABLE1 through 6 (Use the selective entry)

Tax status
YES: Taxable
NO: Non-taxable



- The tax system of your POS terminal has been factory-set to automatic VAT1 6. If you desire to select any of automatic tax 1 6, manual VAT1 6, manual VAT1, manual tax 1 6, and the combination of the automatic VAT 1 3 and the automatic tax 4 6, contact your authorized SHARP dealer.
- When the combination of the automatic VAT1 3 and automatic tax 4 6 system is selected, one of the taxable 1 - 3 can be selected in combination with taxable 4 - 6.

GROUP DISCOUNT1 through 10

Group discount status
YES: Discountable
NO: Non-discountable


■ PLU/EAN



- In this manual, the word "EAN" represents EAN (European Article Number) and UPC (Universal Product Code).
- · With regard to the EAN codes applicable to this POS terminal, please refer to the chapter 14.

Procedure

Select a pertinent PLU code, or directly enter a PLU code or EAN code.

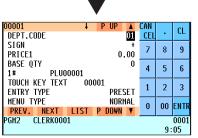

The screen continues.

Program each item as follows:

• DEPT. CODE (Use the numeric entry)

Department code to be associated with the entered PLU/EAN (01 through 99)

When a PLU/EAN is associated with a department, the following functions of the PLU/EAN depend on the programming for the department.

- Grouping (group 1 through 17)
- Item validation print compulsory/non-compulsory
- Single item cash sale/Single item finalize
- · Single receipt/double receipt
- HALO (only for subdepartments)

SIGN (Use the selective entry)

- +: Plus PLU/EAN
- -: Minus PLU/EAN

The function of every PLU/EAN varies according to the combination of its sign and the sign of its associated department as follows:

Department: + - Serves as a normal plus PLU/EAN. + - Serves as a normal plus PLU/EAN.

Department:
- Serves as a normal minus PLU/EAN.
- Serves as a normal minus PLU/EAN.

Department:
PLU/EAN:

+ Accepts store coupon entries, but not split-pricing entries.

not opin prioring oritinos.

Department:
PLU/EAN:
- Not valid; not accepted

PRICE1 through 8 (Use the numeric entry)

Unit price of each price level (max. 6 digits)

By default, only a price for PRICE 1 can be entered. If you want to enter a price for PRICE 2 through 8, contact your authorized SHARP dealer.

BASE QTY (Use the numeric entry)

Base quantity for each PLU/EAN that should be applied only to split-pricing entries (max. 2 digits: 0 to 99)

1# through 8# (Use the character entry)

Description for a PLU/EAN (for each price level)

Up to 16 or 20 characters can be entered.

By default, description for 1# only can be entered. If you want to enter description for 2# through 8#, contact your authorized SHARP dealer.

TOUCH KEY TEXT (Use the character entry)

Description for a PLU touch key

Up to 12 characters can be entered.

• ENTRY TYPE (Use the selective entry)

Mode parameter

OPEN: Open price only INHIBIT: Inhibited

OPEN&PRESET: Open price and preset price

PRESET: Preset price only

■ PLU/EAN (continued)

MENU TYPE (Use the selective entry)

PLU/EAN menu type selection
COMBO: Combo PLU/EAN
LINK: Link PLU/EAN
NORMAL: Normal PLU/EAN

COMBO#/LINK# (Use the numeric entry)

Table number for combo PLU/EANs/link PLUs (1 through 99)

CONDIMENT TBL# (Use the numeric entry)

Table number for condiment entry (1 through 99)

NOTE

For EAN, it is fixed to "00".

CONDIMENT TYPE (Use the selective entry)

YES: Condiment type NO: Non-condiment type

NOTE

For EAN, it is fixed to "NO".

CONDIMENT (Use the selective entry)

COMPULSORY: Makes a condiment entry compulsory.

NON-COMPULSORY: Makes a condiment entry non-compulsory.

NOTE

For EAN, it is fixed to "NON-COMPULSORY".

PRICE SHIFT (Use the selective entry)

COMPULSORY: Makes PLU/EAN price level shift compulsory.

INHIBIT: Inhibits PLU/EAN price level shift. ALLOWED: Allows PLU/EAN price level shift.

SCALE (Use the selective entry)

COMPULSORY: Makes a scale entry compulsory.

ENABLE: Enables a scale entry. INHIBIT: Inhibits a scale entry.

TARE TABLE # (Use the numeric entry)

Scale table number associated with scale entry (1 through 9)

SORT GROUP (Use the numeric entry)

PLU sort group number (00 through 99)

INFORMATION# (Use the numeric entry)

Information text number (max. 4 digits: 0000 to 9999)

COMMISSION No. (Use the numeric entry)

You can assign a PLU/EAN to a commission group (1 through 9).

If the number "0" is entered, no commission group number will be assigned to a PLU/EAN.

OUTPUT KP No.1 and No.2 (Use the numeric entry)

ID number of the network remote printer 1 or 2 (1 through 9)

If the number "0" is entered, no remote printer will operate.

RECEIPT PRINT (Use the selective entry)

YES: Prints the PLU/EAN sales information on the receipt.

NO: Prints nothing on the receipt.

■ PLU/EAN (continued)

PRINT ON CLK (Use the selective entry)

YES: Printing on the clerk report.

NO: No printing

• TAXABLE1 through 6 (Use the selective entry)

YES: Makes the PLU/EAN taxable.
NO: Makes the PLU/EAN non-taxable.

NOTE

- The tax system of your POS terminal has been factory-set to automatic VAT1 6. If you desire to select any of automatic tax 1 6, manual VAT1 6, manual VAT1, manual tax 1 6, and the combination of the automatic VAT1 3 and the automatic tax 4 6, contact your authorized SHARP dealer.
- When the combination of the automatic VAT1 3 and automatic tax 4 6 system is selected, one of the taxable 1 3 can be selected in combination with taxable 4 6.
- A PLU/EAN not programmed for any of these tax status is registered depending on the tax status of the department which the PLU/EAN belongs to.

PINT PRICE1 through 8 (Use the numeric entry)

Pint price of each price level (max. 6 digits)

By default, a price for PINT PRICE1 only can be entered. If you want to enter a price for PINT PRICE2 through 8, contact your authorized SHARP dealer.

PINT BASE QTY (Use the numeric entry)

Base quantity for each PLU/subdepartment/EAN that should be applied only to half/double pint entries (max. 2 digits: 0.0 to 9.9)

• HAPPY HOUR1 through 9 (Use the selective entry)

YES: Enables the happy hour entry. NO: Disables the happy hour entry.

• GROUP DISCOUNT1 through 10 (Use the selective entry)

Group discount status
YES: Discountable
NO: Non-discountable

• HOURLY GR.#1 through 3 (Use the numeric entry)

PLU hourly group number to classify PLUs for PLU hourly group reports (1 through 9)

BONUS POINT (Use the numeric entry)

Bonus points for a PLU/EAN (max. 7 digits)

MINIMUM STOCK (Use the numeric entry)

Minimum stock quantity for a PLU/EAN (max. 7 digits)

NON-ACCESS (Use the selective entry)

NON DEL.: Not delete non-accessed EANs by Z1 report.

DEL. BY Z: Delete non-accessed EANs by Z1 report.

NOTE

For PLU, it is fixed to "NON DEL.".

■ Dynamic EAN

NOTE

With regard to the EAN codes applicable to this POS terminal and EAN files, please refer to the chapter 14.

After you select "3 DYNAMIC EAN" on the "ARTICLE" menu, enter an EAN code or select a pertinent EAN code. The same setting items excepting MINIMUM STOCK as the "PLU/EAN" described in the previous section will appear. Please refer to "PLU/EAN" section for entering values or selecting options. The data will be saved in the Dynamic EAN file.

■ PLU range

You can program PLUs in the designated range.





	CAN		CL					
DEPT.CODE 01	CEL	_ •	CL					
SIGN	7	8	9					
PRICE1	1	٠	,					
BASE QTY	4	5	6					
1#	-	3	U					
TOUCH KEY TEXT	1	2	3					
ENTRY TYPE	-		3					
MENU TYPE	0	00	FNTR					
PREV. NEXT LIST P DO₩N ▼	U	00	LHIK					
PGM2 CLERK0001 0001								
		9:	39					

The screen continues in the same format as those screens shown in section "PLU/EAN".

Enter a value or select an option for each item as follows:

START CODE (Use the numeric entry)
 Starting PLU code (max. 5 digits)

• END CODE (Use the numeric entry)
Ending PLU code (max. 5 digits)

• OPERATION (Use the selective entry)

MAINTE: Enables you to change the setting you have

programmed.

NEW&MAINTE: Enables you to change the current setting

when the specified codes have already been created or to create new codes when the specified codes have not been created yet. Enables you to delete a specified range of

PLUs.

1 20

Happy hour

You can program the time range for each happy hour (Happy hour 1 to Happy hour 9). You can also program the day of the week the programmed happy hour functions. When a clerk enters a PLU code on the programmed day, the price level for which you have programmed a time range will be automatically entered. For example, if you set the start time at 9:00 AM, the end time at 11:00 AM, "ENABLE" for SUNDAY and the shift level at 2, the current price level is shifted to the level 2 from 9:00 AM to 11:00 AM on Sunday.

DFI FTF:

Procedure

Select a pertinent happy hour from the list.



The screen continues.

Program each item as follows:

START TIME (Use the numeric entry)

Start time: hour/minute (0000 to 2359)

• END TIME (Use the numeric entry)

End time: hour/minute (0000 to 2359)

• SHIFT LEVEL (Use the numeric entry)

Shift level (1 to 9)

SUNDAY through SATURDAY (Use the selective entry)

ENABLE: Enables the happy hour function. DISABLE: Disables the happy hour function.

NOTE

When the start time and end time are set at "0000," or shift level at 1, the happy hour function is not available.

■ PLU menu key

When you enter PLUs, using the PLU menu key makes it easy to find categorized PLU items from the menu list. Your POS terminal allows you to program a max. of 50 PLU menu keys. You can program a max. of 42 PLUs/sub-menus for each PLU menu key.








Selected PLU

menu key no.

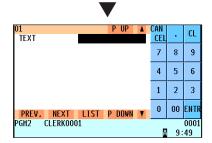

(ENTER)

01		<u> </u>	P UP	A	CAN		CL
01 INH					CEL	•	CL
02 INH	IBIT				7	8	9
03 INH	IBIT				,	٥	3
04 INH	IBIT				4	5	6
05 INH	IBIT				4	,	U
06 INH	IBIT				1	2	3
07 INH	IBIT				1		3
08 INH	IBIT				_	00	ENTR
PREV.	NEXT	LIST	P DOWN	Ŧ	0	UU	ENIR
PGM2 C	CLERKOOO)1		_			0001
						9:	49
01			P UP	A	CAN		CI.





Use the following procedure to program a PLU menu key:

In the ARTICLE window, select "6 PLU MENU KEY" and program each item as follows:

• PLU MENU KEY (Use the numeric entry)

PLU menu key number (1 thru 50)
1 thru 50 : For the direct PLU menu key.

TEXT (Use the character entry)

Description for the PLU menu key. Up to 16 characters can be entered.

• TYPE (Use the selective entry)

PLU: Selects to program a PLU. MENU: Selects to program a sub-menu.

• PLU or MENU (Use the numeric entry)

Select a menu PLU or sub-menu from the list.

NOTE


When selecting a sub-menu, the screen on which a sub-menu number is to be entered (the message "MENU") will appear.

NOTE

- PLU code should be defined before programming a PLU menu kev.
- If the [DEL] key is pressed on the PLU menu key number selection window, the PLU menu key number in the cursor position will be deleted. In the DELETE window, confirm the PLU menu key number to delete, press the [HTR] key, then select "1 YES" in the message "ARE YOU SURE?" to delete it.
- If the [DEL] key is pressed on the PLU/menu PLU code selection window, the PLU code in the cursor position will be canceled.

Combo meal

When you want to make some deduction for set sellings, combo meal should be specified, a PLU or EAN (combo PLU or EAN) can have a maximum of 10 PLUs subsidiarily.

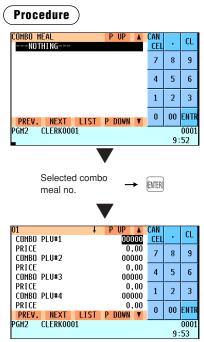

The screen continues.

Program each item as follows:

• COMBO MEAL (Use the numeric entry)

Combo meal number (1 through 99)

COMBO PLU#XX

Enter tied PLU codes (max. 10 PLUs).

• PRICE (Use the numeric entry)


Enter the unit price of each combo menu. (max. 6 digits)

NOTE

- PLU codes should be defined before programming a combo meal
- If the DEL key is pressed on the combo meal number selection window, the combo meal table in the cursor position will be deleted. In the DELETE window, confirm the combo meal number to delete, press the DELETE key, then select "1 YES" in the message "ARE YOU SURE?" to delete it.

■ Link PLU/EAN table

It is possible to link PLUs (linked PLUs) with a PLU or EAN (link PLU/EAN) so that just pressing the link PLU or EAN key allows you to register the linked PLUs together. The number of linked PLUs is a maximum of 30.

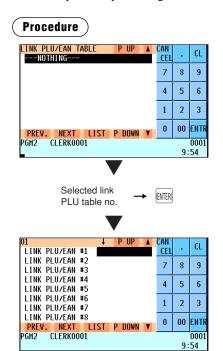

The screen continues.

Program each item as follows:

- LINK PLU/EAN TABLE (Use the numeric entry) Link PLU/EAN table number (1 through 99)
- LINK PLU/EAN #XX

Enter linked PLU codes (max. 30 PLUs).

NOTE

- PLU codes should be defined before programming a link PLU table.
- If the DEL key is pressed on the table number selection window, the selected table will be deleted. In the DELETE window, confirm the table number to delete, press the TER key, then select "1 YES" in the message "ARE YOU SURE?" to delete it.

■ PLU condiment table

The "condiment entry" is intended to guide the operator in making menu entries which require special cooking instructions. For example, a clerk can make such entries as "garnishing potato," "with salad," and "grilling steak rare." When a clerk enters a menu-item PLU to which PLUs for the condiment entry have been assigned, these orders (such as "garnishing potato") will be printed on the receipt and conveyed to the kitchen.

Before you program for the condiment entry, prepare a condiment table. The following shows an example of a condiment table:

Condiment table

Table number	PLU codes for condiment entry (programmed fext)								
01	Message text (HOWCOOK?)	23 (RARE)	25 (MED.RARE)	27 (WELLDONE)		02 -			
02	Message text (WITH?)	44 (SALAD)	45 (FRUITS)			_		Condiment	
= = = = = = = = = = = = = = = = = = = =	- - - -		- - - -	: : : :		_		tables (Up to 99)	
04	Message text (POTATO?)	33 (P.CHIPS)	37 (MASHED.P)	38 (BAKED.P)		99 _		(Op 10 99)	
99	Message text (DRINK?)	63 (TEA)	65 (MILK)	67 (A.JUICE)		_			
(-						Next condiment table number			

The condiment table should contain the following:

Condiment table: The condiment table is a group of condiment PLUs, which is assigned to each menu-item PLU. A table consists of a message text and up to 28 PLUs. Also, you can assign the next condiment table number to a condiment table to link them.

The message text is used for displaying a prompting message. The PLU is used for the special order setting. For example, when a clerk enters a menu-item PLU, a display message programmed for the message text such as "HOWCOOK?." will appear. Then specify one of the PLUs programmed for text such as "RARE."

Table number: The table number is intended to identify each condiment table.

NOTE

The condiment PLU programmed in a condiment table can be linked with condiment table (**Item link method**).

For example, if PLU 44 (SALAD) in a table of the above is linked with condiment table 10 (SAUCE), when the condiment PLU 44 (SALAD) is registered, items of the condiment table 10 (SAUCE) will be appeared.

Table number	PLU codes for condiment entry (programmed text)								
10	Message text (SAUCE)	51 (ITALIAN)	53 (FRENCH)		12	2			
					Next cor	ndiment			


table number

Procedure

PLU#05

PLU#06

PREV. NEXT PGM2 CLERK0001

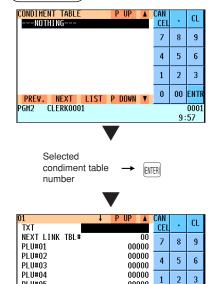

The screen continues.

NEXT LIST P DOWN

00000 00000

0 00 ENTI

> 0001 9:58

Program each item as follows:

CONDIMENT TABLE (Use the numeric entry)

Condiment table number (1 through 99)

TXT (Use the character entry)

Description for a condiment menu. Up to 16 characters can be entered.

NEXT LINK TBL# (Use the numeric entry)

Enter the next condiment table number (max. 2 digits).

• PLU#01 through #28


Enter condiment PLU codes (max. 28 PLUs).

NOTE

- The description is used as the display prompt.
- PLU codes should be defined before programming a condiment
- If the [DEL] key is pressed on the table number selection window, the table in the cursor position will be deleted. In the DELETE window, confirm the table number to delete, press the MIRI key, then select "1 YES" in the message "ARE YOU SURE?" to delete it.

■ Promotion table (global/individual type)

There are two types of promotion tables: the global type and individual type. The global type requires you to program a trip level for a set of objected items while the individual type requires you to program a trip level for each objected item.

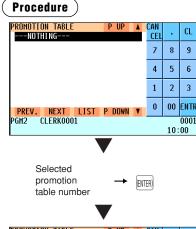

Program each item as follows:

• PROMOTION TABLE (Use the numeric entry)

Promotion table number (1 through 999)



Basically, you need to program the following four items:

- TEXT
- OBJECTED ITEM
- TYPE
- LEVEL 1 through 5





• TEXT (Use the character entry)

Description for each promotion table (max. 12 characters)


OBJECTED ITEM



OBJECTED ITEM

Program objected items for promotion (max. 25 items).

The screen continues.

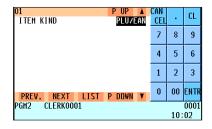


• ITEM KIND (Use the selective entry)

PLU/EAN: Select to program a PLU.

DEPT: Select to program a department.

GROUP: Select to program a PLU group.

Promotion table (continued)

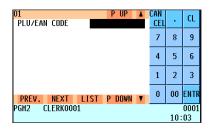

PLU/EAN CODE, DEPT or GROUP (Use the numeric entry)

Enter a PLU/EAN, department or PLU group code.

TYPE



TYPE (Use the selective entry)

GLOBAL: Selects the global type. INDIVIDUAL: Selects the individual type.

LEVEL 1 through 5



Each of LEVEL 1 through 5 consists of the following three items:

- TRIP LEVEL
- PROMOTION TYPE
- PROMOTION DETAIL

(Global type)



TRIP LEVEL (Use the numeric entry)

In case you selected the global type, this window appears. Trip level for the programmed objected items (1 to 99)


(Individual type)



The screen continues.

• TRIP LEVEL1 through 25 (Use the numeric entry)

In case you selected the individual type, this window appears. Trip levels for each of the programmed objected items (1 to 99)

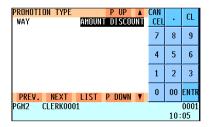

PROMOTION TYPE (Use the selective entry)

AMOUNT DISCOUNT: Selects the amount discount type. % DISCOUNT: Selects the percent discount type. GIVE FREE ITEM: Selects the give-free-item type. CHEAPER ITEM FREE: Selects the cheaper-item-free type. SELLING PRICE: Selects the selling price type.

■ Promotion table (continued)



PROMOTION DETAIL (Use the numeric entry)

AMOUNT DISCOUNT: Enter a discount amount.
% DISCOUNT: Enter a discount rate.
GIVE FREE ITEM: Enter a PLU/EAN code.
CHEAPER ITEM FREE: Enter a quantity.
SELLING PRICE: Enter a selling price.


NOTE

PLU codes should be defined before programming a promotion table. Also for EAN code, only EAN having a preset price can be programmed.

If the LEL key is pressed on the table number selection window, the table in the cursor position will be deleted. In the DELETE window, confirm the table number to delete, press the LEE key, then select "1 YES" in the message "ARE YOU SURE?" to delete it.

■ Crate table

You can program up to 99 crate tables

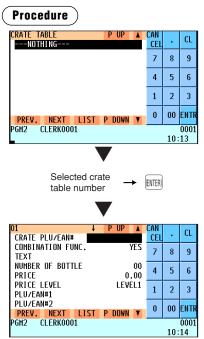

The screen continues.

Program each item as follows:

- CRATE TABLE (Use the numeric entry)
 Crate table number (1 through 99)
- CRATE PLU/EAN# (Use the numeric entry)
 Enter a crate PLU/EAN.
- COMBINATION FUNC. (Use the selective entry)

YES: Select to use the combination entry type.

NO: Select to use the single entry type.

• TEXT (Use the character entry)

Description for each crate table (max. 16 characters)

NUMBER OF BOTTLE (Use the numeric entry)

Enter the number of bottles in the crate. (0 through 99)

• PRICE (Use the numeric entry)


Enter a crate table price. (max. 6 digits)

- PRICE LEVEL (Use the selective entry)
 Select a price level.
- PLU/EAN#1 through 10 (Use the numeric entry)
 Enter PLU/EANs in the bottles.

NOTE

- PLU codes should be defined before programming a crate table. Also for EAN codes, only EANs having a preset price can be programmed.
- If the DEL key is pressed on the table number selection window, the table in the cursor position will be deleted. In the DELETE window, confirm the table number to delete, press the DELETE window, then select
 "1 YES" in the message "ARE YOU SURE?" to delete it.

■ EAN-to-PLU converting table

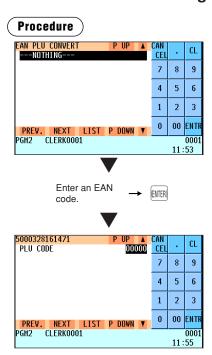


Program each item as follows:

- EAN PLU CONVERT (Use the numeric entry)
 Enter an EAN code.
- PLU CODE (Use the numeric entry)
 Enter a PLU code.

NOTE

If the DEL key is pressed on the table number selection window, the table in the cursor position will be deleted. In the DELETE window, confirm the table number to delete, press the EMER key, then select "1 YES" in the message "ARE YOU SURE?" to delete it.

■ ITF-to-PLU converting table

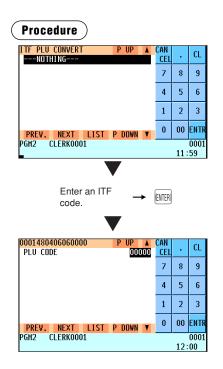


Program each item as follows:

- ITF PLU CONVERT (Use the numeric entry)
 Enter an ITF code.
- PLU CODE (Use the numeric entry)
 Enter a PLU code.

NOTE


If the DEL key is pressed on the table number selection window, the table in the cursor position will be deleted. In the DELETE window, confirm the table number to delete, press the LITE key, then select "1 YES" in the message "ARE YOU SURE?" to delete it.

■ EAN Non-PLU code format

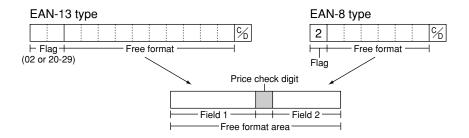

Procedure

Select a arbitrary number, or a pertinent EAN TYPE OF CODE & SYSTEM CODE you set.

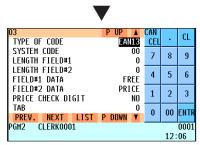

The screen continues.

Program each item as follows:

TYPE OF CODE (Use the selective entry)

EAN-8: EAN-8 format code (consisting of 8 digits) EAN-13 (UPC-A): EAN-13 format code (consisting of 13 digits)

SYSTEM CODE (Use the numeric entry)

System code (i.e. flag code): EAN-8: 1 digit, EAN-13: 2 digits

NOTE

ISBN/ISSN and press code are always used the fixed format even if code, 37, 43, 78, 98, or 97 is entered.

LENGTH FIELD#1 (Use the numeric entry)

Length of field 1 (number of digits): 0 to 9

• LENGTH FIELD#2 (Use the numeric entry)

Length of field 2 (number of digits): 0 to 9

• FIELD#1 DATA

Meaning of field 1: It is fixed to FREE.

FIELD#2 DATA (Use the selective entry)

Meaning of field 2
QUANTITY: Quantity
PRICE: Price

PRICE CHECK DIGIT (Use the selective entry)

Price check digit


YES: Use the price check digit NO: Not use the price check digit

• TAB (Use the selective entry)

TAB or decimal point of field 2: 3/2/1/0

■ Press code (for EAN)

Your POS terminal allows you to program the press code format.

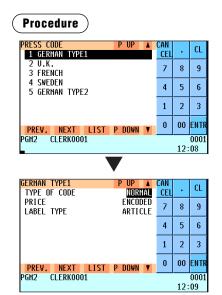

Program each item as follows:

PRESS CODE (1 to 5) (Use the selective entry)

1: GERMAN TYPE1 (prefix code: 434/439)

2: U.K. (prefix code: 988/989)

FRENCH (prefix code: 378/379)

4: SWEDEN (prefix code: 7388)

5: GERMAN TYPE2 (prefix code: 414/419)

TYPE OF CODE (Use the selective entry)

NORMAL: Normal EAN PRESS: Press code

• PRICE (Use the selective entry)

Price entry method for press code (This setting is valid only

when PRESS CODE is set for TYPE OF CODE.) PRESET: Using the EAN preset price ENCODED: Using the encoded price COMPULSORY: Compulsory entry

LABEL TYPE (Use the selective entry)

Label of record in EAN file (This setting is valid only when

PRESS CODE is set for TYPE OF CODE.)

ARTICLE: Prefix + article code


Select this option when you want to summarize the sales of items having press codes by each item.

PREFIX: Prefix only

> Select this option when you want to summarize the sales of items having press codes by category.

Scale table

You can program up to nine scale tables and allows different tares to be assigned to them.

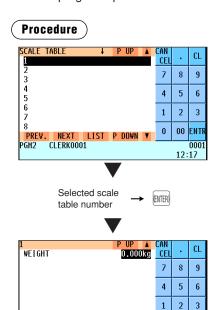

PREV. NEXT LIST P DOWN GM2 CLERKOOO1

0 00 NT

0001

12:22

Program each item as follows:

SCALE TABLE (Use the numeric entry)

Scale table number (1 through 9)

WEIGHT (Use the numeric entry)

Enter a tare weight for the scale table number (max. 4 digits: 1 to 9.999 kg (1 to 99.99 lbs.)).

NOTE


Your POS terminal may also be set to accommodate 2-integer +2decimal weights. For more details, please contact your authorized SHARP dealer.

PGH2


■ PLU/EAN stock

You can assign a stock quantity to each PLU/EAN code. Shown below is an example of selecting "1 OVERWRITE."



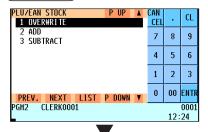

Select a pertinent PLU/EAN code, or directly enter a PLU code or EAN code.

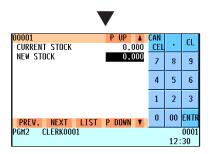

After selecting "1 OVERWRITE," select a pertinent PLU/EAN code. Then the next screen will appear to show the following items:

CURRENT STOCK

The current stock is displayed.

• NEW STOCK (Use the numeric entry)

Enter a new stock quantity (max. 7 digits: 1 to 9999.999(9999999))

NOTE

- If you need to add or subtract a stock quantity to or from the current stock quantity, select "2 ADD" or "3 SUBTRACT" and enter a value to be added or subtracted.
- · You cannot enter any values for the item marked with "!".
- The entry of a new stock value will update to the PLU/EAN stock counter.

■ EAN delete

You can delete the EAN codes which have not been accessed during the period you set in this program when you execute the delete job in EAN DELETE in X1/Z1 mode.

Procedure



Program each item as follows:

• PERIOD (DAY) (Use the numeric entry)

Enter the EAN record delete period: 01 to 99 (00: Not delete by the non-accessed deleting job)


Direct Key Programming

Use the following procedure to select direct-key programming:


Direct key

You can assign departments and PLUs directly to the keyboard. In the case of PLUs, you may assign up to 10 levels to be accessed directly on the keyboard. For key no. positions, refer to the illustration shown below.

Procedure

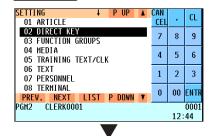

Select a pertinent key no. from the key numbers list.

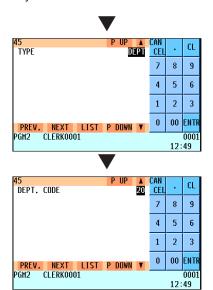

In the case of selecting "45 DIRECT DEPT"

• TYPE (Use the selective entry)

PLU: Assigns the key as a direct PLU key.


DEPT: Assigns the key as a direct department key.

NOTE


- You can also select a direct PLU key by pressing the corresponding key when the PLU has been assigned directly on the keyboard instead of selecting the key from the menu.
- When selecting a department, the screen on which a department code is to be entered (the message "DEPT. CODE") will appear.
- LEVEL1 through 10 (Use the numeric entry)

Enter a PLU code for each level. For example, if you want to use this key as PLU code 1 (level 1) and PLU code 101 (level 2), enter 1 for "LEVEL1" and 101 for "LEVEL2."

Key numbers

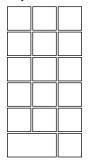

27	33	39	45
26	32	38	44
25	31	37	43
24	30	36	42
23	29	35	41

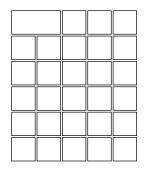

Departments and PLUs programmable area

NOTE


- You can assign departments and PLUs only for the "Departments and PLUs programmable area" shown above.
- You cannot assign a department or a PLU to the position to which a function key has been assigned.

Functional Programming

Use the following procedure to select any option included in the functional programming group:

Procedure



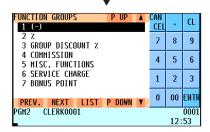

From the SETTING menu, select "3 FUNCTION GROUPS."

• The FUNCTION menu will appear.

Select any option from the following options list:

Discount key 1 (-): 2 %: Percent key 3 GROUP DISCOUNT %: Group discount key

4 COMMISSION: Commission

5 MISC. FUNCTIONS: Miscellaneous functions (deposit,

RA, PO, tip, cash in drawer and


check change)

6 SERVICE CHARGE: Service charge

7 BONUS POINT: Bonus points (bonus point table/bonus

redemption)


The following illustration shows those options included in the functional programming group.

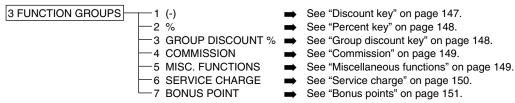

Discount key (through)

Procedure

Select a pertinent discount key from the discount keys list.

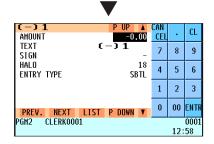

Program each item as follows:

AMOUNT (Use the numeric entry)

Discount amount (max. 6 digits)

TEXT (Use the character entry)

Description for the discount key. Up to 12 characters can be entered.

SIGN (Use the selective entry)

Programming of the + or - sign assigns the premium or discount function to each discount key.

- Minus amount (discount)
- +: Plus amount (premium)
- HALO (High Amount Lockout) (Use the numeric entry)
 - Significant digit for HALO (1 through 9)
 - Number of zeros to follow the significant digit for HALO (0 through 8)

AB is the same as A x 10⁸.

■ Discount key (through) (continued)

• ENTRY TYPE (Use the selective entry)

RA: Received on account (-)


ITEM: Item (-) SBTL: Subtotal (-)

NOTE You can also select a discount key by pressing the corresponding key.

■ Percent key (1 through 9)

Procedure

Select a pertinent percent key from the percent keys list.

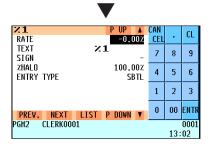

Program each item as follows:

RATE (Use the numeric entry)

Percent rate (0.00 to 100.00)

TEXT (Use the character entry)

Description for the percent key. Up to 12 characters can be entered.

· SIGN (Use the selective entry)

Programming of the + or - sign assigns the premium or discount function to each percent key.

- -: Minus (discount)
- +: Plus (premium)

• %HALO (High Amount Lockout) (Use the numeric entry)

HALO (High Amount Lockout) for the percent key (0.00 to 100.00)

• ENTRY TYPE (Use the selective entry)

RA: Received on account %


ITEM: Item % SBTL: Subtotal %

NOTE You can also select a percent key by pressing the corresponding key.

■ Group discount key (ROUP through ROUP)

Procedure)

Select a pertinent group discount key from the group discount keys list.

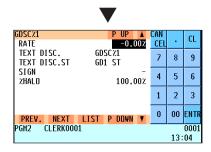

Program each item as follows:

RATE (Use the numeric entry)

Percent rate (0.00 to 100.00)

TEXT DISC. (Use the character entry)

Description for the group discount key Up to 12 characters can be entered.

• TEXT DISC. ST (Use the character entry)

Description for group discount subtotal Up to 12 characters can be entered.

SIGN (Use the selective entry)

Programming of the + or - sign assigns the premium or discount function to each group discount key.

- -: Minus (discount)
- +: Plus (premium)


• %HALO (High Amount Lockout) (Use the numeric entry)

HALO (High Amount Lockout) for the group discount key (0.00 to 100.00)

■ Commission

Procedure

Select a pertinent commission no. from the commission list.

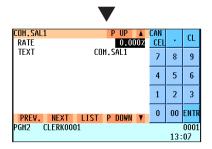

Program each item as follows:

• RATE (Use the numeric entry)


Percent rate (0.000 to 99.999)

• TEXT (Use the character entry)

Description for the commission. Up to 12 characters can be entered.

■ Miscellaneous functions (deposit, RA, PO, tip, cash in drawer and check change)

Procedure

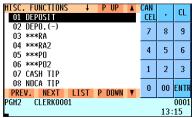

The screen continues.



Select a pertinent function from the miscellaneous functions list.

Program each item as follows:

NOTE

You can also select a pertinent function by pressing the corresponding key when it has been placed directly on the keyboard instead of selecting the key from the menu.

Deposit



RA



- HALO (High Amount Lockout) (Use the numeric entry)
 - A: Significant for HALO (1 through 9)
 - B: Number of zeros to follow the significant digit for HALO (0 through 8)

AB is the same as A x 10⁸.

TEXT (Use the character entry)

Description for the deposit

Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

- A: Significant for HALO (1 through 9)
- B: Number of zeros to follow the significant digit for HALO (0 through 8)

AB is the same as A x 10⁸.

• TEXT (Use the character entry)


Description for the received-on-account key Up to 12 characters can be entered.

■ Miscellaneous functions (continued)

PO



Tip

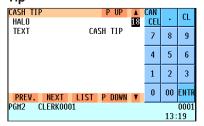

Cash in drawer



HALO (High Amount Lockout) (Use the numeric entry)

- A: Significant for HALO (1 through 9)
- B: Number of zeros to follow the significant digit for HALO (0 through 8)

AB is the same as A x 10^B.

TEXT (Use the character entry)

Description for the paid-out key Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

- A: Significant for HALO (1 through 9)
- B: Number of zeros to follow the significant digit for HALO (0 through 8)

AB is the same as A x 10⁸.

TEXT (Use the character entry)

Description for the tip

Up to 12 characters can be entered.


TEXT (Use the character entry)

Description for the cash in drawer Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

Limit amount: 0 to 9999999.99

Check change

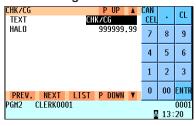

TEXT (Use the character entry)


Description for the check change Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

Limit amount: 0 to 999999.99

Service charge

Procedure

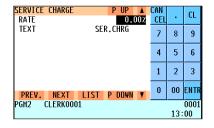

Program each item as follows:

RATE (Use the numeric entry)

Percent rate (0.00 to 100.00)


TEXT (Use the character entry)

Description for the service charge. Up to 12 characters can be entered.

Bonus points


You can program up to 10 sets of purchase amounts and bonus points in the bonus point table. In the bonus redemption programming, you can set the minimum bonus point, redeemed bonus points and discount amount for the redeemed bonus points.

Procedure

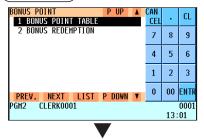

Select a pertinent item from the bonus point list.

Bonus point table

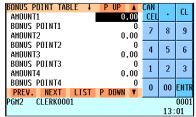


The screen continues.

AMOUNT1 through 10 (Use the numeric entry).

Amounts for bonus point 1 through 10 (max. 9 digits)

• BONUS POINT1 through 10 (Use the numeric entry)
Bonus points for amount 1 through 10 (max. 7 digits)

Bonus redemption

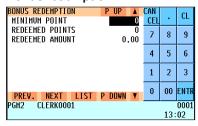

MINIMUM POINT

Minimum bonus point (max. 7 digits)

REDEEMED POINTS

Bonus points redeemed for the following amount (max. 7 digits)

REDEEMED AMOUNT

Discount amount for the redeemed points (max. 5 digits)

Media Key Programming


Use the following procedure to select any option included in the media group:

Procedure



From the SETTING menu, select "4 MEDIA."

• The MEDIA menu will appear.

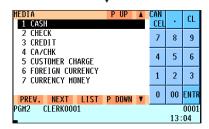

2. Select any option from the following options list:


1 CASH: Cash key
2 CHECK: Check key
3 CREDIT: Credit key
4 CA/CHK: Check cashing
5 CUSTOMER CHARGE: Charge key

 ${\tt 6}\,{\tt FOREIGN}\,{\tt CURRENCY};$ Foreign currency (currency exchange

key and foreign currency drawer)

7 CURRENCY MONEY: Currency money

The following illustration shows those options included in the media key programming group.

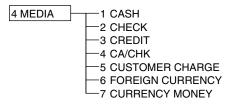

- ⇒ See "Cash key" on page 152.
- See "Check key" on page 153.
- ⇒ See "Credit key" on page 154.
- ⇒ See "Check cashing" on page 155.
- ⇒ See "Charge key" on page 155.
- See "Foreign currency" on page 156.
- ⇒ See "Currency money" on page 157.

■ Cash key

Procedure

Select a pertinent cash key from the cash keys list.

CASH CLTFXT CASH CEL HALD 8 9 BILL PRINT NON-COMPULSORY FOOTER PRINT NO 5 6 NAME&ADDRESS NON-COMPULSORY AMOUNT ENTRY NON-COMPULSORY 2 3 NON-ADD# NON-COMPULSORY NON-COMPULSORY 00 NT PREV. NEXT CLERK0001 0001 GH2 A 13:04

The screen continues.

Program each item as follows:

TEXT (Use the character entry)

Description for the cash key. Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

AB is the same as A x 108.

A: Significant digit (1 through 9)

B: Number of zeros to follow the significant digit (0 through 8) You can set AB at 18 for no limitation.

• BILL PRINT (Use the selective entry)

COMPULSORY: Makes bill printing compulsory.

NON-COMPULSORY: Makes bill printing non-compulsory.

FOOTER PRINT (Use the selective entry)

This item decides whether or not your POS terminal should print a message at the foot of a receipt when a specified cash key is used.

YES: Enables footer printing on the receipt.

NO: Disables footer printing on the receipt.

■ Cash key (continued)

NAME&ADDRESS (Use the selective entry)

You can make the name and address entry compulsory when a cash entry is accepted.

COMPULSORY: Compulsory name and address entry NON-COMPULSORY: Non-compulsory name and address entry

AMOUNT ENTRY (Use the selective entry)

You may select compulsory or non-compulsory amount tender.

COMPULSORY: Compulsory amount tendered entry

NON-COMPULSORY: Non-compulsory amount tendered entry

NON-ADD # (Use the selective entry)

You can make the non-add code entry compulsory when a cash entry is accepted.

COMPULSORY: Compulsory non-add code entry NON-COMPULSORY: Non-compulsory non-add code entry

VP (Use the selective entry)

COMPULSORY: Compulsory validation printing NON-COMPULSORY: Non-compulsory validation printing

• DRAWER OPEN (Use the selective entry)

You can program each cash key to open the drawer.

YES: Opens the drawer.

NO: Disables the drawer opening.

NOTE

You can also select a cash key by pressing the corresponding key when it has been placed directly on the keyboard instead of selecting the key from the menu.

■ Check key (CH1 through CH5)

Procedure

Select a pertinent check key from the check keys list.

CL TEXT CEI HALO 7 q 8 BILL PRINT NON-COMPULSORY FOOTER PRINT 5 6 NON-COMPULSORY NAME&ADDRESS AMOUNT ENTRY NON-COMPULSORY 1 2 3 NON-ADD# NON-COMPULSORY **FFT** NON-COMPULSORY 00 ENTE NEXT PREV. LIST CLERK0001 0001 GH2 A 13:06

The screen continues.

Program each item as follows:

TEXT (Use the character entry)

Description for the check key. Up to 12 characters can be entered.

• HALO (High Amount Lockout) (Use the numeric entry)

AB is the same as A x 10⁸.

A: Significant digit (1 through 9)

B: Number of zeros to follow the significant digit (0 through 8) You can set AB at 18 for no limitation.

BUIL BRINT (II II II II II II II

BILL PRINT (Use the selective entry)

COMPULSORY: Compulsory bill printing NON-COMPULSORY: Non-compulsory bill printing

• FOOTER PRINT (Use the selective entry)

YES: Enables footer printing on the receipt. NO: Disables footer printing on the receipt.

NAME&ADDRESS (Use the selective entry)

You can make the name and address entry compulsory when a check entry is accepted.

COMPULSORY: Compulsory name and address entry NON-COMPULSORY: Non-compulsory name and address entry

AMOUNT ENTRY (Use the selective entry)

COMPULSORY: Compulsory amount tendered entry NON-COMPULSORY: Non-compulsory amount tendered entry

NON-ADD# (Use the selective entry)

COMPULSORY: Compulsory non-add code entry NON-COMPULSORY: Non-compulsory non-add code entry

■ Check key (continued)

• EFT (Use the selective entry)

COMPULSORY: Makes EFT function compulsory.

NON-COMPULSORY: Makes EFT function non-compulsory.

DRAWER OPEN (Use the selective entry)

YES: Opens the drawer.

NO: Disables the drawer opening.

CHANGE DUE (Use the selective entry)

Either change enable or disable can be selected for each check key.

DISABLE: Disables change calculation. ENABLE: Enables change calculation.

DESCRIPTOR (Use the character entry)

Currency descriptor. Up to 4 characters can be entered.

VP (Use the selective entry)

COMPULSORY: Compulsory validation printing NON-COMPULSORY: Non-compulsory validation printing


NOTE

You can also select a check key by pressing the corresponding key when it has been placed directly on the keyboard instead of selecting the key from the menu.

■ Credit key (CR1) through CR9)

Procedure

Select a pertinent credit key from the credit keys list.

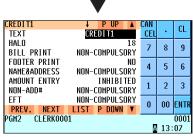

The screen continues.

Program each item as follows:

• TEXT (Use the character entry)

Description for the credit key. Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

AB is the same as A x 10⁸

A: Significant digit (1 through 9)

B: Number of zeros to follow the significant digit (0 through 8)

You can set AB at 18 for no limitation.

• BILL PRINT (Use the selective entry)

COMPULSORY: Compulsory bill printing NON-COMPULSORY: Non-compulsory bill printing

FOOTER PRINT (Use the selective entry)

This item decides whether or not your POS terminal should print a message at the foot of a receipt when a specified credit key is used.

YES: Enables footer printing on the receipt. NO: Disables footer printing on the receipt.

NAME&ADDRESS (Use the selective entry)

You can make the name and address entry compulsory when a credit entry is accepted.

COMPULSORY: Compulsory name and address entry NON-COMPULSORY: Non-compulsory name and address entry

AMOUNT ENTRY (Use the selective entry)

COMPULSORY: Makes amount tendered entry compulsory. INHIBITED: Inhibits amount tendered entry.

· NON-ADD# (Use the selective entry)

COMPULSORY: Compulsory non-add code entry NON-COMPULSORY: Non-compulsory non-add code entry

■ Credit key (continued)

NOTE

You can also select a credit key by pressing the corresponding key when it has been placed directly on the keyboard instead of selecting the key from the menu.

• EFT (Use the selective entry)

COMPULSORY: Makes EFT function compulsory.

NON-COMPULSORY: Makes EFT function non-compulsory.

DRAWER OPEN (Use the selective entry)

YES: Opens the drawer.

NO: Disables the drawer opening.

CHANGE DUE (Use the selective entry)

DISABLE: Disables change calculation. ENABLE: Enables change calculation.

VP (Use the selective entry)


COMPULSORY: Compulsory validation printing NON-COMPULSORY: Non-compulsory validation printing

■ Check cashing

You can program the description and the upper limit amounts for check cashing.

Procedure

Select a pertinent check cashing no. from the check cashing numbers list.

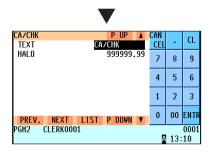

Program each item as follows:

TEXT (Use the character entry)


Description for check cashing. Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

Limit amount: 0 to 999999.99

Charge key

Procedure

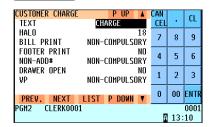

Program each item as follows:

TEXT (Use the character entry)

Description for the credit key. Up to 12 characters can be entered.

HALO (High Amount Lockout) (Use the numeric entry)

AB is the same as A x 10⁸.

A: Significant digit (1 through 9)

B: Number of zeros to follow the significant digit (0 through 8) You can set AB at 18 for no limitation.

• BILL PRINT (Use the selective entry)

COMPULSORY: Compulsory bill printing NON-COMPULSORY: Non-compulsory bill printing

• FOOTER PRINT (Use the selective entry)

This item decides whether or not your POS terminal should print a message at the foot of a receipt when the charge key is used.

YES: Enables footer printing on the receipt.

NO: Disables footer printing on the receipt.

Charge key (continued)

NOTE

You can also select the charge key by pressing the corresponding key when it has been placed directly on the keyboard.

NON-ADD# (Use the selective entry)

COMPULSORY: Compulsory non-add code entry NON-COMPULSORY: Non-compulsory non-add code entry

AUTO GROUP DISC.# (Use the numeric entry)

Setting the group discount number in this item enables the group discount function to be automatically performed at customer sales entries.

Automatic group discount number (0 to 10)

• DRAWER OPEN (Use the selective entry)

YES: Opens the drawer.

NO: Disables the drawer opening.

VP (Use the selective entry)

COMPULSORY: Compulsory validation printing NON-COMPULSORY: Non-compulsory validation printing

Foreign currency (foreign currency drawer and currency exchange key [EX1] through [EX9])

Procedure



Select a pertinent item from the foreign currency list.

Foreign currency drawer



• FOREIGN DRW# (Use the selective entry)


DRAWER2/DRAWER1/NONE

NOTE

The number of times of the drawer opening with the EXCHANGE(n) key will be added to the NO-SALE counter.

Currency exchange key

(EX1 through EX9)

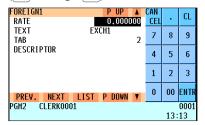

RATE (Use the numeric entry)

Currency exchange rate (0.000000 to 999.999999)

• TEXT (Use the character entry)

Description for the currency exchange key Up to 12 characters can be entered.

• TAB (Use the numeric entry)

Tabulation (0 to 3)

• DESCRIPTOR (Use the character entry)

Currency descriptor


Up to 4 characters can be entered.

■ Currency money

You can program the texts and amounts of each domestic bill, coin and foreign currency used for the starting cash memory. Up to 20 currencies (MOENY1 through 20) can be programmed.

Procedure

Select a pertinent currency money from the currency money list.

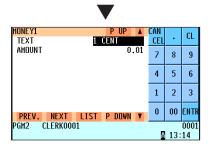

• TEXT (Use the character entry.)

Description for the currency money Up to 12 characters can be entered.

AMOUNT (Use the numeric entry.)

Amount for the currency money (max. 6 digits)

Training Text/Clerk Programming

Select "5 TRAINING TEXT/CLK" in the SETTING window. You can set the text for the training mode title and up to 2 clerks/cashiers in training.

Procedure



Program each item as follows:

TEXT

Description for the training mode title Up to 8 characters can be entered.

· CLK/CSR1 CODE

Clerk/cashier code in training (max. 4 digits)

• CLK/CSR2 CODE

Clerk/cashier code in training (max. 4 digits)

Text Programming

Use the following procedure to select any option included in the text group:

Procedure



- **1.** From the SETTING menu, select "6 TEXT."
 - The TEXT menu will appear.

- CLCEL 1 FUNCTION TEXT 2 DEPT. GROUF 7 8 9 3 PLU GROUP 4 PLU HOURLY GROUP 4 5 6 5 PLU INFORMATION 1 2 3 0 00 ENTI LIST P DOWN CLERK0001 0001 PGH2 13:15
- 2. Select any option from the following options list:

1 FUNCTION TEXT: Function text

2 DEPT.GROUP: Department group text

3 PLU GROUP: PLU group text

4 PLU HOURLY GROUP: PLU hourly group text
5 PLU INFORMATION: PLU information text

The following illustration shows those options included in the text programming group.

6 TEXT

1 FUNCTION TEXT

2 DEPT. GROUP

3 PLU GROUP

4 PLU HOURLY GROUP


5 PLU INFORMATION

- See "Function text" on page 159.
- ⇒ See "Department group text" on page 161.
- ⇒ See "PLU group text" on page 161.
- ⇒ See "PLU hourly group text" on page 162.
- ⇒ See "PLU information text" on page 162.

■ Function text

You can program a maximum of 12 characters for each function by using the following table:

Procedure

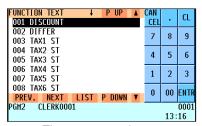

The screen continues.

Program each item as follows:

• TEXT (Use the character entry)

Description for each function. Up to 12 characters can be entered.

No.	Function	Default text
001	Promotion discount	DISCOUNT
002	Difference	DIFFER
003	Taxable 1 subtotal	TAX1 ST
004	Taxable 2 subtotal	TAX2 ST
005	Taxable 3 subtotal	TAX3 ST
006	Taxable 4 subtotal	TAX4 ST
007	Taxable 5 subtotal	TAX5 ST
800	Taxable 6 subtotal	TAX6 ST
009	VAT/tax 1	VAT 1
010	VAT/tax 2	VAT 2
011	VAT/tax 3	VAT 3
012	VAT/tax 4	VAT 4
013	VAT/tax 5	VAT 5
014	VAT/tax 6	VAT 6
015	Net 1	NET1
016	Net 2	NET2
017	Coupon-like PLU	CP PLU
018*	Void issued order-receipt	VD
019	Subtotal void	SBTL VD
020	MGR void	MGR VD
021	Void mode	VOID
022	Refund	REFUND
023	Return	RETURN
024*	Hash void issued order-receipt	HASH VD
025	Hash refund	HASH RF
026	Hash return	HASH RT
027*	Non-turnover void	NOTURNVD
028	Non-turnover refund	NOTURNRF
029	Non-turnover return	NOTURNRT
030	VAT shift	VAT SFT
031	VAT/tax delete	TAX DELE
032	VP counter	VP CNT
033	Bill counter	BILL CNT
034	No sale	NO SALE
035	Guest check counter	G.C. CNT

No.	Function	Default text
036	PBAL (for GLU)	***PBAL
037	NBAL (for GLU)	***NBAL
038	Starting cash memory (+)	SCM (+)
039	Starting cash memory (-)	SCM (-)
040	Exchange 1 is	EXCH1 IS
041	Exchange 2 is	EXCH2 IS
042	Exchange 3 is	EXCH3 IS
043	Exchange 4 is	EXCH4 IS
044	Exchange 5 is	EXCH5 IS
045	Exchange 6 is	EXCH6 IS
046	Exchange 7 is	EXCH7 IS
047	Exchange 8 is	EXCH8 IS
048	Exchange 9 is	EXCH9 IS
049	Cash is	CASH IS
050	Check is	CHECK IS
051	Cash/check in drawer	CA/CHK ID
052	Guest	GUEST
053	Non-commission sale	NON COM.
054	VIP1 sale	VIP1 SALE
055	VIP2 sale	VIP2 SALE
056	VIP3 sale	VIP3 SALE
057	WASTE total	WASTE TL
058	Order total	ORDER TL
059	Paid total	PAID TL
060	Transfer out	TRAN.OUT
061	Transfer in	TRAN.IN
062	Tip paid	TIP PAID
063	Domestic currency 1	DOM.CUR1
064	Domestic currency 2	DOM.CUR2
065	Domestic currency 3	DOM.CUR3
066	Domestic currency 4	DOM.CUR4
067	Domestic currency 5	DOM.CUR5
068	Domestic currency 6	DOM.CUR6
069	Domestic currency 7	DOM.CUR7
070	Domestic currency 8	DOM.CUR8

^{*}This void is applied to opened GLU.

■ Function text (continued)

No.	Function	Default text
071	Domestic currency 9	DOM.CUR9
072	Non-turnover total 1	*NT TL1
073	Non-turnover total 2	*NT TL2
074	Non-turnover total 3	*NT TL3
075	Check in drawer	*CHECK ID
076	(+)dept. total	*DEPT TL
077	(-)dept. total	DEPT(-)
078	Hash(+) total	*HASH TL
079	Hash(-) total	HASH(-)
080	Bottle return (+) total	*BTTL TL
081	Bottle return (-) total	BTTL (-)
082	Net 1 (Taxable 1 - VAT/tax 1)	NET 1
083	Net 2 (Taxable 2 - VAT/tax 2)	NET 2
084	Net 3 (Taxable 3 - VAT/tax 3)	NET 3
085	Net 4 (Taxable 4 - VAT/tax 4)	NET 4
086	Net 5 (Taxable 5 - VAT/tax 5)	NET 5
087	Net 6 (Taxable 6 - VAT/tax 6)	NET 6
088	Subtotal	SUBTOTAL
089	Merchandise subtotal	MDSE ST
090	Total	***TOTAL
091	Difference subtotal	DIFF ST
092	Non-turnover subtotal	NON-TURN
093	Change	CHANGE
094	English check print	CHECK PR
095	Due	DUE
096	Tip due	TIP DUE
097	Balance	BALANCE
098	Sales q'ty	ITEMS
099	Item subtotal (for LINK PLU/EAN)	ITEM ST
100	Copy receipt title	COPY
101	Guest check copy title	G.C COPY
102	Bill totalize/transfer title	В.Т.
103	Bill separation title	B.S.
104	Intermediate GLU reading title	INTERMED.
105	Bill on receipt title	BILL
106	Partial bill title	PARTIAL BILL
107	VIP1 sale title	VIP1 SALE
108	VIP2 sale title	VIP2 SALE
109	VIP3 sale title	VIP3 SALE
110	WASTE mode title	WASTE
111	Slip print journal message	SLIP PR.
112	Slip next page	NEXT P.
113	Average	AVE.
114	CCD	CCD
115	CCD difference	CCD DIF.
116	CCD difference total	DIF. TL
117	Order total - Paid total	0 - P
	1	

No.	Function	Default text
118	Commission amount 1	COM.AMT1
119	Commission amount 2	COM.AMT2
120	Commission amount 3	COM.AMT3
121	Commission amount 4	COM.AMT4
122	Commission amount 5	COM.AMT5
123	Commission amount 6	COM.AMT6
124	Commission amount 7	COM.AMT7
125	Commission amount 8	COM.AMT8
126	Commission amount 9	COM.AMT9
127	Commission amount total	COM.TTL
128	Bill balance	BILL BAL
129	Free GLU	FREE GLU
130	Old balance	OLD BAL.
131	New balance	BALANCE
132	Starting cash memory total	SCM TTL
133	Turnover per table	T.TABLE
134	·	T.GUEST
135	Turnover per guest Turnover per bill	T.BILL
136		I.GUEST
137	Item per guest	I.BILL
138	Item per bill	AVE.ITEM
139	Average price per item	TTL COST
140	Total labor cost	LOC#
141	Location no.	L.COST
141	Location cost	TTL HOUR
143	Total hour Over time	OVR TIME
143	Over time Over cost	OVR COST
145	Time-in	TIME-IN
146	Time-out	TIME-OUT
147	Break-in	BREAK-IN
148	Break-out	BREAK-OUT
149	Break total	BREAK TL
150	Labor percent	LABOR%
151	Total tax	TTL TAX
152	Net without tax	NET
153	Town name 1	TOWNNAME
154	Town name 2	TOWNNAME
155	Cash transfer	TRANSFER
156	GLU code	GLU#
157	Half pint sale	HF PINT SAL
158	Tare weight	TARE WT.
159	Receipt switch	RCP SW.
160	Bill void text	BILL VOID
161	WASTE on PLU report	WASTE
162	COMBO on PLU report	COMBO
163	COMBO WASTE on PLU report	COMBO WASTE
164	Check payment for exchange 1	EX1 CHK
104	Onech payment for exchange 1	LATORIN

■ Function text (continued)

No.	Function	Default text
165	Credit payment for exchange 1	EX1 CREDIT
166	Domestic currency 1 for check	DOM. CUR1 CHK
167	Domestic currency 1 for credit	DOM. CUR1 CR
168	VOID text on KP	VOID
169	REFUND text on KP	REFUND
170	RETURN text on KP	RETURN
171	New Code for customer	NEW CODE
172	Remained charge for customer	CHARGE
173	Deduction	DEDUCTION
174	Price change receipt title	PR.CHNG
175	Bonus points for item	BON.PTS.
176	Bonus points for total amount	BON.PTS.AMT
177	Total bonus points	BONUS POINTS

No.	Function	Default text
178	Bonus points redemption	BON.PTS.RDM
179	Total bonus points redemption	REDEMPT.TL
180	CCD shift entry 1	CCD SHIFT 1
181	CCD shift entry 2	CCD SHIFT 2
182	CCD shift entry 3	CCD SHIFT 3
183	CCD shift entry 4	CCD SHIFT 4
184	CCD shift entry 5	CCD SHIFT 5
185	CCD shift entry 6	CCD SHIFT 6
186	CCD shift entry 7	CCD SHIFT 7
187	CCD shift entry 8	CCD SHIFT 8
188	CCD shift entry 9	CCD SHIFT 9
189	Parital payment	PARTIAL PAY

Department group text

You can program a maximum of 12 characters for each department group (1 to 9).

Procedure

Select a pertinent department group number from the department groups list.



Program the item as follows:

TEXT (Use the character entry)

Description for the department group. Up to 12 characters can be entered.


■ PLU group text

You can program a maximum of 12 characters for each PLU group (0 to 99).

0001 A 13:23

Procedure

Select a pertinent PLU group number from the PLU groups list.

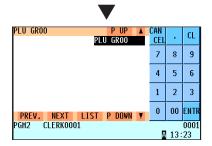

Program the item as follows:

• TEXT (Use the character entry)


Description for the PLU group. Up to 12 characters can be entered.

■ PLU hourly group text

You can program a maximum of 12 characters for each PLU hourly group (1 to 9).

Procedure

Select a pertinent PLU hourly group no. from the PLU hourly groups list.

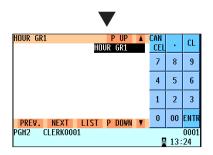


Program each item as follows:

TEXT (Use the character entry)
 Description for the PLU hourly group
 Up to 12 characters can be entered.

■ PLU information text

You can program information text in PLU information text tables (1 to 9999). A PLU information text table consists of 10 lines and up to 20 characters can be entered in each line.

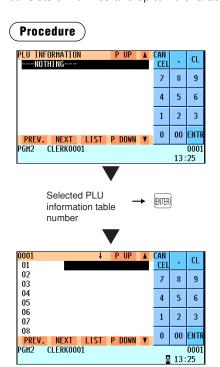

The screen continues.

Program each item as follows:

- PLU INFORMATION (Use the numeric entry)
 PLU information text table number (1 to 9999)
- TEXT (01 to 10) (Use the character entry)

 Description for each line

 Up to 20 characters can be entered.

Personnel Programming

Use the following procedure to select any option included in the personnel group:

Procedure



From the SETTING menu, select "7 PERSONNEL."

• The PERSONNEL menu will appear.




2. Select any option from the following options list:

1 CLERK: Clerk
2 CASHIER: Cashier
3 MANAGER: Manager
4 EMPLOYEE: Employee

5 JOB LOCATE TBL: Job location table
6 WORKING TIME SHIFT: Working time shift
7 CONTACTLESS KEY: Contactless key

8 CLERK KEY DEL.: Prohibition of the contactless key

The following illustration shows those options included in the personnel programming group.

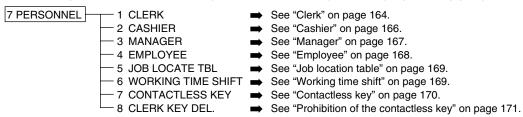



■ Clerk

NOTE

In case that "clerk + cashier system" is applied to your POS terminal, data except SECRET CODE, NAME and KEY No. are not effective.

Procedure

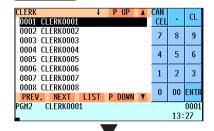

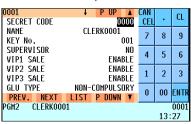

The screen continues.

Program each item as follows:

SECRET CODE (Use the numeric entry)

Secret code (max. 4 digits: 0001 to 9999/0000)

NAME (Use the character entry)

Name for the clerk. Up to 12 characters can be entered.

· KEY No. (Use the numeric entry)

Key number (0 through 255)

The entry of "0" disables the use of real clerk keys.

SUPERVISOR (Use the selective entry)

YES: Enables supervisor clerk. NO: Disables supervisor clerk.

VIP1 through 3 SALE (Use the selective entry)

DISABLE: Disables VIP sale. ENABLE: Enables VIP sale.

• GLU TYPE (Use the selective entry)

GLU: Makes GLU system compulsory.

NON-COMPULSORY: Makes GLU system non-compulsory.

• G.C. COPY (Use the selective entry)

DISABLE: Disables guest check copy. ENABLE: Enables guest check copy.

VAT SHIFT (Use the selective entry)

STATE: Enables VAT shift entry. NOT: Disables VAT shift entry.

DRAWER No. (Use the selective entry)

DRAWER2/DRAWER1/NONE

START GLU (Use the numeric entry)

Starting GLU code (1 to 9999)

END GLU (Use the numeric entry)

Ending GLU code (1 to 9999)

• PGM2 MODE (Use the selective entry)

DISABLE: Disables operation in the PGM2 mode. ENABLE: Enables operation in the PGM2 mode.

·

PGM1 MODE (Use the selective entry)

DISABLE: Disables operation in the PGM1 mode. ENABLE: Enables operation in the PGM1 mode.

PRICE MODE (Use the selective entry)

DISABLE: Disables operation in the PRICE mode. ENABLE: Enables operation in the PRICE mode.

• X1 MODE (Use the selective entry)

DISABLE: Disables operation in the X1 mode. ENABLE: Enables operation in the X1 mode.

■ Clerk (continued)

Z1 MODE (Use the selective entry)

DISABLE: Disables operation in the Z1 mode ENABLE: Enables operation in the Z1 mode.

• X2Z2 MODE (Use the selective entry)

DISABLE: Disables operation in the X2/Z2 mode. ENABLE: Enables operation in the X2/Z2 mode.

FLASH MODE (Use the selective entry)

DISABLE: Disables operation in the FLASH mode. ENABLE: Enables operation in the FLASH mode.

AUTO KEY MODE (Use the selective entry)

DISABLE: Disables operation in the AUTO KEY mode. ENABLE: Enables operation in the AUTO KEY mode.

SD CARD MODE (Use the selective entry)

DISABLE: Disables operation in the SD CARD mode. ENABLE: Enables operation in the SD CARD mode.

Z1 IN OPX/Z (Use the selective entry)

DISABLE: Disables resetting operation in OPXZ mode. ENABLE: Enables resetting operation in OPXZ mode.

RE-CALL GLU (Use the selective entry)

LIMITED: Inhibited for the clerk PUBLIC: Allowed for the clerk

• P.SFT START (Use the selective entry)

Price level range (start): (PRICE 1 through PRICE 8)

P.SFT END (Use the selective entry)

Price level range (end): (PRICE 1 through PRICE 8)

HAPPY HOUR (Use the selective entry)

NO: Disables the happy hour price shift. YES: Enables the happy hour price shift.

• BILL PRINT (Use the selective entry)

DISABLE: Disables customer bill printing. ENABLE: Enables customer bill printing.

CUST BILL DELETE (Use the selective entry)


DISABLE: Disables customer bill deletion. ENABLE: Enables customer bill deletion.


• AUTO MENU1 through 6 (Use the selective entry)

DISABLE: Disables each AUTO menu key. ENABLE: Enables each AUTO menu key.

Cashier

Procedure

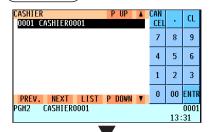

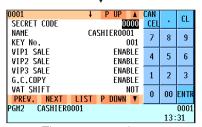

The screen continues.

Program each item as follows:

SECRET CODE (Use the numeric entry)

Secret code (max. 4 digits: 0001 to 9999/0000)

NAME (Use the character entry)

Name for the cashier. Up to 12 characters can be entered.

• KEY No. (Use the numeric entry)

Key number (0 through 255)

VIP1 through 3 SALE (Use the selective entry)

DISABLE: Disables VIP sale. ENABLE: Enables VIP sale.

· G.C. COPY (Use the selective entry)

DISABLE: Disables guest check copy. ENABLE: Enables guest check copy.

VAT SHIFT (Use the selective entry)

STATE: Enables VAT shift entry.
NOT: Disables VAT shift entry.

• DRAWER No. (Use the selective entry)

DRAWER2/DRAWER1/NONE

• PGM2 MODE (Use the selective entry)

DISABLE: Disables operation in the PGM2 mode. ENABLE: Enables operation in the PGM2 mode.

PGM1 MODE (Use the selective entry)

DISABLE: Disables operation in the PGM1 mode. ENABLE: Enables operation in the PGM1 mode.

PRICE MODE (Use the selective entry)

DISABLE: Disables operation in the PRICE mode. ENABLE: Enables operation in the PRICE mode.

X1 MODE (Use the selective entry)

DISABLE: Disables operation in the X1 mode. ENABLE: Enables operation in the X1 mode.

Z1 MODE (Use the selective entry)

DISABLE: Disables operation in the Z1 mode ENABLE: Enables operation in the Z1 mode.

X2Z2 MODE (Use the selective entry)

DISABLE: Disables operation in the X2/Z2 mode. ENABLE: Enables operation in the X2/Z2 mode.

• FLASH MODE (Use the selective entry)

DISABLE: Disables operation in the FLASH mode. ENABLE: Enables operation in the FLASH mode.

AUTO KEY MODE (Use the selective entry)

DISABLE: Disables operation in the AUTO KEY mode. ENABLE: Enables operation in the AUTO KEY mode.

■ Cashier (continued)

SD CARD MODE (Use the selective entry)

DISABLE: Disables operation in the SD CARD mode. ENABLE: Enables operation in the SD CARD mode.

Z1 IN OPX/Z (Use the selective entry)

DISABLE: Disables resetting operation in OPXZ mode. ENABLE: Enables resetting operation in OPXZ mode.

• P.SFT START (Use the selective entry)

Price level range (start): (PRICE 1 through PRICE 8)

P.SFT END (Use the selective entry)

Price level range (end): (PRICE 1 through PRICE 8)

HAPPY HOUR (Use the selective entry)

NO: Disables the happy hour price shift. YES: Enables the happy hour price shift.

• BILL PRINT (Use the selective entry)

DISABLE: Disables customer bill printing. ENABLE: Enables customer bill printing.

CUST BILL DELETE (Use the selective entry)


DISABLE: Disables customer bill deletion. ENABLE: Enables customer bill deletion.

AUTO MENU1 through 6 (Use the selective entry)

DISABLE: Disables each AUTO menu key. ENABLE: Enables each AUTO menu key.

■ Manager

You can program a secret code for each manager.

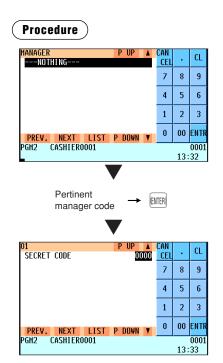

Program each item as follows:

- MANAGER (Use the numeric entry)
 - Manager code (max. 2 digits: 01 to 99)


SECRET CODE (Use the numeric entry)
 Secret code (max. 4 digits: 0000 to 9999)

■ Employee

You can program various items for each employee.

Procedure



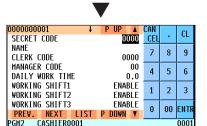

employee code

The screen continues.

13:34

Program each item as follows:

EMPLOYEE (Use the numeric entry)

Employee code (max. 10 digits: 000000001 to 999999999)

SECRET CODE (Use the numeric entry)

Secret code (max. 4 digits: 0001 to 9999)

NAME (Use the character entry)

Name for the employee Up to 12 characters can be entered.

• *1 CLERK CODE (Use the numeric entry)

Clerk code (max. 4 digits: 0001 to 9999)

• MANAGER CODE (Use the numeric entry)

Manager code (max. 2 digits: 01 to 99)

The manager who is responsible or capable for adjustments to the employee's hours

DAILY WORK TIME (Use the numeric entry)

Standard number of hours for which the employee should work a day (max. 3 digits: 0 to 99.9)

• WORKING SHIFT1 through 9 (Use the selective entry)

ENABLE: Enables each working shift. DISABLE: Disables each working shift.

• *2 LOCATION#1 through 7 (Use the numeric entry)

Job location table number (max. 2 digits: 01 to 99)


NOTE

- *1 The clerk to whom an employee code has been assigned cannot time in unless the corresponding employee times in.
- *2 If no job location table number is programmed for an employee time-in operation, the location no. 1 will be assigned.

Therefore, make sure to program a job location table number for "LOCATION#1."

■ Job location table

You can program three functions for each job location table number which is assigned to employees.

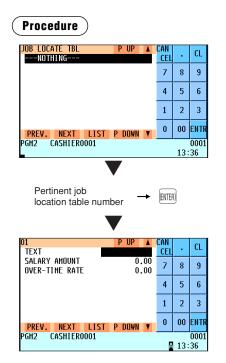

Program each item as follows:

- JOB LOCATE TBL (Use the numeric entry)


 Job location table number (1 to 99)
- TEXT (Use the character entry)
 Description for the job location table
 Up to 12 characters can be entered.
- SALARY AMOUNT (Use the numeric entry)
 Salary amount paid for the employee (max. 5 digits: 0 to 999.99)
- * OVER-TIME RATE (Use the numeric entry)
 Rate for overtime work (max. 4 digits: 0.01 to 99.99)

NOTE

* Overtime pay = SALARY AMOUNT x OVER-TIME RATE

■ Working time shift

You can program the names for 9 working time shifts.

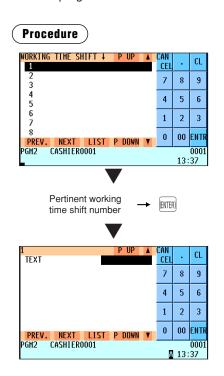

Program each item as follows:


- WORKING TIME SHIFT (Use the numeric entry)
 Working time shift number (0 to 9)
- TEXT (Use the character entry)
 Description for the working time shift
 Up to 12 characters can be entered.

■ Contactless key


You can program a clerk code for each contactless clerk key, and confirm the clerk name. When you perform this programming, the corresponding contactless key must be set to the clerk switch.

You can program the same clerk code for two or more contactless clerk keys.




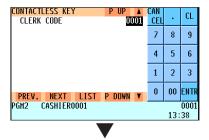

Entering the clerk code and pressing the INTER key

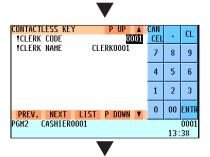

Confirmation of the clerk name and pressing the $\lceil TL \rceil$ key

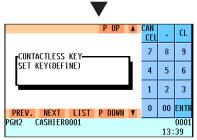

When you continue the programming, set another contactless key to the clerk switch. When you finalize the programming, press the [MICL] key.

Program each item as follows:

CLERK CODE (Use the numeric entry)

Clerk code (max. 4 digits: 0001 to 9999)

The entry of "0" disables the use of contactless clerk keys.

CLERK NAME (Use the character entry)


Clerk name (max. 12 characters)

NOTE

When you confirm a clerk code and clerk name for each contactless clerk key, perform the program reading sequence "25 CONTACTLESS KEY" of the section "Reading of Stored Programs".

■ Prohibition of the contactless key

You can prohibit a disused contactless key, entering the clerk code for the contactless key. You can perform this programming without the corresponding contactless key.

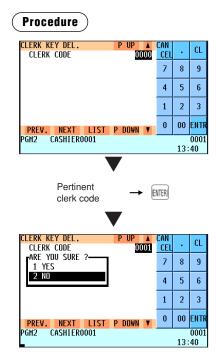

Program each item as follows:

CLERK CODE (Use the numeric entry)
 Clerk code (max. 4 digits: 0001 to 9999)

NOTE

When this procedure is performed, all contactless keys which have been assigned to a designated clerk code are prohibited. If you need to activate the prohibited contactless key, program a clerk code by the operation of "Contactless key".

Terminal Programming


Use the following procedure to select any option included in the terminal group:

Procedure



1. From the SETTING menu, select "8 TERMINAL."

• The TERMINAL menu will appear.

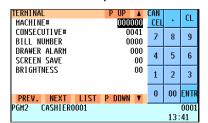

2. Select any option from the following options list:

• MACHINE# (Use the numeric entry)

Machine number (max. 6 digits: 0 to 999999)

CONSECUTIVE# (Use the numeric entry)

Enter a number (max. 4 digits: 0 to 9999) that is one less than the desired starting number.

• BILL NUMBER (Use the numeric entry)

Enter a number (max. 4 digits: 0 to 9999) that is the desired starting number.

DRAWER ALARM (Use the numeric entry)

Alarm length of time with drawer opening (0 to 255 seconds)

- Your POS terminal starts to monitor how long the drawer is kept open the moment the drawer is opened at the end of a transaction in the REG/VOID mode. It stops the time monitoring when a valid key (except the VP), SLIP, and ROPT keys) is pressed for the next transaction. It restarts the time monitoring after that transaction is ended. You can stop the buzzer alarm by closing the drawer. No key entries can be made while the buzzer is sounding. If the number "0" is entered, this function will be unavailable.
- SCREEN SAVE (Use the numeric entry)

Screen save mode timer (max. 2 digits: 0 to 99 minutes)

If the number "0" is entered, the POS terminal will turn the display off after 100 min., if it remains idle.

BRIGHTNESS (Use the numeric entry)

Adjustment of the LCD brightness (0 to 13)

"13" is the brightest.

Date/Time Setting


Use the following procedure to select the menu option "9 DATE/TIME":

■ Date/time

You can set the date and time for the POS terminal.

Procedure



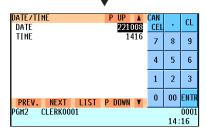

Set each item as follows:

• DATE (Use the numeric entry)

Enter the day (2 digits), month (2 digits), and year (2 digits) in this sequence.

TIME (Use the numeric entry)

Set the time (max. 4 digits) on the 24-hour system. For example, when the time is set to 2:30 AM, enter 0230; and when it is set to 2:30 PM, enter 1430. The time will be printed and displayed. Once you set the time, the internal clock unit will continue to run as long as the built-in battery pack is charged and also update the date (day, month, year) properly.

Optional Feature Selection

Use the following procedure to select any option included in the optional group:

Procedure



- 9 6
- 1 FUNC.PROHIBIT CEI FUNC.SELECT1 7 8 3 FUNC.SELECT2 4 PRINT SELECT1 4 5 5 PRINT SELECT2 6 FURN 1 2 3 ENTE PREV. NEXT LIST P DOWN CASHIER0001 0001 13:44


- 7. From the SETTING menu, select "10 OPTIONAL."
 - The OPTIONAL menu will appear.

2. Select any option from the following options list:

1 FUNC.PROHIBIT: Function prohibition
2 FUNC.SELECT1: Function selection 1
3 FUNC.SELECT2: Function selection 2
4 PRINT SELECT1: Printing selection 1
5 PRINT SELECT2: Printing selection 2

6 EURO: EURO

The following illustration shows those options included in the optional feature programming group.

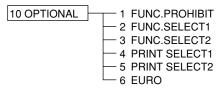


- ⇒ See "Function prohibition" on page 174.
- → See "Function selection 1" on page 176.
- ⇒ See "Function selection 2" on page 177.
- ⇒ See "Printing selection 1" on page 178.
- See "Printing selection 2" on page 179.
- See Finding Selection 2 on page 1
- ⇒ See "EURO" on page 181.

■ Function prohibition

Your POS terminal allows you to select whether to enable or disable various functions.

Procedure

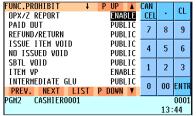

The screen continues.

Program each item as follows:

OPX/Z REPORT (Use the selective entry)

DISABLE: Disables clerk report printing in the OPXZ mode. ENABLE: Enables clerk report printing in the OPXZ mode.

• PAID OUT (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

• REFUND/RETURN (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

ISSUE ITEM VOID (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

NO ISSUED VOID (Use the selective entry)

LIMITED: Allowed only in the MGR mode.
PUBLIC: Allowed in the REG and MGR modes.

SBTL VOID (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

• ITEM VP (Use the selective entry)

DISABLE: Disables item validation printing. ENABLE: Enables item validation printing.

• INTERMEDIATE GLU (Use the selective entry)

LIMITED: Allowed only in the MGR mode.
PUBLIC: Allowed in the REG and MGR modes.

GLU FINALIZE (Use the selective entry)

DISABLE: Disables GLU finalization after ordering. ENABLE: Enables GLU finalization after ordering.

VIP SALES (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

WASTE MODE (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

• INTERMEDIATE FINAL (Use the selective entry)

DISABLE: Disables GLU finalization before intermediate GLU reading. ENABLE: Enables GLU finalization before intermediate GLU reading.

■ Function prohibition (continued)

• OPEN GLU DISPLAY (Use the selective entry)

DISABLE: Disables opened GLU automatically display at sign on. ENABLE: Enables opened GLU automatically display at sign on.

• EAN LEARNING (Use the selective entry)

DISABLE: Disables EAN learning function. ENABLE: Enables EAN learning function.

PRICE CHANGE (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

CUSTOMER OPEN (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBILC: Allowed in the REG and MGR modes.

CUSTOMER BILL (Use the selective entry)

DISABLE: Disables customer bill printing. ENABLE: Enables customer bill printing.

CUSTOMER BILL DEL (Use the selective entry)

DISABLE: Disables customer bill deletion. ENABLE: Enables customer bill deletion.

• FINALIZE ST=0 (Use the selective entry)

LIMITED: Allows finalization when the subtotal is "0" only in the MGR mode.

PUBLIC: Allows finalization when the subtotal is "0" in the REG and MGR modes.

• 0 RECEIPT DRAWER (Use the selective entry)

DISABLE: Disables drawer opening when the sales amount printed on the receipt is "0". ENABLE: Enables drawer opening when the sales amount printed on the receipt is "0".

VOID AFTER ST-KEY (Use the selective entry)

LIMITED: Allows void operation after the subtotal key is pressed only in the MGR mode.

PUBLIC: Allows void operation after the subtotal key is pressed in the REG and MGR modes.

• DRAWER OPEN X1/X2 (Use the selective entry)

DISABLE: Disables drawer opening in the X1/X2 mode. ENABLE: Enables drawer opening in the X1/X2 mode.

DRAWER OPEN Z1/Z2 (Use the selective entry)

DISABLE: Disables drawer opening in the Z1/Z2 mode. ENABLE: Enables drawer opening in the Z1/Z2 mode.

DRAWER OPEN OP X/Z (Use the selective entry)

DISABLE: Disables drawer opening in the OPXZ mode. ENABLE: Enables drawer opening in the OPXZ mode.

■ Function selection 1

Your POS terminal enables you to select various functional selections.

Procedure

FUNC.SELECT1 ↓ P UP ▲ REFUND VP NON-COMPULSORY	CAN CEL		CL
(-) VP NON-COMPULSORY Double RCPT Header Normal	7	8	9
VAT SHIFT BY SHIFT LEVEL SHIFT TYPE AUTO	4	5	6
LEVEL SHIFT PUBLIC LEVEL RETURNTIMING RECEIPT	1	2	3
PRICE SHIFT TYPE AUTO PREV. NEXT LIST P DOWN *	0	00	ENTR
PGM2 CASHIERO001		13:	0001 47

The screen continues.

Program each item as follows:

REFUND VP (Use the selective entry)

COMPULSORY: Compulsory refund validation printing NON-COMPULSORY: Non-compulsory refund validation printing

• (-) VP (Use the selective entry)

COMPULSORY: Compulsory minus validation printing NON-COMPULSORY: Non-compulsory minus validation printing

DOUBLE RCPT HEADER (Use the selective entry)

1 LINE: Prints a one-line header on a double receipt. NORMAL: Prints a normal header on a double receipt.

VAT SHIFT (Use the selective entry)

BY SHIFT: Allows VAT shift to be accomplished by the shift key. BY CLERK: Allows VAT shift to be accomplished by a clerk.

• LEVEL SHIFT TYPE (Use the selective entry)

MANUAL: Lock shift mode

AUTO: Automatic return mode

• LEVEL SHIFT (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

• LEVEL RETURNTIMING (Use the selective entry)

When the PLU level shift system is set to "AUTO," the PLU level can be returned to level 1 by one of the following methods:

RECEIPT: Returns the PLU level to level 1 by one receipt. BY ITEM: Returns the PLU level to level 1 by one item.

PRICE SHIFT TYPE (Use the selective entry)

MANUAL: Lock shift mode

AUTO: Automatic return mode

PRICE SHIFT (Use the selective entry)

LIMITED: Allowed only in the MGR mode.

PUBLIC: Allowed in the REG and MGR modes.

• PRICE RETURNTIMING (Use the selective entry)

When the PLU price level shift method is set to "AUTO," the price level can be returned to price 1 by one of the following methods:

RECEIPT: Returns the price level to price 1 by one receipt. BY ITEM: Returns the price level to price 1 by one item.

NON-TURNOVER (Use the selective entry)

IN. VAT: Enables non-turnover including VAT. EX. VAT: Disables non-turnover including VAT.

QTY IN VIP (Use the selective entry)

UPDATE: Updates the sales quantity of VIP sale.

NON: Does not update the sales quantity of VIP sale.

CR IN RA/PO (Use the selective entry)

UPDATE: Updates a credit totalizer when finalizing a received-on-account or a paid-out entry by a

credit kev.

NON: Does not update a credit totalizer when finalizing a received-on-account or a paid-out entry

by a credit key.

■ Function selection 2

Your POS terminal enables you to select various functional selections.

Procedure

FUNC.SELECT2 ↓ P UP ↓ SHIFT KEY ACTION CAPS	CAN CEL		CL	
T-LOG FULL CONT <u>inue</u> When e.j. full continue	7	8	9	
PAY FOR EX1 CASH EX1 CALC. MULTI.	4	5	6	
CLERK POPUP DISABLE ISBN PRICE COMPULSORY	1	2	3	
VMP FULL CONTINUE PREV. NEXT LIST P DOWN ▼	0	00	ENTR	
PGM2 CASHIER0001 0001 13:48				

The screen continues.

Program each item as follows:

SHIFT KEY ACTION (Use the selective entry)

CAPS: Locks the upper-case letter mode once the shift

key is touched.

SHIFT: Shifts the upper-case letter mode to the lower-

case letter mode after a letter is entered.

T-LOG FULL (Use the selective entry)

Programming whether or not to lock item entry when the T-LOG file is full.

CONTINUE/LOCK

WHEN E.J. FULL (Use the selective entry)

Programming whether or not to lock item entry when the Electronic Journal file is full.

CONTINUE/LOCK

PAY FOR EX1 (Use the selective entry)

Payment for exchange1 amount

CASH: Cash only ALL: All media

• EX1 CALC. (Use the selective entry)

Exchange1 calculation method

DIVIDE: Division
MULTI.: Multiplication

CLERK POPUP (Use the selective entry)

If a clerk is not sign on under the supervisor clerk, CLERK POPUP is displayed.

ENABLE/DISABLE

ISBN PRICE (Use the selective entry)

Price entry after ISBN/ISSN code entry

INHIBIT/COMPULSORY

VMP FULL (Use the selective entry)

VMP EAN entry when the VMP file is full

ERROR/CONTINUE

ADD-ON FULL (Use the selective entry)

Entry of EAN with add-on code when the EAN ADD-ON file is full.

ERROR/CONTINUE

• CUSTOMER DATA (Use the selective entry)

TOTAL: Sales total and charge sales total

DETAIL: Detail data (Sales total, charge sales total, sales date, item's name, amount and quantity)

EURO NON-PLU (Use the selective entry)

Converting the unit price of EAN NON-PLU codes (suffix code: 21, 22, 23, 27) between EURO and the local currency.

CONVERT/NO CONVERT

• EURO ALL CONVERT (Use the selective entry)

Converting the unit price of EAN NON-PLU codes (all types of codes) between EURO and the local currency.

CONVERT/NO CONVERT

■ Printing selection 1

You can program various printing functions.

Procedure

PRINT SELECT1 ↓ P UP ▲ PURCHASE NO. NO	CAN CEL		CL
TIME PRINT YES JOURNAL SELECTIVE FULL	7	8	9
JOURNAL TEXT SIZE SMALL VAT/TAX AMT ON R/J YES	4	5	6
TAXABLE AMT ON R/J YES NET AMOUNT ON R/J YES	1	2	3
VAT/TAX AMT BILL YES PREV. NEXT LIST P DOWN ▼	0	00	ENTR
PGM2 CASHIER0001 0001 13:51			

The screen continues.

Program each item as follows:

PURCHASE NO. (Use the selective entry)

NO: Does not print the number of purchases.

YES: Prints the number of purchases.

• TIME PRINT (Use the selective entry)

NO: Does not print the time on the receipt and journal.

YES: Prints the time on the receipt and journal.

JOURNAL SELECTIVE (Use the selective entry)

PARTIAL: Prints the information on all entries other than normal

department entries (entries into "+" departments and

their associated "+" PLUs) on the journal.

FULL: Prints the detailed information on the journal.

JOURNAL TEXT SIZE (Use the selective entry)

NORMAL: Prints the normal-size letters on the journal.

SMALL: Prints the compressed-size letters on the journal.

VAT/TAX AMT ON R/J (Use the selective entry)

NO: Does not print VAT or tax amounts on the receipt and journal.

YES: Prints VAT or tax amounts on the receipt and journal.

• TAXABLE AMT ON R/J (Use the selective entry)

NO: Does not print taxable amounts on the receipt and journal.

YES: Prints taxable amounts on the receipt and journal.

NET AMOUNT ON R/J (Use the selective entry)

NO: Does not print net amounts on the receipt and journal.

YES: Prints net amounts on the receipt and journal.

VAT/TAX AMT BILL (Use the selective entry)

NO: Does not print VAT or tax amounts on the bill.

YES: Prints VAT or tax amounts on the bill.

TAXABLE AMT BILL (Use the selective entry)

NO: Does not print taxable amounts on the bill.

YES: Prints taxable amounts on the bill.

NET AMOUNT ON BILL (Use the selective entry)

NO: Does not print net amounts on the bill.

YES: Prints net amounts on the bill.

• TIME PRINT ON BILL (Use the selective entry)

NO: Does not print the time on the bill.

YES: Prints the time on the bill.

• TABLE# PRINT BILL (Use the selective entry)

NO: Does not print the table number on the bill.

YES: Prints the table number on the bill.

BILL PRINT ON SLIP (Use the selective entry)

NO: Does not print the bill on the slip.

YES: Prints the bill on the slip.

■ Printing selection 1 (continued)

• BILL PRINT ON RCPT (Use the selective entry)

NO: Does not print the bill on the receipt.

YES: Prints the bill on the receipt.

INTERMEDIATE SLIP (Use the selective entry)

NO: Does not print the details of intermediate GLU reading on the slip.

YES: Prints the details of intermediate GLU reading on the slip.

INTERMEDIATE RCPT (Use the selective entry)

NO: Does not print the details of intermediate GLU reading on the receipt.

YES: Prints the details of intermediate GLU reading on the receipt.

EDITING PRINT (Use the selective entry)

NO: Does not print the same articles (DEPT/PLU/EAN) collectively.

YES: Prints the same articles (DEPT/PLU/EAN) collectively.

CUSTOMER ADDRESS (Use the selective entry)

NO: Does not print customer addresses on the receipt.

YES: Prints customer addresses on the receipt.

■ Printing selection 2

You can program various printing functions.

Procedure

PRINT SELECT2 ▲ CAN SEPARATOR LINE NO EACH PLU CEL LINK PLU 7 9 8 FREE TEXT ON KP YES ITEM CODE ON KP 4 5 6 PRICE ON KP AMOUNT ON KP 1 2 3 GUEST# ON KP NO QTY=1 ON KP YES 0 00 ENTE PREV. NEXT LI GM2 CASHIEROOO1 0001 GH2 13:53

The screen continues.

Program each item as follows:

SEPARATOR LINE (Use the selective entry)

YES: Prints separator lines in the report.

NO: Creates one-line space instead of printing separator lines in the report.

LINK PLU (Use the selective entry)

PARENT+TTL: Prints parent PLU text of linked PLUs with

totalizer.

EACH PLU: Prints each PLU text of linked PLUs.

FREE TEXT ON KP (Use the selective entry)

YES: Prints free text on KP.

NO: Does not print free text on KP.

• ITEM CODE ON KP (Use the selective entry)

YES: Prints item code on KP.

NO: Does not print item code on KP.

PRICE ON KP (Use the selective entry)

YES: Prints unit price on KP.

NO: Does not print unit price on KP.

AMOUNT ON KP (Use the selective entry)

YES: Prints amount on KP.

NO: Does not print amount on KP.

GUEST# ON KP (Use the selective entry)

YES: Prints guest# on KP.

NO: Does not print guest# on KP.

QTY=1 ON KP (Use the selective entry)

YES: Prints quantity when quantity is 1.

NO: Does not print quantity when quantity is 1.

■ Printing selection 2 (continued)

• TOTAL&CHANGE (Use the selective entry)

Exchange1 amount print for total and change

DOMESTIC: Displays in domestic currency only.

WITH EX1: Displays both in domestic and EX1 currencies.

• PAYMENT VP (Use the selective entry)

Exchange1 amount print for payment VP

DOMESTIC Displays in domestic currency only.

WITH EX1: Displays both in domestic and EX1 currencies.

MAXIMUM TICKET (Use the numeric entry)

Maximum number of ticket issuing (1 to 99)

• NON-PAY CUST. REP (Use the selective entry)

Non-payment customer report format

DETAIL: Detail data

CHARGE: Charge amount data

UNIT PRICE PRINT (Use the selective entry)

NO: Does not print unit price on the receipt (1 line printing).*

YES: Prints unit price on the receipt (2 line printing).

* Except when special entries such as split-pricing entries, scale entries, etc are entered.

■ EURO

You can program optional functions for EURO. For the details, refer to EURO Migration Function section.

Procedure



Program each item as follows:

DATE (Use the numeric entry)

Preset the date to execute the automatic EURO modification operation.

Enter the day (2 digits), month (2 digits), and year (2 digits) in this sequence.

• TIME (Use the numeric entry)

Preset the time of the date to execute the automatic EURO modification operation.

Enter the hour (00-23)

PRICE CONVERT (Use the selective entry)

NO: Does not convert the preset unit prices of Dept./PLU/EAN to the ones of EURO currency in the automatic EURO modification operation.

YES: Converts the preset unit prices of Dept./PLU/EAN in the automatic EURO modification operation.

NOTE

The preset rate of the Ext key is applied as the conversion rate, and the calculation method is set to "division".

• EURO JOB (Use the selective entry)

NON-COMPULSORY: Non-compulsory the automatic EURO modification operation in the X2/Z2 mode

after the preset date.

COMPULSORY: Compulsory the automatic EURO modification operation in the X2/Z2 mode

after the preset date.


NOTE

When the EURO STATUS of your POS terminal is already "D" (i.e. the domestic currency has been changed to EURO in your POS terminal), this programming is disabled.

Report Programming

Use the following procedure to select any option included in the report group:

Procedure

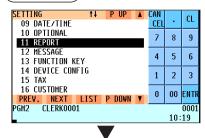

From the SETTING menu, select "11 REPORT."

• The REPORT menu will appear.



2. Select any option from the following options list:

1 0 SKIP: Zero skip

2 GENERAL RPT FORMAT: General report format
3 TRANS. RPT FORMAT: Transaction report format
4 CLERK RPT FORMAT: Clerk report format
5 HOURLY REPORT: Hourly report

6 STACKED REPORT: Stacked report

The following illustration shows those options included in the report programming group.




- ⇒ See "Zero skip" on page 182.
- 2 GENERAL RPT FORMAT → See "General report format" on page 183.
 - ⇒ See "Transaction report format" on page 184.
 - ⇒ See "Clerk report format" on page 186.
 - ⇒ See "Hourly report" on page 187.
 - ⇒ See "Stacked report" on page 188.

■ Zero skip

You can program whether or not to skip "0" in each report.

Procedure

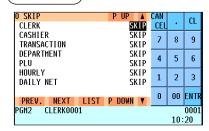

Program each item as follows:

CLERK (Use the selective entry)

SKIP: Skips those data that are "0" in the clerk report.

NOT SKIP: Does not skip those data that are "0" in the clerk

report.

CASHIER (Use the selective entry)

SKIP: Skips those data that are "0" in the cashier report. NOT SKIP: Does not skip those data that are "0" in the

cashier report.

TRANSACTION (Use the selective entry)

SKIP: Skips those data that are "0" in the transaction report.

NOT SKIP: Does not skip those data that are "0" in the transaction report.

DEPARTMENT (Use the selective entry)

SKIP: Skips those data that are "0" in the department report.

NOT SKIP: Does not skip those data that are "0" in the department report.

PLU (Use the selective entry)

SKIP: Skips those data that are "0" in the PLU/EAN report.

NOT SKIP: Does not skip those data that are "0" in the PLU/EAN report.

■ Zero skip (continued)

HOURLY (Use the selective entry)

SKIP: Skips those data that are "0" in the hourly report.

NOT SKIP: Does not skip those data that are "0" in the hourly report.

DAILY NET (Use the selective entry)

SKIP: Skips those data that are "0" in the daily net report.

NOT SKIP: Does not skip those data that are "0" in the daily net report.

■ General report format

You can program whether or not to skip the following items in the general report.

Procedure



Program each item as follows:

DEPARTMENT (Use the selective entry)

SKIP: Skips department data in the general report.

NOT SKIP: Does not skip department data in the general report.

TRANSACTION (Use the selective entry)

SKIP: Skips transaction data in the general report.

NOT SKIP: Does not skip transaction data in the general report.

NOTE

The programming is effective except the tax data/cash-in-drawer data.

TAX SALE (Use the selective entry)

SKIP: Skips tax data in the general report.

NOT SKIP: Does not skip tax data in the general report.

CID (Use the selective entry)

SKIP: Skips cash-in-drawer data in the general report.

NOT SKIP: Does not skip cash-in-drawer data in the general report.

DEPT. Q'TY (Use the selective entry)

SKIP: Skips department quantity in the general report.

NOT SKIP: Does not skip department quantity in the general report.

DEPT. %SHARE (Use the selective entry)


SKIP: Skips department %share in the general report.

NOT SKIP: Does not skip department %share in the general report.

■ Transaction report format

You can program whether or not to skip the following items in the transaction report.

Procedure

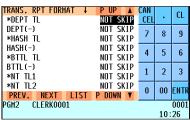

The screen continues.

Select "SKIP" or "NOT SKIP" for the following items using the selective entry. If you select "SKIP" for an item, the corresponding data in the "Data" column below is skipped in the transaction report.

Item	Data
*DEPT TL	(+) dept. total
DEPT(-)	(-) dept. total
*HASH TL	Hash(+) total
HASH(-)	Hash(-) total
*BTTL TL	Bottle return (+) total
BTTL(-)	Bottle return (-) total
*NT TL1	Non-turnover 1 total
*NT TL2	Non-turnover 2 total
*NT TL3	Non-turnover 3 total
ST(-)	Discount for subtotal
ST %	Percent calculation for subtotal
NET1	Net sales total
DIFFER	Difference
TAX1 ST	Taxable 1 subtotal
VAT1	VAT/tax 1
TAX2 ST	Taxable 2 subtotal
VAT2	VAT/tax 2
TAX3 ST	Taxable 3 subtotal
VAT3	VAT/tax 3
TAX4 ST	Taxable 4 subtotal
VAT4	VAT/tax 4
TAX5 ST	Taxable 5 subtotal
VAT5	VAT/tax 5
TAX6 ST	Taxable 6 subtotal
VAT6	VAT/tax 6
TTL TAX	Total tax
NET	Net without tax
VAT SFT	VAT shift
TAX DELE	VAT/tax delete
SER.CHRG	Service charge
NET2	Net 2
ITEM(-)	Discount for item
ITEM %	Percent calculation for item
GR.DISCOUNT	Group discount

Item	Data
DISCOUNT	Promotion discount
CP PLU	Coupon-like PLU
BON.PTS.	Bonus points for item
BON.PTS.AMT	Bonus points for amount
BONUS POINTS	Bonus points total
BON.PTS.RDM	Bonus point redemption
REDEMPT.TL	Bonus point redemption total
REFUND	Refund
VD	Item void
VOID	Void mode transaction
MGR VD	MGR void
ST VD	Subtotal void
WASTE	WASTE mode transaction
RETURN	Return
HASH VD	Hash void
HASH RF	Hash refund
HASH RT	Hash return
NOTURNVD	Non-turnover void
NOTURNRF	Non-turnover refund
NOTURNRT	Non-turnover return
VPCNT	Validation counter
BILL CNT	Bill print counter
NOSALE	No sale
***PBAL	PBAL
***NBAL	NBAL
G.C. CNT	Guest check counter
GUEST	Guest counter
ORDER TL	Order total
PAID TL	Paid total
AVE.	Average (paid total / guest)
0 – P	Difference (order total – paid total)
VIP SALES1	VIP1 sale
VIP SALES2	VIP2 sale
VIP SALES3	VIP3 sale

■ Transaction report format (continued)

Item	Data
TRANS OUT	Transfer out
TRANS IN	Transfer in
BILL BAL	Transfer out – transfer in
SCM (+)	Starting cash memory (+)
SCM (-)	Starting cash memory (-)
SCM TTL	Starting cash memory total
***RA	Received-on-account
***RA2	Received-on-account2
RA –	Discount for received-on-account
RA %	Percent calculation for received-
	on-account
***PO	Paid out
***PO2	Paid out2
CA/CHK	Cash check operation
DEPOSIT	Deposit(+)
DEPO.(-)	Deposit(-)
CASH TIP	Cash tip
NOCA TIP	Non-cash tip
TIP PAID	Tip paid
CASH	Cash
CASH2	Cash2
CASH3	Cash3
CASH4	Cash4
CASH5	Cash5
CHECK	Check
CHECK2	Check2
CHECK3	Check3
CHECK4	Check4
CHECK5	Check5
CREDIT1	Credit1
CREDIT2	Credit2
CREDIT3	Credit3
CREDIT4	Credit4

Item	Data
CREDIT5	Credit5
CREDIT6	Credit6
CREDIT7	Credit7
CREDIT8	Credit8
CREDIT9	Credit9
CHARGE	Charge
EXCH 1	Exchange 1
DOM.CUR1	Domestic currency 1
EX1 CHK	Exchange 1 paid by check
DOM.CUR CHK	Domestic currency 1 paid by check
EX1 CREDIT	Exchange 1 paid by credit
DOM.CR 1	Domestic currency 1 paid by credit
EXCH 2	Exchange 2
DOM.CUR2	Domestic currency 2
EXCH 3	Exchange 3
DOM.CUR3	Domestic currency 3
EXCH 4	Exchange 4
DOM.CUR4	Domestic currency 4
EXCH 5	Exchange 5
DOM.CUR5	Domestic currency 5
EXCH 6	Exchange 6
DOM.CUR6	Domestic currency 6
EXCH 7	Exchange 7
DOM.CUR7	Domestic currency 7
EXCH 8	Exchange 8
DOM.CUR8	Domestic currency 8
EXCH 9	Exchange 9
DOM.CUR9	Domestic currency 9
***CID	Cash in drawer
*CH ID	Check in drawer
CA/CH ID	Cash check in drawer
CHK/CG	Check change

■ Clerk report format

You can program whether or not to skip the following items in the clerk report format.

Procedure

CLERK RPT FORMAT ↓ P UP ↓ Z1 COUNTER NOT SKIP	CAN CEL		CL
CLERK CODE NOT SKIP CLERK NAME NOT SKIP	7	8	9
ORDER TL NOT SKIP COM.SAL1 NOT SKIP	4	5	6
COM.AMT1 NOT SKIP COM.SAL2 NOT SKIP	1	2	3
COM.AMT2 NOT SKIP PREV. NEXT LIST P DOWN ▼	0	00	ENTR
PGM2 CLERK0001 0001			
		10:	30

The screen continues.

Select "SKIP" or "NOT SKIP" for the following items using the selective entry. If you select "SKIP" for an item, the corresponding data in the "Data" column below is skipped in the clerk report.

Item	Data
Z1 COUNTER	Clerk Z1 reset counter
CLERK CODE	Clerk code
CLERK NAME	Clerk name
ORDER TL	Order total
COM.SAL1	Commission sales 1
COM.AMT1	Commission amount 1
COM.SAL2	Commission sales 2
COM.AMT2	Commission amount 2
COM.SAL3	Commission sales 3
COM.AMT3	Commission amount 3
COM.SAL4	Commission sales 4
COM.AMT4	Commission amount 4
COM.SAL5	Commission sales 5
COM.SALS COM.AMT5	Commission amount 5
COM.SAL6	Commission sales 6
COM.SAL6	
	Commission amount 6
COM.SAL7	Commission sales 7
COM.AMT7	Commission amount 7
COM.SAL8	Commission sales 8
COM.AMT8	Commission amount 8
COM.SAL9	Commission sales 9
COM.AMT9	Commission amount 9
COM.TTL	Commission amount total
NON COM.	Non-commission
PAID TL	Paid total
AVE.	Average (paid total / guest)
O – P	Difference (order total – paid total)
*NT TL1	Non-turnover 1 total
*NT TL2	Non-turnover 2 total
*NT TL3	Non-turnover 3 total
VIP SALES1	VIP1 sale
VIP SALES2	VIP2 sale
VIP SALES3	VIP3 sale
TRANS OUT	Transfer out

Item	Data
TRANS IN	Transfer in
BILL BAL	Transfer out – transfer in
REFUND	Refund
VD	Item void
VOID	Void mode transaction
MGR VD	MGR void
ST VD	Subtotal void
WASTE	WASTE mode transaction
RETURN	Return
***PBAL	PBAL
***NBAL	NBAL
NOSALE	No sale
G.C. CNT	Guest check counter
GUEST	Guest counter
DEPOSIT	Deposit(+)
DEPO.(-)	Deposit(-)
***RA	Received-on-account
***RA2	Received-on-account2
RA –	Discount for received-on-account
RA %	Percent calculation for received-
	on-account
***PO	Paid out
***PO2	Paid out2
SCM (+)	Starting cash memory (+)
SCM (-)	Starting cash memory (-)
SCM TTL	Starting cash memory total
SER.CHRG	Service charge
CASH TIP	Cash tip
NOCA TIP	Non-cash tip
TIP PAID	Tip paid
CASH	Cash
CASH2	Cash2
CASH3	Cash3
CASH4	Cash4

■ Clerk report format (continued)

Item	Data
CASH5	Cash5
CHECK	Check
CHECK2	Check2
CHECK3	Check3
CHECK4	Check4
CHECK5	Check5
CREDIT1	Credit1
CREDIT2	Credit2
CREDIT3	Credit3
CREDIT4	Credit4
CREDIT5	Credit5
CREDIT6	Credit6
CREDIT7	Credit7
CREDIT8	Credit8
CREDIT9	Credit9
CHARGE	Charge
EXCH 1	Exchange 1
DOM.CUR1	Domestic currency 1
EX1 CHK	Exchange 1 paid by check
DOM.CUR CHK	Domestic currency 1 paid by check
EX1 CREDIT	Exchange 1 paid by credit
DOM.CR 1	Domestic currency 1 paid by credit
EXCH 2	Exchange 2
DOM.CUR2	Domestic currency 2

Item	Data
EXCH 3	Exchange 3
DOM.CUR3	Domestic currency 3
EXCH 4	Exchange 4
DOM.CUR4	Domestic currency 4
EXCH 5	Exchange 5
DOM.CUR5	Domestic currency 5
EXCH 6	Exchange 6
DOM.CUR6	Domestic currency 6
EXCH 7	Exchange 7
DOM.CUR7	Domestic currency 7
EXCH 8	Exchange 8
DOM.CUR8	Domestic currency 8
EXCH 9	Exchange 9
DOM.CUR9	Domestic currency 9
***CID	Cash in drawer
*CH ID	Check in drawer
CA/CH ID	Cash check in drawer
CHK/CG	Check change
NBAL GLU	NBAL GLU
FREE GLU	Free GLU
DEPARTMENT	Department printing
PLU	PLU printing
EAN/D-EAN	EAN/Dynamic-EAN printing

■ Hourly report

You can program the memory type and the starting time for the hourly report.

Procedure



Program each item as follows:

MEMORY TYPE (Use the selective entry)

15MIN: Selects the 15-minute type.30MIN: Selects the 30-minute type.60MIN: Selects the 60-minute type.

• START TIME (Use the numeric entry)


Starting time entry (max. 2 digits: 0 to 23)


■ Stacked report

Your POS terminal is equipped with the stacked report printing function that enables multiple X/Z reports to be printed in sequence with a single request.

Procedure

Select a stacked report no. from the stacked reports list.

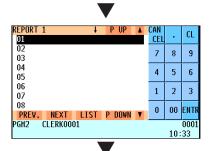

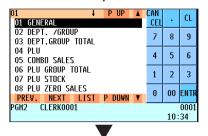

When you are allowed to set the parameter of a report, a parameter setting window like the following one will appear.



You can select a maximum of twenty reports from the stacked reports list. Some reports can be set their parameters such as "START CODE" and "END CODE."

• 01 GENERAL

General report

• 02 DEPT./GROUP (Use the numeric entry)

Full department report

Parameter: Starting department code/ending department code (1 through 99)

03 DEPT.GROUP TOTAL

Full group total report on departments

04 PLU (Use the numeric entry)

PLU report by designated range

Parameter: Starting PLU code/ending PLU code (1 through 999999)

05 COMBO SALES (Use the numeric entry)

Combo sales report

Parameter: Starting PLU code/ending PLU code (1 through 99999)

06 PLU GROUP TOTAL

Full group total report on PLUs

07 PLU STOCK (Use the numeric entry)

PLU stock report

Parameter: Starting PLU code/ending PLU code (1 through 99999)

08 PLU ZERO SALES (Use the selective/numeric entry)

PLU zero sales report

Parameter: 1 ALL/2 BY DEPT.

When "2 BY DEPT." is selected, enter a department code (1 through 99).

• 09 PLU MINIMUM STOCK (Use the numeric entry)

PLU minimum stock report

Parameter: Starting PLU code/ending PLU code (1 through 999999)

10 PLU PRICE CATEGORY (Use the numeric entry)

PLU/EAN by price category

Parameter: Starting price/ending price

• 11 PLU HOURLY GROUP (Use the numeric entry)

PLU hourly group report

Parameter: Starting time/ending time (0 through 2345)

12 TRANSACTION

Transaction report

• 13 TL-ID

Total in drawer report

Stacked report (continued)

• 14 COMMISSION SALES

Commission sales report

• 15 TAX

Tax report

• 16 CHIEF

Chief report

• 17 ALL CLERK

Full clerk report

• 18 ALL CASHIER

Full cashier report

• 19 EMPLOYEE (Use the numeric entry)

Employee report

Parameter: Starting employee code/ending employee code (1 through 999999999)

• 20 EMP. ADJUSTMENT (Use the numeric entry)

Employee adjustment report

Parameter: Starting employee code/ending employee code (1 through 999999999)

• 21 EMP. ACTIVE STATUS (Use the numeric entry)

Employee active status report

Parameter: Starting employee code/ending employee code (1 through 999999999)

• 22 HOURLY (Use the numeric entry)

Hourly report

Parameter: Starting time/ending time (0 through 2345)

NOTE To take the hourly Z report, you have to specify the full-range hourly report.

• 23 LABOR COST%

Labor cost percent report

• 24 EMP. OVER TIME (Use the numeric entry)

Employee over time report

Parameter: Starting employee code/ending employee code (1 through 999999999)

• 25 DAILY NET

Daily net report

• 26 GLU (Use the numeric entry)

GLU report

Parameter: Starting GLU code/ending GLU code (1 through 9999)

27 BALANCE

Balance report

• 28 BILL

Bill report

29 CUSTOMER SALES1 (Use the numeric entry)

Customer sales 1 report

Parameter: Starting customer code/ending customer code (1 through 99999999999)

30 CUSTOMER SALES2 (Use the numeric entry)

Customer sales 2 report

Parameter: Starting customer code/ending customer code (1 through 999999999999)

■ Stacked report (continued)

• 31 CUSTOMER BY AMT (Use the numeric entry)

Customer sales report by amount

Parameter: Starting price/ending price (0 through 99999.99)

• 32 CHARGE ACCOUNT

Charge account report

• 33 NON ACCESSED EAN

Non-accessed EAN report

• 34 NON ACCESSED CUST.

Non-accessed customer report

• 35 CUSTOMER ORDERING (Use the numeric entry)

Customer ordering report

Parameter: Starting customer ordering code/ending customer ordering code (10000000 through 29999999)

Message Programming

Use the following procedure to select any option included in the message group:

Procedure



1. From the SETTING menu, select "12 MESSAGE."

• The MESSAGE menu will appear.



2. Select any option from the following options list:

1 RECEIPT LOGO: Receipt logo 2 FREE TEXT: Free text

3 VP TEXT: Validation printing text

4 SLIP TEXT: Slip text
5 SLIP FOOTER: Slip footer

6 PAYEE NAME: Payee name (for English check)
7 E.BILL MESSAGE: Entertainment bill message

8 SCROLL POLE DISP.: Scrolling message for pole display

The following illustration shows those options included in the text programming group.



■ Receipt logo

Your POS terminal can print programmed messages for customers on every receipt.

The logo text is printed in a centering form on the receipt.

Procedure



Program the item as follows:

• RECEIPT LOGO (Use the character entry)

Logo text for the receipt (max. 30 characters x 6 lines)
Entering sequential characters "=" will print the corresponding clerk name in the footer logo message. Enter 12 characters "=."

NOTE

The programmable number of lines for a message varies according to the following message types:

- · 3-line header message type
- · Graphical logo only type
- · Graphical logo and 3-line footer message type
- 6-line header message type
- · 3-line header and 3-line footer messages type
- 3-line header message, graphical logo, and 3-line footer message type
- Graphical logo and 3-line header and 3-line footer messages type


Please contact your authorized SHARP dealer.

■ Free text

Your POS terminal can print programmed texts for departments, PLUs and EANs on every receipt.

Procedure

Select a pertinent text number from the free texts list.

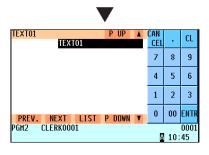

Program the item as follows:


FREE TEXT (Use the character entry)

Free texts for departments and PLUs (max. 99 texts/20 characters per text)

■ Validation printing text

Your POS terminal can print programmed messages for customers on the validation slip.

Procedure

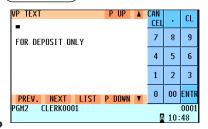

Program the item as follows:


VP TEXT (Use the character entry)

Texts for the validation slip (3 lines/max. 30 characters per line)

■ Slip text

Your POS terminal can print programmed messages for customers on the slip.



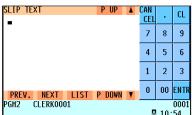

Program the item as follows:

SLIP TEXT (Use the character entry)

Texts for the slip (3 lines/max. 30 characters per line)

■ Slip footer

Your POS terminal can print programmed footer messages for customers on the slip.

Procedure `



Program the item as follows:

SLIP FOOTER (Use the character entry)

Texts for the footer (3 lines/max. 30 characters per line)

■ Payee name

Your POS terminal can print programmed payee names for English checks.

Procedure



Program the item as follows:


PAYEE NAME (Use the character entry)

Name for the payee for English check (2 lines/max. 21 characters per line)

■ Entertainment bill message

Your POS terminal can print programmed entertainment bill messages on the receipt.

Procedure

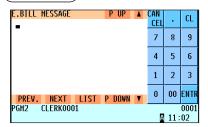

Program the item as follows:

• E.BILL MESSAGE (Use the character entry)

Texts for the message (max. 30 characters)

■ Scrolling message for pole display

Your POS terminal can display programmed scrolling messages on the optional pole display.





Program each item as follows:

• SCROLL POLE DISP. (Use the character entry)

Texts for the scrolling message (max. 64 characters)

Function Key Programming


Use the following procedure to select an option in the function key programming:

Procedure



1. In the SETTING window, select "13 FUNCTION KEY".

• The FUNCTION KEY window will appear.

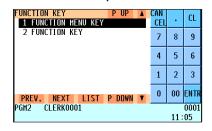

2. Select an option from the following options list:

1 FUNCTION MENU KEY: Function menu key 2 FUNCTION KEY: Function key

The following illustration shows those options included in the function key programming group.

1 FUNCTION KEY 1 FUNCTION MENU KEY 2 FUNCTION KEY

- 1 FUNCTION MENU KEY → See "Function menu key" on page 196.
 - ⇒ See "Function key" on page 198.

^{*} See "Function menu key list" for the function keys assigned to each function menu key by default.

■ Function menu key

You can assign a maximum of 15 function keys to each of the 30 function menu keys. You can also program the display menu titles for each function menu key.

Pressing a function menu key displays its assigned function keys on the keyboard area, allowing you to use those function keys by touching.

Setting function menu key

Procedure




Select a pertinent function menu key from the function menu key list.

The screen continues



2. Select "1 SETTING".

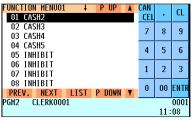


The screen continues

Select a pertinent function key number.

Some function menu keys have the specific function keys allocated to them by default. In this example, the CA2 through CA5 keys are allocated to the Web key. For details of the preprogrammed function keys, refer to "Function menu key list".



The screen continues

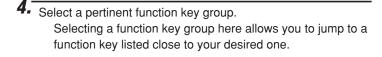

CL 1028 BACK SPACE CFI 1029 DELETE 7 8 9 030 DIFFER ST 031 #/TIME 4 5 6 032 NO SALE 033 SCALE 1 2 3 034 OPEN TARE 035 PLU/EAN ENTI 00 PREV. NEXT LIST P DOWN CLERK0001 0001 11:09

Select a pertinent function key to assign to the function menu key.

■ Function menu key (continued)


Setting menu title

Procedure



Select a pertinent function menu key from the function menu key list.

The screen continues

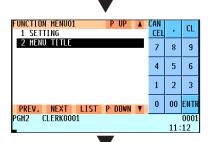

2. Select "2 MENU TITLE".



3. Enter a text for the menu title.

MENU TITLE (Use the character entry)

Text for the menu title

Up to 16 characters can be entered.

Some function menu keys have the preprogrammed title texts corresponding to the function keys allocated to them by default. In this example, the text "CASH#" is preprogrammed for the RND key. For details of the preprogrammed function keys, refer to "Function menu key list".

■ Function key

You can program the display key texts and key colors for each function key.

Procedure



The screen continues

Select a pertinent function key group.

Selecting a function key group here allows you to jump to a function key listed close to your desired one.




UNCTION KEY CL028 BACK SPACE CEL 029 DELETE 7 8 9 030 DIFFER ST 031 #/TIME 4 5 6 032 NO SALE 033 SCALE 1 2 3 034 OPEN TARE 035 PLU/EAN PREV. NEXT PGM2 CLERKOOO1 LIST P DOWN 0001 11:14


The screen continues

Select a pertinent function key.



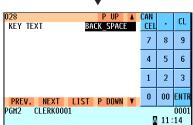

V

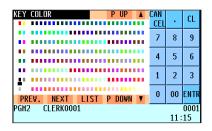

3. Enter a key text and press the will key.

• KEY TEXT (Use the character entry)

Text for the function key

Up to 12 characters can be entered.

By entry of the character "_" the following text is displayed in the second line.

For the default texts of each function key, refer to "Default key text on the display".

4. Select a key color from 232 colors.

■ Function menu key list

Each function menu key $(\frac{RNC}{LOBUJ})$ to $\frac{RNC}{LOBUJ}$ has the following default settings.

Function menu 01 key (FUNC)

	1	
Menu title:	CASH#	
Function key#1:	CASH2	
Function key#2:	CASH3	
Function key#3:	CASH4	
Function key#4:	CASH5	
Function key#5 to 15:	INHIBIT	

Function menu 02 key (FUNC MENUZ)

Menu title:	CR#
Function key#1:	CREDIT1
Function key#2:	CREDIT2
Function key#3:	CREDIT3
Function key#4:	CREDIT4
Function key#5:	CREDIT5
Function key#6:	CREDIT6
Function key#7:	CREDIT7
Function key#8:	CREDIT8
Function key#9:	CREDIT9
Function key#10 to 15:	INHIBIT

Function menu 03 key (MENUS)

Menu title:	CH#
Function key#1:	CHECK
Function key#2:	CHECK2
Function key#3:	CHECK3
Function key#4:	CHECK4
Function key#5 to 15:	INHIBIT

Function menu 04 key (FUNC MENUA)

Menu title:	FUNC MENU
Function kev#1 to 15:	INHIBIT

Function menu 05 key (FUNC)

Menu title:	EXCH#
Function key#1:	EX 1
Function key#2:	EX 2
Function key#3:	EX 3
Function key#4:	EX 4
Function key#5:	EX 5
Function key#6:	EX 6
Function key#7:	EX 7
Function key#8:	EX 8
Function key#9:	EX 9
Function key#10 to 15:	INHIBIT

Function menu 06 key (MENUS)

Menu title:	MISC MENU
Function key#1:	RCPT ON/OFF
Function key#2:	INTERMED.
Function key#3:	BANK CONSOLE
Function key#4:	RA
Function key#5:	RA2
Function key#6:	PO
Function key#7:	PO2
Function key#8:	NO SALE
Function key#9:	E-MAIL
Function key#10 to 15:	INHIBIT

Function menu 07 key (MENUT)

	-) (
Menu title:	CRATE MENU
Function key#1:	CRATE #
Function key#2:	CRATE 1
Function key#3:	CRATE 2
Function key#4:	CRATE 3
Function key#5:	CRATE 4
Function key#6:	CRATE 5
Function key#7:	CRATE 6
Function key#8:	CRATE 7
Function key#9:	CRATE 8
Function key#10:	CRATE 9
Function key#11:	CRATE 10
Function key#12:	CRATE 11
Function key#13:	CRATE 12
Function key#14:	CRATE 13
Function key#15:	CRATE 14

Function menu 08 to 30 key (MENUS) to (MENUS)

Menu title:	FUNCTION MENUxx*
Function key#1 to 15:	INHIBIT

*xx = 08 to 30

Device Configuration Programming

Use the following procedure to select a device configuration programming:

Procedure



- 1. In the SETTING window, select "14 DEVICE CONFIG."
 - The DEVICE CONFIG window will appear.




The screen continues.

2. Select any option from the following options list:


```
01 BUILT-IN PRINTER:
                         Built-in printer
                         Journal printer
02 JOURNAL PRINTER:
                         Receipt printer
03 RECEIPT PRINTER:
04 SLIP PRINTER:
                         Slip printer
05 KP#1:
                         Remote printer #1
06 KP#2:
                         Remote printer #2
07 KP#3:
                         Remote printer #3
                         Remote printer #4
08 KP#4:
09 KP#5:
                         Remote printer #5
10 KP#6:
                         Remote printer #6
                         Remote printer #7
11 KP#7:
12 KP#8:
                         Remote printer #8
                         Remote printer #9
13 KP#9:
14 BCR (SCANNER):
                         Scanner
15 SCALE:
                         Scale
                         On-line
16 ONLINE:
17 POLE DISPLAY:
                         Pole display
```

The following illustration shows those options included in the device configuration programming group.

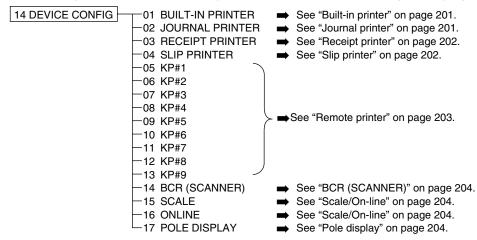

■ Built-in printer

Procedure

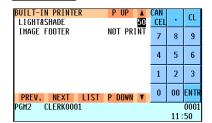

Program each item as follows:

LIGHT&SHADE (Use the numeric entry)

Select a light and shade level. (00 to 99)

75% for standard100% <standard>125% for standard

• IMAGE FOOTER (Use the selective entry)

PRINT: Prints footer graphic logo.

NOT PRINT: Does not print footer graphic logo.

Journal printer

Procedure



Program each item as follows:

• TERMINAL# (Use the numeric entry)

Terminal number (1 through 254 : Enter "0" for local device.)

• CHANNEL# (Use the numeric entry)

Channel number (1 through 7)
When you program as "0", no RS-232 channel is assigned.

• PRINTER (Use the selective entry)

Select the printer to be used from the following:

TM-T88(3)/T88(4)

TM-U220/230


EJ FILE (Electronic journal file)

BUILT-IN(810) (Built-in printer)

BUILT-IN(820) (Built-in printer)

■ Receipt printer

Procedure

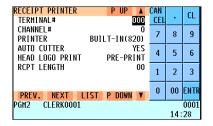

Program each item as follows:

TERMINAL# (Use the numeric entry)

Terminal number (1 through 254 : Enter "0" for local device.)

CHANNEL# (Use the numeric entry)

Channel number (1 through 7)

When you program as "0", no RS-232 channel is assigned.

• PRINTER (Use the selective entry)

Select the printer to be used from the following:

TM-T88(3)/T88(4)

TM-U220/230

TM-T88(3)(4)+LOGO

BUILT-IN(810) (Built-in printer)

BUILT-IN(820) (Built-in printer)

AUTO CUTTER (Use the selective entry)

Auto cutter function

YES: Enables auto cutter function. NO: Disables auto cutter function.

HEAD LOGO PRINT (Use the selective entry)

Select a header logo print timing.

EACH ISSUE: The logo will be printed on the receipt just after

the current transaction is finalized.

PRE-PRINT: The logo will be printed beforehand on the next


receipt when the current transaction is finalized.

RCPT LENGTH (Use the numeric entry)

Minimum length for bill on receipt (0 to 30)

■ Slip printer

Procedure

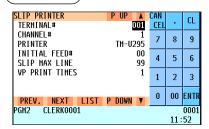

Program each item as follows:

TERMINAL# (Use the numeric entry)

Terminal number (1 through 254: Enter "0" for local device.)

CHANNEL# (Use the numeric entry)

Channel number (1 through 7)

When you program as "0", no RS-232 channel is assigned.

PRINTER (Use the selective entry)

Select the printer to be used from the following:

TM-T88(3)/T88(4)

TM-U220/230

TM-U295

TM-T88(3)(4)+LOGO

• INITIAL FEED# (Use the numeric entry)

Initial line feed for a slip (0 to 64 lines)

SLIP MAX LINE (Use the numeric entry)

Maximum number of lines printable on a slip (0 to 99)

VP PRINT TIMES (Use the numeric entry)

Number of times of validation printing (0 to 9)

■ Remote printer (KP#1 through KP#9)

Procedure

KP#1	1	P UP	<u> </u>	CAN		CL
TERMINAL#			000	CEL		
CHANNEL#			0	7	8	9
PRINTER	TM-T88	(3) /T88	(4)	,	٥	3
AUTO CUTTER			YES	4	5	6
PRINT TYPE		ADDIT	ION	4	J	0
SECOND KP			0	4	1	3
NAME				1	2	3
INITIAL FEED#			00	_	00	CHIE
PREV. NEXT	LIST	P DOWN	Ŧ	0	00	ENTR
PGM2 CLERK0001 0001						
11:54						

The screen continues.

Program each item as follows:

TERMINAL# (Use the numeric entry)

Terminal number (1 through 254 : Enter "0" for local device.)

CHANNEL# (Use the numeric entry)

Channel number (1 through 7)

When you program as "0", no RS-232 channel is assigned.

PRINTER (Use the selective entry)

Select the printer to be used from the following:

TM-T88(3)/T88(4)

TM-U220/230

BUILT-IN(810) (Built-in printer)

BUILT-IN(820) (Built-in printer)

AUTO CUTTER (Use the selective entry)

Auto cutter function

YES: Enables auto cutter function. NO: Disables auto cutter function.

• PRINT TYPE (Use the selective entry)

Select the type of receipt print formats.

ADDITION: Addition

Single/Double S/D: ADD.+S: Addition + Single D ADD.: Double addition

D ADD+S: Double addition + Single

SECOND KP (Use the numeric entry)

You can assign a second remote printer to which data should be output when the first remote printer encounters an error during transmission of the data.

Second remote printer number (0 to 9)

NAME (Use the character entry)

Description for the remote printer (max. 12 characters)

INITIAL FEED# (Use the numeric entry)

Initial line feed for a remote printer (0 to 64)

SORT RCPT. CUTTING (Use the selective entry)

Sort receipt cutting between each sort group

YES: Enables sort receipt cutting.

NO: Disables sort receipt cutting.

SEQUENTIAL PRINT (Use the selective entry)

Sequential print from sort group 1 except header and footer

YES: Enables sequential print. NO: Disables sequential print.

■ BCR (SCANNER)

Procedure



Program each item as follows:

CHANNEL# (Use the numeric entry)

Channel number (0 through 7)

When you program as "0", no RS-232 channel is assigned.

• BAUD RATE (Use the selective entry)

Transmission speed (baud rate) 19200 bps/9600 bps/4800 bps

• DATA BITS (Use the selective entry)

Data bit: 7 bits/8 bits

PARITY (Use the selective entry)

Parity bit: NON/ODD/EVEN

STOP BIT (Use the selective entry)

Stop bit: 1 bit/2 bits

■ Scale/On-line

Procedure



Program each item as follows:


CHANNEL# (Use the numeric entry)

Channel number (1 through 7)

When you program as "0", no RS-232 channel is assigned.

■ Pole display

Procedure

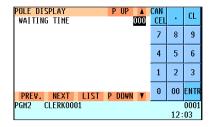

Program each item as follows:

WAITING TIME (Use the numeric entry)

Waiting time until the message is displayed on the pole display (1 to 999)

When you program as "0", no message is displayed.

Tax Programming


Use the following procedure to select any option included in the tax group:

Procedure



From the SETTING menu, select "15 TAX."

• The TAX menu will appear.

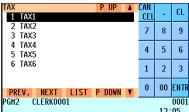


2. Select any option from the following options list:

1 TAX1: Tax 1 2 TAX2: Tax 2 3 TAX3: Tax 3 4 TAX4: Tax 4 5 TAX5: Tax 5 6 TAX6: Tax 6



If the DEL key is pressed on the tax number selection menu, the tax rate in the cursor position will be deleted.

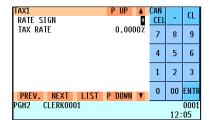

- **3.** Program each item as follows:
- RATE SIGN (Use the selective entry)
 - -: Minus rate
 - +: Plus rate
- TAX RATE (Use the numeric entry)

Tax rate (max. 7 digits: 0.0000 to 999.9999%)

Customer Programming


Use the following procedure to select any option included in the customer programming group:

Procedure



1. In the SETTING window, select "16 CUSTOMER".

• The CUSTOMER menu will appear.

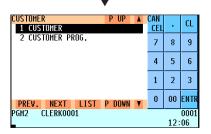

2. Select an option form the following option list:

1 CUSTOMER: Customer code


2 CUSTOMER PROG.: Customer programming

The following illustration shows those options included in the customer programming group.

1 CUSTOMER 2 CUSTOMER PROG.

- ⇒ See "Customer code" on page 206.
- ⇒ See "Customer programming" on page 207.

Customer code

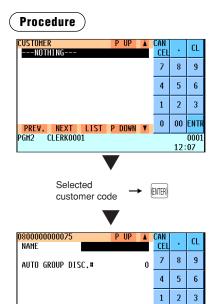


PREV. NEXT LIST P DOWN PGM2 CLERKOOO1 00 ENTI

0001 12:07 Program each item as follows:

- NAME (Use the character entry)
 Enter a customer's name (max. 16 characters)
- ADDRESS (Use the character entry)
 On the second line, enter the customer's address (max. 40 characters)
- AUTO GROUP DISC.# (Use the numeric entry)
 Automatic group discount number (0 to 10)

Customer programming

Procedure

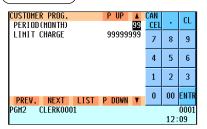

Program each item as follows:

• PERIOD(MONTH) (Use the numeric entry)

Preset a period to delete customer detail data. Enter the period in a unit of month. (01 to 99) If you enter "00", the customer detail data will not be deleted.

• LIMIT CHARGE (Use the numeric entry)

Limit of charge amount (max. 8 digits: 0 to 99999999)

NOTE

If the following condition is satisfied, its code is deleted using the deleting operation.

Date of the deleting (Year, Month) \geq Date of the last access (Year, Month) + programmed period + 1 [Ex.] Date of the deleting = (1 to 31)/8/2008, Period = 12 months:

Customer	Date of the last access		
Customer A	((1 to 30)/6/2007)	\rightarrow	Deleted
Customer B	((1 to 30)/7/2007)	\rightarrow	Deleted
Customer C	((1 to 30)/8/2007)	\rightarrow	Kept intact

Order Mask Programming

Use the following procedure to select an option in the order mask programming:

Procedure



- 1. In the SETTING window, select "17 ORDER MASK".
 - The ORDER MASK window will appear.



2. Select an option from the following options list:

1 BRANCHES: Branches
2 TRANSFER MASK: Transfer mask

The following illustration shows those options included in the order mask programming.


17 ORDER MASK 1 BRANCHES 2 TRANSFER MASK

- ⇒ See "Branch programming" on page 208.
- → See "Transfer mask programming" on page 209.

■ Branch programming

You can program branch numbers and branch texts for article order masks.

Procedure

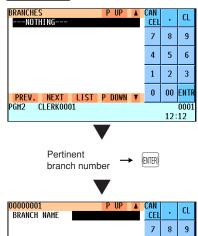

PREV. NEXT LIST P DOWN PGM2 CLERKOOO1


> 0001 12:12

- BRANCHES (Use the numeric entry)
 Branch number (max. 8 digits: 1 to 99999999)
- BRANCH NAME (Use the character entry)
 Branch name
 Up to 16 characters can be entered.

■ Transfer mask programming

You can specify a mask no. to be used as stock transfer.

Procedure

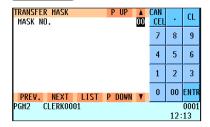


MASK NO. (Use the numeric entry)
 Mask number (max. 2 digits: 6 to 25)

Backup Data Send Programming

Use the following procedure to select the menu option "18 BACKUP SEND":

Backup data send

Your POS terminal can send data to another device by RS232 (channel 2).

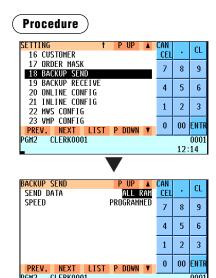

Program each item as follows:

SEND DATA (Use the selective entry)

Select one of the following options (data sources):

SSP

SPEED (Use the selective entry)

Select one of the following options (data transmission speeds):

PROGRAMMED: Sends data at a programmed speed.

38400bps: Sends data at 38400 bps. 19200bps: Sends data at 19200 bps. Sends data at 9600 bps. 9600bps: 4800bps: Sends data at 4800 bps. 2400bps: Sends data at 2400 bps.

Backup Data Receive Programming

0001 12:14


Use the following procedure to select the menu option "19 BACKUP RECEIVE":

Backup data receive

CLERK0001

Your POS terminal can receive data from another device by RS232 (channel 2).

12:16

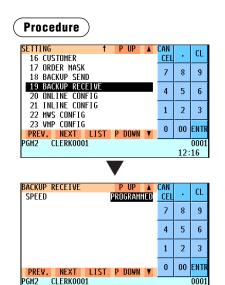

Program each item as follows:

SPEED (Use the selective entry)

Select one of the following options(data transmission speeds):

PROGRAMMED: Receives data at a programmed speed.

38400bps: Receives data at 38400 bps. 19200bps: Receives data at 19200 bps. Receives data at 9600 bps. 9600bps: 4800bps: Receives data at 4800 bps. 2400bps: Receives data at 2400 bps.

On-line Configuration Programming


Use the following procedure to select the on-line configuration programming. Please consult your dealer for more details.

Procedure



In the SETTING window, select "20 ONLINE CONFIG".

• The ONLINE CONFIG window will appear.

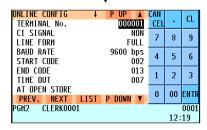

2. Program each item as follows:

• TERMINAL No. (Use the numeric entry)

Terminal number (0 to 999999).

CI SIGNAL (Use the selective entry)

Sensing of the CI signal NON

SENSING

LINE FORM (Use the selective entry)

Programming of the modem control

FULL: Full duplex system HALF: Half duplex system

BAUD RATE (Use the selective entry)

Transmission data rate

38400 bps 19200 bps 9600 bps

4800 bps 2400 bps

START CODE (Use the numeric entry)

Start code (0 to 127)

• END CODE (Use the numeric entry)

End code (0 to 127)

TIME OUT (Use the numeric entry)

Programming of the time-out time (1 to 255 sec.)

AT OPEN STORE (Use the characteristic entry)

Description sent on AT command at the open store operation. Up to 50 characters can be entered.

AT CLOSE STOR (Use the characteristic entry)

Description sent on AT command at the close store operation. Up to 50 characters can be entered.


PRICE Mode Programming

The PRICE mode programming is mainly used for daily changes of the PLU/EAN's unit price by a supervisor or manager.

Procedure




- 1. Select "5 PRICE MODE" from the mode selection window.
 - The PLU/EAN list will appear.

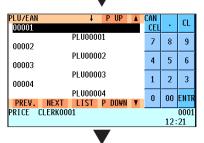

2. Select a PLU/EAN code from the list

authorized SHARP dealer.

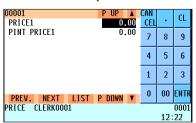

- 3. Program a unit price for the corresponding price level.
- PRICE1 through 8 (Use the numeric entry)
 Unit price of each price level (max. 6 digits)
 By default, only a price for PRICE1 can be entered. If you want to enter a price for PRICE2 through 8, contact your
- PINT PRICE1 through 8 (Use the numeric entry)
 Pint price of each price level (max. 6 digits)
 By default, only a price for PINT PRICE1 can be entered. If you want to enter a price for PINT PRICE2 through 8, contact your authorized SHARP dealer.

Automatic Sequencing Key Programming


Just one press of an automatic sequencing key enables you to perform a set of frequently used key operations that are assigned to the automatic sequencing key. There are a maximum of 99 automatic sequencing keys available. You can also assign a maximum of 15 automatic sequencing keys to each of the 6 AUTO menu keys. Pressing an AUTO menu key opens a menu window to select the assigned automatic sequencing keys.

Auto menu programming


Setting auto menu

Procedure

Select "8 AUTO KEY MODE" from the mode selection window.

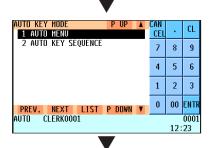


Select "1 AUTO MENU".

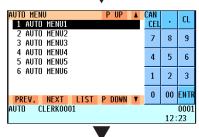

2. Select a pertinent AUTO menu key.



3. Select "1 SETTING".

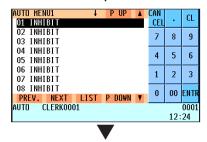

4. Select a pertinent key number.

■ Auto menu programming (continued)




The screen continues.

5. Select a pertinent automatic sequencing key from "AUTO" to "AUTO 99" to assign to the AUTO menu key.

Setting menu title

Procedure

Repeat the procedure 1 - 2 for "Setting auto menu" on the previous page.

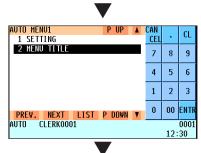

1. Select "2 MENU TITLE".



2. Enter a menu title.

MENU TITLE (Use the character entry)
 Menu title for the AUTO menu key


Up to 16 characters can be entered.

214


■ Auto key sequence programming

Procedure


Select "8 AUTO KEY MODE" from the mode selection window.

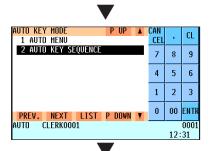

- 1. Select "2 AUTO KEY SEQUENCE".
 - The AUTO KEY SEQUENCE list is displayed on the main display area.
 - The keyboard is displayed on the keyboard area.

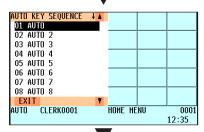


2. Select a pertinent automatic sequencing key from the AUTO KEY SEQUENCE list.

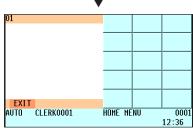

Enter the desired key operations to assign to the automatic sequencing key.



- If a function menu key is entered, the currently displayed keys are replaced by the assigned function keys.
- PLU menu keys and AUTO menu keys cannot be entered.

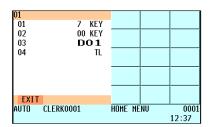

4. Touch the EXIT key at the lower left of the window to finalize the programming.

SD CARD Mode

In the SD CARD mode, you can save and load the data of your POS terminal to and from an SD card for various purposes. The types of data available in this mode are as follows:

- · Sales data
- · Electronic journal data
- T-LOG data
- · Programming data
- · All RAM data
- Customer name list

Use the following procedure to operate in the SD CARD mode.

Installing SD card




- **1.** Push the part of the SD card slot cover indicated by the arrow to open the cover.
 - * To close the cover, push the arrowed part in until you hear it click.




- 2. Insert the SD card into the slot.
 - * To remove the SD card, push it again, and it comes out of the slot.

Procedure

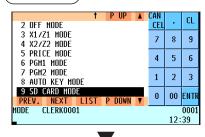


1. Select "9 SD CARD MODE" in the mode selection window.

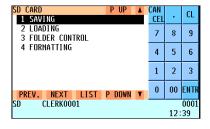

2. Select a pertinent operation.

In each menu of this mode, you can perform the following operations:

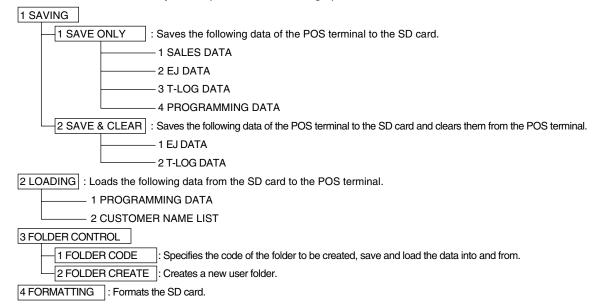

NOTE

- For details, please consult your authorized SHARP dealer.
- To save or load all RAM data, please consult your authorized SHARP dealer.
- This model supports SD cards only. Use of any other types of SD cards such as miniSD, microSD, etc. with an adapter is not supported.
- Do not turn the POS terminal off when it is accessing the SD card. The data in the card may be broken.
- Formatting the SD card erases all the data in it.

Reading of Stored Programs

You can read programs stored in the PGM1 or PGM2 mode.

■ Program reading sequence

To read those programs stored in the PGM1 or PGM2 mode, use the following procedure:

- Select the PGM1 or PGM2 mode.
- 2. Select "1 READING" from the PGM1 or PGM2 mode menu to display the items list.
- 3. Select an item listed in the table shown later.
- 4. Where "RANGE" and/or "PICK UP" are displayed on the screen, select either option. Select "RANGE" to read program by range, and "PICK UP" to read program by picking up codes. The procedure to specify a range or to pick up codes are the same as the one in sales report.
 On the table, for the item you can specify a range, "*1" is indicated, and for the item you can pick up codes, "*2" is indicated.

	Item:	Description:	Available mode:
1	DEPT *1	Department	PGM1 or PGM2
2	PLU/EAN *1*2	PLU/EAN	PGM1 or PGM2
3	DYNAMIC EAN *1*2	Dynamic EAN	PGM1 or PGM2
4	LINK PLU/EAN TABLE *1	Link PLU table	PGM2
5	COMBO MEAL *1	Combo meal	PGM2
6	CONDIMENT TABLE *1	Condiment table	PGM2
7	EAN PLU CONVERT *1	EAN-to-PLU converting table	PGM2
8	ITF PLU CONVERT	ITF-to-PLU converting table	PGM2
9	CRATE TABLE *1	Crate table	PGM2
10	PROMOTION TABLE *1	Promotion table	PGM2
11	EAN OTHERS	EAN other functions	PGM2
12	PLU INFORMATION *1	PLU information text	PGM2
13	PLU MENU KEY	PLU menu key	PGM2
14	SCALE TABLE	Scale table	PGM2
15	HAPPY HOUR	Happy hour	PGM2
16	FUNCTION GROUPS	Function groups	PGM1 or PGM2
17	MEDIA	Media key	PGM2
18	TRAINING TEXT/CLK	Training text/clerk	PGM2
19	CLERK	Clerk	PGM1 or PGM2
20	CASHIER	Cashier	PGM1 or PGM2
21	MANAGER	Manager	PGM2
22	EMPLOYEE *1	Employee	PGM2
23	WORKING TIME SHIFT	Working time shift	PGM2
24	JOB LOCATE TBL	Job location table	PGM2
25	CONTACTLESS KEY	Contactless key (only display)	PGM2
26	OPTIONAL	Optional features	PGM2
27	REPORT	Report	PGM2
28	FUNCTION TEXT	Function text	PGM2
29	FUNCTION KEY	Function key	PGM2
30	FUNCTION MENU KEY	Function menu key	PGM2

Item:	Description:	Available mode:
31 DEPT. GROUP	Department group	PGM2
32 PLU GROUP	PLU group	PGM2
33 PLU HOURLY GROUP	PLU hourly group	PGM2
34 MESSAGE	Message	PGM2
35 TAX	Tax	PGM2
36 AUTO MENU	Auto menu	PGM2
37 AUTO KEY SEQUENCE	Auto key sequence	PGM2
38 CUSTOMER *1	Customer	PGM2
39 CUSTOMER PROG.	Customer control	PGM2
40 BRANCHES *1	Branches	PGM2
41 TRANSFER MASK	Transfer mask	PGM2
42 DEVICE CONFIG	Device configuration	PGM2
43 DIRECT KEY	Direct key	PGM2
44 ONLINE CONFIG	On-line configuration	PGM2
45 INLINE CONFIG *3	In-line configuration	PGM2
46 MWS CONFIG	MWS configuration	PGM2
47 VMP CONFIG	VMP configuration	PGM2
48 ROM VERSION	ROM version	PGM2

^{*3} The sub-menus "INLINE PRESET" and "SIGN ON CLERK" appear after "INLINE CONFIG" is selected.

13 Electronic Journal/Data Clear

■ Electronic journal

This function is intended to record the journal data in the electronic journal file (memory) instead of journal paper. For details, contact your authorized SHARP dealer.

· Recording data

The POS terminal records the printing output to the journal printer in REG, PGM1, PGM2, X1/Z1, and X2/Z2 modes into the electronic journal file.

Reporting (X report)

The POS terminal reports the journal data (same as normal journal formats) in the electronic journal file by the report printer or the display.

Operation: Select the reading operation "E.JOURNAL" in X1/Z1 or OPXZ (only printing) mode.

It is possible to use filter functions (consecutive no./date/time/clerk code).

C.C. No. (Consecutive no.): ALL or RANGE (designate start no./end no.)

DATE (Date): ALL or RANGE (designate start date/end date)

TIME (Time): ALL or RANGE (designate start time/end time)

CLERK (Clerk code): ALL or INDIVIDUAL (designate clerk code)

Resetting (Z report)

It is possible to take the resetting report of the journal data in the electronic journal file by the report printer.

Operation: Select the resetting operation "E.JOURNAL" in X1/Z1 or OPXZ mode.

The filter functions (consecutive no./date/time/clerk code) can not be used.


Data clear

Use the following procedure to perform the data clear operation.





- 1. In the PGM2 MODE window, select "4 DATA CLEAR".
 - The DATA CLEAR window will appear.

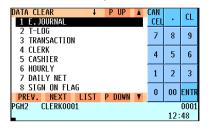

Select the pertinent operation.

4 European Article Number (EAN) or **Universal Product Code (UPC)**

■ EAN or UPC code

Your machine can transact the following codes:

- UPC-A (Number system character: 0, 2, 3, 4) UPC-F
- Internal code EAN-8/EAN-13 • EAN-8 • EAN-13


For the codes used in-store marking, there are two types of PLU type (treated as a code like PLU code) and Non-PLU type (price/quantity information is included in the code).

When a code is non-PLU type, the price/quantity in the code is read for sales entry (in case of quantity, "quantity multiplys preset unit price" is processed to obtain price.)

UPC-A


- Number system character: 0 < used in the source marking>
- Number system character: 3 < used as NDC or HRI>

For entry, a full 12 digits number or 11 digits number (omitting the check digits) must be entered.

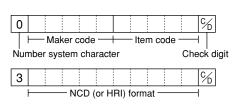

- Number system character: 2 < In-store marking Non-PLU type> You can program the format in "EAN NON-PLU" in ARTICLE setting.
- Number system character: 4 < In-store marking PLU type>

For entry, a full 12 digits number, 11 digits number (omitting the check digit), or a leading zero plus 12 digits number must type code is printed like 2020008**** (****: price information).)

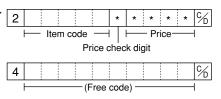

be entered.(Any numbers are allowed for the digits marked with *, and on the receipt/journal, non-PLU

UPC-E


 UPC-E is a zero-suppressed version of UPC-A that conforms to the UPC-E Standards. This code is used for marking small package.



For entry, a 6 digits number or a leading zero plus 6 digits number must be entered.

EAN-8


• Ordinary EAN-8 code (flag: neither 0 nor 2) < used in the source marking>

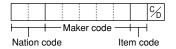


For entry, a full 8 digits number must be entered.

- Internal code (flag 2) <in-store marking non-PLU short type> Program the format in "EAN NON-PLU" in ARTICLE setting.
- Internal code (flag 0) <in-store marking PLU short type>


For entry, a full 8 digits number must be entered. On the receipt/journal, non-PLU type code is printed like 208**** (****: price/quantity information)

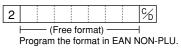

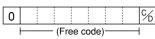


EAN-13

- Ordinary EAN-13 code (used in the source marking)
- Specific EAN-13 code (flag 977, 978, 979) (used in the source marking: ISBM, ISSN)

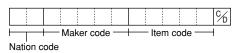

For entry, you must enter a full of 13 digits number.

 Internal code (used in the in-store marking, the flag character number: 20 through 29 and 02)
 Program the format in "EAN NON-PLU" in ARTICLE setting.

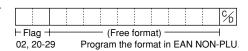

• EAN press code (used for press articles)

For a press article, you must use a 13 digits number EAN code plus a 2-digit or 5-digit add-on code, though your register can register 13 digits number EAN code without an add-on code.

NOTE

The format for press articles is decided unique by each country. For the formats for other countries than the ones shown below, please ask your authorized SHARP dealer.


German type 2

(EURO code - The price is coded in EURO from January 2002)
Currency for price is EURO.




United Kingdom

Currency for price is GBP.

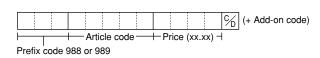


France

Currency for price on the prefix code 378 is EURO, and 379 is FFr. (The price is converted automatically according to EURO status.)

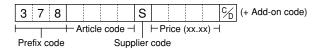

Sweden

Currency for price is SKr.

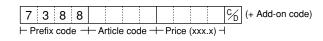



- The availability of these press codes on your register depends on the programming.
- Since the price in a press code is read for sales entries, and the currency is decided by the code, note that the code you enter for sales matches your domestic currency.

Add-on code

UPC-A and EAN-13 may be followed by a two digits number or a five digits number as add-on code, excepting UPC-A without a check digit plus two or five digits add-on code.

Therefore, the total number of digits enterable for sales entries are as shown below:

Code entry	No add-on code	2-digit add-on code	5-digit add-on code
UPC-A	12	14	17
UPC-A w/leading zero	13	15	18
UPC-A w/o check digit	11	_	-
UPC-E	6	_	-
EAN-8	8	-	-
EAN-13	13	15	18



Your register automatically judges the add-on code in an EAN code entered from the total number of digits and the flag.

■ EAN file

Your POS terminal has an EAN main file and can provide a Dynamic EAN (D-EAN) file.

EAN main file

In general use, all EAN items are managed in the EAN main file.

The programming data and sales information is recorded in the EAN main file.

Dynamic EAN file

If an dynamic EAN file is allocated, the items entered by EAN learning function (refer to "EAN learning function" section.) are saved in this file temporarily. (If not generated, they are directly saved in the EAN main file.) The data saved temporarily can be transferred to the EAN main file when necessary by executing D-EAN LOAD in the PGM2 mode.

If you want to use the dynamic EAN file, consult your authorized SHARP dealer.

15 EURO Migration Function

Basically your POS terminal can be automatically modified to correspond to the introduction of EURO by executing the operation "EURO STATUS" in X2/Z2 mode. However, there are several options you must set depending on your need. So, please carefully conduct necessary settings. For details, contact your authorized SHARP dealer.

EURO status:

You can select status from following 4 types ((A), (B), (C), or (D)). And the selectable type is decided as follows for each status. Type (A) is the base status (initial status).

From type (A) ————	selectable ———	→ Type (B), (C), or (D)
From type (B) ———	selectable	→ Type (C), (D)
From type (C)———	selectable	→ Type (D)

Items	Type (B)	Type (C)	Type (D)
General Z1 report	ISSUE	ISSUE	ISSUE
General Z2 report	ISSUE	ISSUE	ISSUE
GT1/GT2/GT3 memory	_	CLEAR	CLEAR
Exchange1 amount printing for total and change	YES	YES	NO
Exchange1 amount printing for total validation print	YES	YES	NO
Exchange1 calculation method	DIVISION	MULTI	MULTI
Domestic currency symbol	_	[EURO]	[EURO]
Domestic TAB	_	2	2
Conversion of preset prices of Dept./PLU/EAN*	_	YES	YES
Exchange1 currency descriptor	[EURO]	The current domestic currency symbol	_
Exchanger1 TAB	2	The current domestic TAB	_

The marked items "—" is remaining the current data.

^{*:} The preset rate of the [EXI] key is applied as the conversion rate, and the calculation method is set to "division". When the conversion has been made, the message "PRICE CONVERTED" is printed on the report.

Setting the date and time when the automatic EURO modification operation should be executed

To certainly execute the automatic modification operation, you can program the scheduled date and time to execute the automatic EURO modification operation. From ten days before the preset date, the remaining days are printed at the bottom of the daily full resetting report.

****CID	*13644.62
*CHECK ID	*140.85
CA/CHK ID	*13785.47
CHK/CG	¥7. 30
EURO START	
01/07/2009 0:00	
DAYS TO EURO	<10>

Date and time setting will be reset after the execution of automatic modification operation, and again you can program the date and time for the next automatic modification operation.

Also you can make the automatic EURO modification operation compulsory. When the above-mentioned preset date and time has come, and also when you start an entry in the REG/MGR mode, the error message "EURO CHANGE ENTRY COMPULSORY" will be displayed. You cannot start any operation in the REG/MGR mode until you make the operation.

Automatic EURO modification operation

- 1. Select the X2/Z2 mode.
- 2. Select "8 EURO STATUS" from the menu.
- 3. Select the status you want to set (B, C or D) referring to the table on the previous page. Press the key to toggle the options.

Please note that once you set a status, you cannot return to the previous status(es).

Important note

As for the miscellaneous keys, such as <a> and <a> keys, and for the HALO setting, the automatic conversion will not be made. You need to change the % rates or amounts in the PGM1/PGM2 mode after the execution of the automatic modification operation for EURO so that they are based on amounts in EURO.



It is executed some of following operation which is needed for each status.

(1) Issue general Z1 report. (2) Issue general Z2 report. (3) Clear GT1/GT2/GT3. (4) Change PGM function "Total and change amount printing — With foreign/Domestic only". (5) Change PGM function "Exchange1 amount printing for total validation print — YES/NO" and "Total validation print amount printing — With foreign/Domestic only". (6) Change PGM function "Exchange1 calculation method — Division/Multiplication". (9) Change PGM function "Converting the preset unit prices of departments/PLUs/EANs to the ones in EURO currency - YES/NO. (10) Set "Exchange1 currency descriptor" as the suitable data. (11) Set "Exchange1 TAB as the suitable

NOTE

This job cannot set the following additional EURO function. You must set the following items by each programming after executing the automatic EURO modification operation.

- (1) Exchange1 rate, (2) "Check, Credit operation for Exchange1 YES/NO"
- (3) Foreign currency drawer number (if installed)

Also when you are using any of the EX2 through EX9 keys, you must change these rates.

16 Operator Maintenance

In Case of Power Failure

When power is lost, the POS terminal retains its memory contents and all information on sales entries.

- When power failure is encountered in POS terminal idle state or during an entry, the POS terminal returns to the normal state of operation after power recovery.
- When power failure is encountered during a printing cycle, the POS terminal prints "======" and then carries out the correct printing procedure after power recovery. (See the sample print.)

1× 1.00 PLU00001	* 1.00
1x 2.00 PLU00002	*2.00
= = = = = = = = = = = = = = = = = = =	= = = = = = = = = *3.00
CASH	* 6. 00

In Case of Printer Error


If the printer runs out of paper, the printer will stall, and "PAPER EMPTY" will appear on the display. Key entries will not be accepted. Referring to "Installing and Removing the Paper Roll" in this chapter, install a new paper roll in the proper position, then press the CL key. The printer will print the power failure symbol and resume printing.

If the print head comes up, the printer stalls, and "HEAD UP" will appear on the display. Key entries will not be accepted. Bring back the print head to the correct position, then press the CL key. The printer will print the power failure symbol and resume printing.

Thermal Printing

Your POS terminal prints by means of thermal printing. The print head applies heat to thermal paper which is chemically treated to change color when heated to a certain level. This creates the printed text.

Cautions in handling the printer

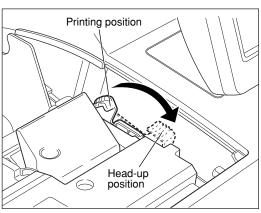

 If you are not going to use the POS terminal for an extended period of time, pull the print head release lever toward you so that the print head is set apart from the plate. · Avoid the following environments:

Dusty and humid places

Direct sunlight

Iron powder (A permanent magnet and electromagnet are used in this machine.)

- Use the print head release lever only when necessary.
- Never pull the paper when it is in contact with the print head. First release the head with the print head release lever, and then remove the paper.
- Never touch the surface of the print head.
- Never touch around the print head and the motor during printing or before they have had sufficient time to cool.

■ Cautions in handling the recording paper (thermal paper)

- · Use only the paper specified by SHARP.
- Do not unpack the thermal paper until you are ready to use it.
- Avoid heat. The paper will color at around 70°C.
- Avoid dusty and humid places for storage. Avoid direct sunlight.
- The printed text on the paper can discolor under the following conditions:

Exposure to high humidity and temperature

Exposure to the direct sunlight

Contact with glue, thinner or a freshly copied blueprint.

Heat caused by friction from scratching or other such means.

Contact with a rubber eraser or adhesive tape.

• Be very careful when handling the thermal paper. If you want to keep a permanent record, copy the printed text with a photocopier.

Installing and Removing the Paper Roll

■ Recording paper specifications

Be sure to use paper rolls specified by SHARP.

The use of any other paper rolls than specified could cause paper jamming, resulting in POS terminal malfunction.

Paper specification

Paper width: $57.5 \pm 0.5 \text{ mm}$

Max. outside diameter: 80 mm

Quality: Thermal paper Paper tube: 18 mm


• Be sure to set paper roll(s) prior to using your machine, otherwise it may cause a malfunction.


Install the paper roll in the printer. Be careful then to set the roll and cut the paper end correctly.

NOTE

If the top end of the paper roll is fixed with paste or tape, the paper may lose its color development ability in the pasted or taped area due to the deterioration of the heat-sensitive color development component of the paper surface. This may result in nothing appearing at this location when printing is performed. Therefore, when setting a new paper roll in the machine, be sure to cut off approximately one revolution (approx. 25 cm long).


(How to set the paper roll)

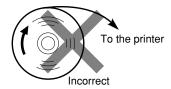

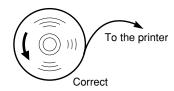


(How to cut the paper end)



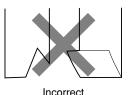


Installing the paper roll

Installing the receipt paper roll

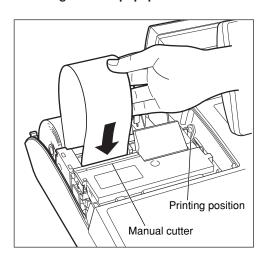

- Select the REG mode after connecting the AC cord and turning on the POS terminal.
- **2.** Remove the printer cover.
- **3.** Check that the print head release lever is in its printing position.
- **4.** Set the paper correctly as illustrated above in the paper roll location (receipt side) of the printer.
- 5. Insert the end of the paper into the paper chute as shown on the left. It will automatically be fed through the printer.
- **6.** Cut off the excess paper that comes out of the printer with the manual cutter.
- **7.** Replace the printer cover.

Installing the journal paper roll

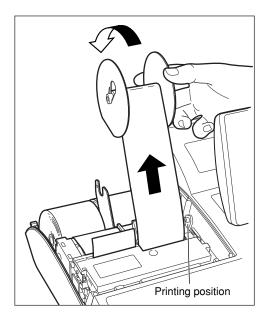


- **1.** Select the REG mode after connecting the AC cord and turning on the POS terminal.
- **2.** Remove the printer cover.
- **3.** Check that the print head release lever is in its printing position.
- **4.** Set the paper correctly as illustrated on the previous page in the paper roll location (journal side) of the printer.
- **5.** Insert the end of the paper into the paper chute. It will automatically be fed through the printer.
- 6. Insert the end of the paper into the slit in the paper takeup spool. (Press the key to feed more paper through if required.)
- 7. Wind the paper two or three turns around the spool shaft as shown on the left.
- 8. Set the spool on the bearing.
- **9.** Replace the printer cover.
- When you want to manually install a new roll of paper while your machine is turned off, follow the steps shown below:
 - **1** Pull the print head release lever toward you to lift up the print head.
 - 2. Correctly place the new paper roll into the receipt/journal paper roll location.
 - **3.** Insert the paper end into the paper chute until it comes out of the printer.
 - **4.** Cut or roll the paper onto the take-up spool as described for automatic installation.
 - **5.** Return the print head release lever to its original position.

■ Removing the paper roll

When a red dye appears on the paper roll, it is time to replace the existing paper roll. Replace the paper roll with a new one. If you plan not to use your POS terminal for an extended period of time, remove the paper roll, and store it in the appropriate place.


Removing the receipt paper roll

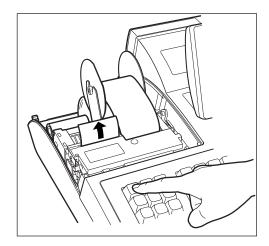


- **1.** Remove the printer cover.
- 2. Cut the paper behind the printer and near the paper roll.
- **3.** Press the key until the paper remaining in the printer comes out completely.
- **4.** Remove the paper roll from the back of the printer.

NOTE Do not pull the paper through the printer.

Removing the journal paper roll

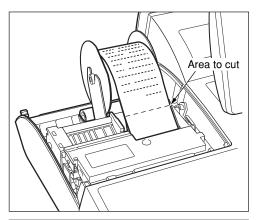


- **1.** Remove the printer cover.
- **2.** Press the key to advance the journal paper until its printed part is out of the way.
- 3. Cut the paper and remove the take-up spool.

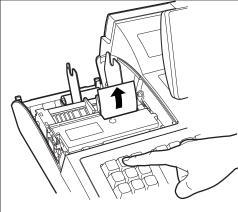


- **4.** Cut the paper behind the printer and near the paper roll.
- **5.** Press the key until the paper remaining in the printer comes out completely.
- 6. Remove the paper roll from the back of the printer.

NOTE Do not pull the paper through the printer.

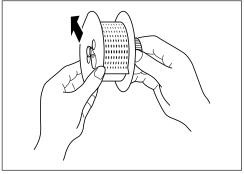

7. Remove the outer side of the take-up spool as shown on the left.

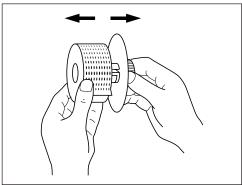

8. Remove the printed journal roll from the take-up spool.

■ Prevention of paper jams

Keep the following points in mind to prevent paper jams.

- Do not touch the receipt while it is being printed.
- Cut off the receipt after the printing is finished. You hear the cutter sound when the printing is finished.
- Pulling the receipt during the printing may cause paper jams.


How to pull the receipt paper after the printing

How to pull the receipt (Correct)




Pull the receipt paper obliquely upward from behind holding the middle of its side.

How to pull the short receipt (Correct)

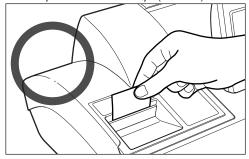


In case the receipt is short, always cut if off after the printing is finished.

How to pull the receipt (Incorrect)

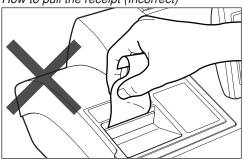

Do not press the receipt paper from above or hold it in the way so that it is squashed. This may result in a paper jam.


How to pull the receipt (Incorrect)

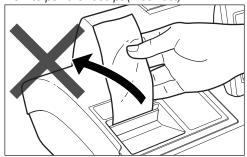


Do not pull the receipt paper (obliquely) rightward or leftward. This may result in a paper jam.

■ Removing a paper jam

Precaution: Be very careful with the cutter, so as not to cut yourself. Never touch the print head immediately after printing, because the head may still be hot.

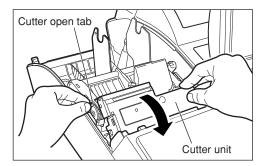


- **1.** Remove the printer cover.
- **2.** Remove the receipt paper, and if the paper jam is at the journal paper, remove the journal paper, too.
- 3. While pushing the cutter open tab, pull up the cutter unit.

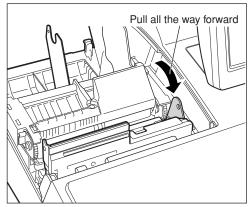


- 4. Pull the print head release lever all the way forward (after it stops at one position, continue pulling forward until it stops again and cannot be pulled forward any further).
- **5.** Remove the paper jam. Check for and remove any shreds of paper that may remain in the printer.
- Return the print head release lever to its original position.
- **7.** Return the cutter unit to its original position. Make sure the metal part is surely hooked to the cutter open tab.
- **8.** Reset the paper roll(s) correctly by following the steps in "Installing the paper roll".
- **9.** Replace the printer cover.

Cleaning the Print Head

When the printed text is getting dark or faint, paper dust may be stuck to the print head. Clean the print head as follows:

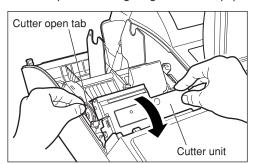

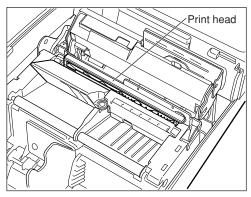

- 1. Select the OFF mode.
- **2.** Remove the printer cover.
- 3. Remove the paper roll(s).
- 4. While pushing the cutter open tab, pull up the cutter unit.
- 5. Pull the print head release lever all the way forward (after it stops at one position, continue pulling forward until it stops again and cannot be pulled forward any further).
- **6.** Clean the print head with a soft rag moistened with ethyl alcohol or isopropyl alcohol.
- 7. Return the print head release lever to its original position immediately after cleaning.
- **8.** Return the cutter unit to its original position. Make sure the metal part is surely hooked to the cutter open tab.
- **9.** Reset the paper roll(s) correctly by following the step in "Installing the paper roll".
- **10.** Replace the printer cover.

Precautions:

Never touch the print head with a tool or anything hard as it may damage the head.

Before Calling for Service

The malfunctions shown in the left-hand column below, labeled "Fault," do not necessarily indicate functional faults of the machine. It is therefore advisable to refer to the "Checking" shown in the right-hand column before calling for service.

Fault	Checking
The display does not illuminate.	 Is power supplied to the electric outlet? Is the power cord plug out or loosely connected to the electrical outlet? Is the power switch in the "ON" position? Is the terminal in screen-save mode?
The display is illuminated, but the whole machine refuses entries.	Is a cashier code assigned to the POS terminal?Is a clerk code assigned to the POS terminal?Is the POS terminal in the REG mode?
No receipt is issued.	 Is the receipt paper roll properly installed? Is there a paper jam? Is the receipt function in the "OFF" status? Is the print head release lever at the printing position?
No journal paper is taken up.	Is the take-up spool installed on the bearing properly?Is there a paper jam?
Printing is unusual.	 Is the print head release lever at the printing position? Is the paper roll properly installed?

17 Options

List of Options

For your UP-820N POS terminal, the following options are available:

For details, contact your authorized SHARP dealer. Do not try to install any options yourself.

- 1. External printer model TM-T88III/T88IV, TM-U220/230 or TM-U295*
- 2. Remote customer display model UP-P20DPB
- 3. Remote drawer model ER-03DWB4/05DWB5
- 4. Remote coin case model ER-48CC2, ER-48CC3 or ER-58CC
- 5. Remote coin case cover model ER-01CV1-5, ER-02CV1-5 or ER-03CV
- 6. RAM memory board model UP-S04MB2
- 7. Magnetic card reader model UP-E13MR3
- 8. Contactless clerk keys model UP-R10CL2
- 9. Contactless clerk switch (body) model UP-R01CK
- * The external printer TM series are not SHARP products.

18 Specifications

Model:	UP-820N		
Dimensions:	349 (W)* x 439 (D) x 261 (H) mm	* Including the touch panel.	
Weight:	7.4 kg		
Power source:	Official (nominal) voltage and frequency		
Power consumption: Stand-by: 31W (When the official voltage is 230 to 240V, 50Hz) Operating: 66W (max.) (When the official voltage is 230 to 240V, 50Hz)			
Working temperatures:	0 to 40 °C		
Electronics:	LSI (CPU) etc.		
Built-in battery:	Rechargeable battery pack, memory built-in battery pack, at 25 °C)	holding time of about 1 month (with fully charged	
Display:	Operator display: Customer display:	Color LCD module and Touch panel 400 (W) X 240 (H) (dots) 7-segment display (7 positions)	
Printer:	Type: Printing speed: Printing capacity: Other functions:	2-station thermal printer Max. 17.3 lines/second 30 digits for receipt paper Graphic logo printing function Logo message function Receipt (ON-OFF) function Receipt paper feed function	
Paper roll:	Width: 57.5 ± 0.5 mm Max. diam.: 80 mm Quality: High quality (0.06 to 0.08 m	m thickness)	
Accessories:	Basic User Manual Paper roll Take-up spool	1 copy 2 1	

^{*} Specifications and appearance subject to change without notice for improvement.
For additional information about SHARP cash registers and POS systems, please visit our website: www.sharp.co.uk (only for the United Kingdom), www.sharp.net.au (only for Australia)

(6 0891

Hereby SHARP CORPORATION declares that this CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ and BODY Model: RUNTZ3845RCZZ) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

SHARP CORPORATION vakuuttaa täten että CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ ja BODY Model: RUNTZ3845RCZZ) tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Hierbij verklaart SHARP CORPORATION dat het toestel CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ en BODY Model: RUNTZ3845RCZZ) in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Par la présente SHARP CORPORATION déclare que l'appareil CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ et BODY Model: RUNTZ3845RCZZ) est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Härmed intygar SHARP CORPORATION att denna CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ och BODY Model: RUNTZ3845RCZZ) står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Undertegnede SHARP CORPORATION erklærer herved, at følgende udstyr CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ og BODY Model: RUNTZ3845RCZZ) overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiermit erklärt SHARP CORPORATION, dass sich das Gerät CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ und BODY Model: RUNTZ3845RCZZ) in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

ME THN ΠΑΡΟΥΣΑ SHARP CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ KAI BODY Model: RUNTZ3845RCZZ) ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Con la presente SHARP CORPORATION dichiara che questo CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ ed BODY Model: RUNTZ3845RCZZ) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Por medio de la presente, SHARP CORPORATION declara que el CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ y BODY Model: RUNTZ3845RCZZ) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

SHARP CORPORATION declara que este CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ e BODY Model: RUNTZ3845RCZZ) está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Hér með lýsir SHARP CORPORATION yfir því að CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ og BODY Model: RUNTZ3845RCZZ) er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

SHARP CORPORATION erklærer herved at utstyret CONTACTLESS CLERK KEY UNIT (KEY Model: RUNTZ3844RCZZ og BODY Model: RUNTZ3845RCZZ) er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

According to article 6 (3) of the directive 99/5/EC this manual contains a declaration of conformity for the "Contactless Clerk Key & Key Body", which is mounted in this POS terminal.

Gemäß Artikel 6 (3) der Direktive 99/5/EG beinhaltet diese Bedienungsanleitung eine Konformitätserklärung für den in diesem POS-Kassenterminal eingebauten "Contactless Clerk Key & Key Body".

Selon l'article 6 (3) de la directive 99/5/CE, ce manuel contient la déclaration de conformité de "Contactless Clerk Key & Key Body" qui sont montés sur ce Terminal de Point de Vente.

Según el artículo 6 (3) de la directiva 99/5/CE, este manual contiene una declaración de conformidad para "Contactless Clerk Key & Key Body" que están montadas en este terminal POS.

No. 009 05 2007

SHARP

Declaration of Conformity

EG-Konformitätserklärung Déclaration de Conformité



Manufacturer:

SHARP Electronics (Europe) GmbH

Hersteller: Producteur:

Address:

Sonninstraße 3, 20097 Hamburg, Germany

Sonninstraße 3, 20097 Hamburg, Deutschland Sonninstraße 3, 20097 Hamburg, L'Allemagne Anschrift: Adresse: Product Description: Contactless Clerk Key Unit

Produktbezeichnung: Contactless Clerk Key Body Contactless Clerk Key Descriptif du produit:

RUNTZ3844RCZZ RUNTZ3845RCZZ

The object of the declaration described above is in conformity with the requirements of the following documents:

Das oben beschriebene Produkt ist konform mit den Anforderungen der folgenden Dokumente:

L'objet de cette déclaration est en conformité avec les exigences des documents suivants:

Council Directive on the approximation of the laws of the Member States 1999/5/EC 1999/5/EG

Richtlinie des Rates zur Angleichung der Rechtvorschriften der Mitgliedsstaaten Directive du Conseil concernant le rapprochement des législations des États membres

Conformity to the Directives is assured through the application of the following standards: Die Konformität wird nachgewiesen durch Einhaltung der folgenden Normen:

La conformité aux directives est assurée par les normes suivantes:

Reference number: Edition Referenznummer: Ausgabedatum Numéro de référence : Edition EN 300 330-2 V1.3.1 EN 300 330-1 V1.5.1

Reference number: Edition Referenznummer: Ausgabedatum Numéro de référence : Edition EN 301 489-01 V1.6.1 EN 301 489-03 V1.4.1

Place:

Ort:

Lieu:

Hamburg

EN 50371:2002

The following Notified Body with ID No. 0891 is involved:

TRL COMPLIANCE LTD.

Long Green Forthamton Glos GL19 4QH UK

CE marking: 2007 CE-Kennzeichnung:

Marquage CE:

21.05.2007 Date:

Datum:

Date:

Signature

Michael Brozek

Unterschrift Signature Name:

Nom:

Director Customer Service Europe Position:

Funktion: Fonction:

FOR CUSTOMERS IN U.K. -

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

BLUE: Neutral BROWN: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured black.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured red.

The apparatus must be protected by a 3A fuse in the mains plug or distribution board.

CAUTION: DO NOT CONNECT THE LIVE (BROWN) WIRE OR THE NEUTRAL (BLUE) WIRE TO THE EARTH TERMINAL OF YOUR 3-PIN MAINS PLUG.

Environment Protection

The device is supported by a battery. To dispose the battery safely to protect the environment, please note the following points:

- Take the used battery to your local waste depot, dealer or customer service centre for recycling.
- Do not throw the used battery into fire, into water or into the household waste!

SHARP

SHARP ELECTRONICS (Europe) GmbH

Sonninstraße 3, D-20097 Hamburg

SHARP CORPORATION